Colorlight

LEDSetting

User Manual V1.7

Revision History

No.	Version	Date	Author	Description
1	1.0	2023.03.30	Chen Rui, Jiang Min	Initial release
2	1.2	2023.09.20	Jiang Min	Revisions & Updates
3	1.6	2024.04.29	Jiang Min	Revisions & Updates
4	1.7	2025.03.20	Luo Xiaoyu	Revisions & Updates

Contents

1. Overview	1
1.1 Runtime Environment	1
1.2 Software Installation	1
2. Quick Start	4
2.1 Device Detection	4
2.2 Configure Sender	4
2.3 Configure Receiver Parameters	5
2.4 Configure Receiver Mapping	
3. Main Interface	7
4. Device Information	11
5. Display Settings	14
6. Screen Configuration	19
6.1 Device Information	19
6.2 Sender Settings	19
6.2.1 Video Source	20
6.2.2 Control Area	27
6.2.3 Brightness & Color Temperature	28
6.2.4 Freeze & Blackout	28
6.2.5 Network	28
6.2.6 Art-Net	29
6.2.7 HDR	29
6.2.8 Precise Color Management	30
6.2.9 Other	30
6.3 Receiver Parameters	32
6.3.1 Basic Parameters	32

6.3.2 Driver & Decoder IC	46
6.3.3 Gamma Adjustment	47
6.3.4 Calibration Settings	55
6.3.5 Display Adjustment	62
6.3.6 Other Settings	63
6.3.7 Intelligent Settings	65
6.3.8 Function Button	82
6.4 Connecting a Display	
6.4.1 Device Management Area	
6.4.2 Standard	
6.4.3 Complex	95
7. LEDTester	98
8. Pixel-by-pixel Calibration	
8.1 Quick Operations	107
8.1.1 Brightness/Chroma Calibration	107
8.1.2 Gradient Adjustment	
8.1.3 Deseam	110
8.2 Brightness Calibration	
8.2.1 By Pixel	111
8.2.2 By Receiver	120
8.2.3 Deseam	123
8.3 Chroma Calibration	125
8.3.1 Color Gamut Adjustment	125
8.3.2 Batch Adjustment	128
8.4 Special Calibration	132
8.4.1 Double Layer Calibration	132
8.4.2 Chip Low Brightness Calibration	134
8.4.3 Coefficient Backup	134
8.4.4 Sender Cascading Calibration	135
9. Multi-function Card	137

9.1 Sensor Information	137
9.2 Relay Control	138
9.3 Auto Brightness Adjustment	140
9.4 Troubleshooting	141
10. Monitor	144
10.1 Toolbar	145
10.2 Monitor Preview Area	145
10.3 Monitoring Settings	
10.4 View History Exceptions and Email Log	149
11. Smart Module	151
11.1 Screen Connection	151
11.2 Basic Information	
11.3 Electronic Label	153
12. Pixel-by-Pixel Detection	155
13. Prestored Image	156
13.1 Prestore Screenshot	156
13.2 Picture Processing	158
14. 3D Function Box	160
15. Timing Command	161
16. Advanced Deseam	163
17. Module Coefficient Matching	166
18. Player Mode	168

1. Overview

The LEDSetting software is compatible with the full range of Colorlight devices, supporting multiple types of screens, driver ICs, and screen configurations. It enables manual calibration for LED displays and seamlessly integrates calibration data from third-party professional calibration devices.

1.1 Runtime Environment

Environment		Configuration	
System Supported		Windows	
System Version		Windows11, Windows10, Windows7, Windows Server	
	Processor	Intel Core i5, AMD FX-6350 or later	
De se mana en de d	Running	ACD DAM or make	
Recommended	Memory	4GB RAM or more	
Configuration	Graphics	NIVIDIA CoForce CT 720 ATI Dadoon LID 7720 or later	
	Card	NVIDIA GeForce GT 730, ATI Radeon HD 7730 or later	

Table 1-1 Runtime Environment

1.2 Software Installation

Software Installation

Step 1: To download LEDVISION from the official website of Colorlight, go to https://www.lednets.com/product/download/381.

Step 2: Double-click LEDVISION_Setup.exe to begin setup wizard.

Step 3: Follow the setup wizard and select the I accept: Software agreements checkbox. Then choose Quick Installation or Customize.

Quick Installation

Click the **Quick Installation** button and the software will be installed to the path by default: C:\Program Files (x86)\ColorLight, as shown in Fig 1.2.1.



Fig 1.2.1 Quick installation

Custom Installation

Step 1: In the installation interface, click **Customize** and choose a path you desired for installation. Then click **Install** to continue, as shown in Fig 1.2.2.



Fig 1.2.2 Custom installation

Step 2: Installation is completed as shown in Fig 1.2.3. After a successful installation, LEDVISION and LEDSetting shortcuts are created on the desktop. LEDVISION is the playback software and LEDSetting is the control software.

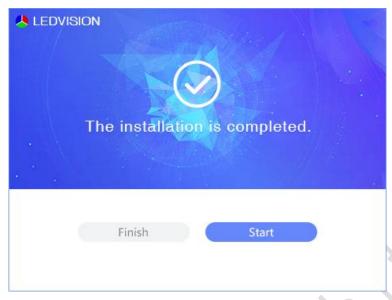


Fig 1.2.3 Installation completion

Software Uninstall

Right-click the LEDSetting shortcut, then select **Open File Location** to open the installation path and double-click **open path** uninstall LEDSetting.

2. Quick Start

2.1 Device Detection

Step 1: Cabinets should be connected to the optical fiber transceiver via an Ethernet cable. The optical fiber transceiver and sender are connected with a fiber optic cable. Then connect the sender to the computer through a USB cable, as shown in Fig 2.1.1.

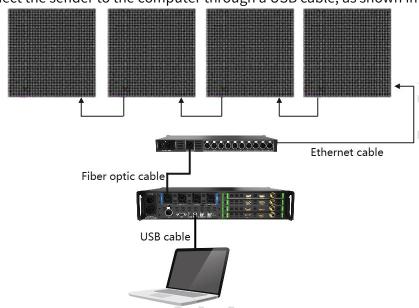


Fig 2.1.1 Device connection topology

Step 2: Open LEDSetting and double-click **Screen Configuration**, then enter the authorized password to access **Screen Configuration** > **Device Information**.

Step 3: Click the **Detect Device** button for device information.

2.2 Configure Sender

- Step 1: Click **Sender Settings** to switch to the **Sender Settings** tab.
- Step 2: Modify the canvas size to match the resolution of the input signal.
- Step 3: Select the signal source to be displayed, then drag it to the canvas for normal display, as shown in Fig 2.2.1.

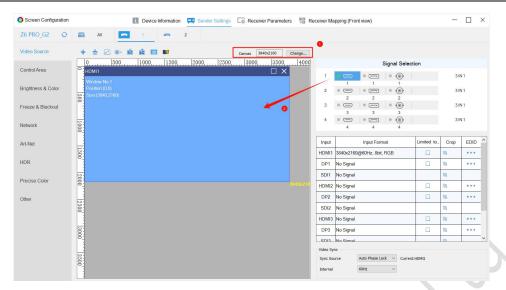


Fig 2.2.1 Video source

2.3 Configure Receiver Parameters

- Step 1: Click Receiver Parameters to switch to the Receiver Parameters tab.
- Step 2: Click **Load···** or **Intelligent Settings** to configure receiver card parameters.
- Step 3: After the parameters are configured, click **Save to Receiver** to save the parameters to the receiver cards, as shown in Fig 2.3.1.

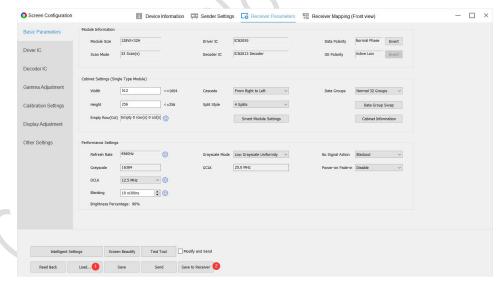


Fig 2.3.1 Save receiver parameters

2.4 Configure Receiver Mapping

- Step 1: Click **Receiver Mapping** to access the **Receiver Mapping** tab.
- Step 2: Configure **Receiver Count** and **Selected Receiver Info** according to the number and size of the cabinets.

Step 3: Select the corresponding Ethernet port and set the cabinet mapping according to the number of cabinets and the physical connections under each Ethernet port, as shown in Fig 2.4.1.

Step 4: Save the current mapping to the receiver card and light up the LED screen.

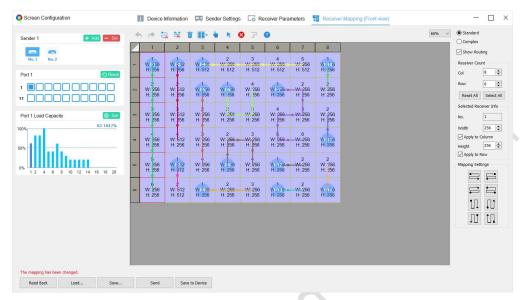


Fig 2.4.1 Cabinet mapping settings

3. Main Interface

The main interface consists of 3 parts: title bar, device bar and function entrance.

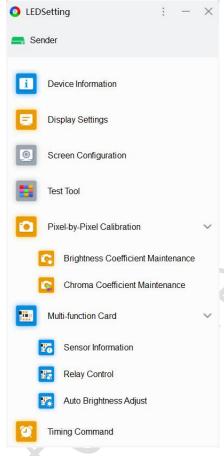


Fig 3.1 Main interface

Title Bar

The title bar includes software logo, software name, bubble tips, settings menu (Language, Software Settings, Software Section, User Manual, About), minimize button, and close button.



Fig 3.2 Title bar

• Bubble tips: A bubble will pop up when an error occurs with the sender. Hover the mouse over the bubble to view the tips.

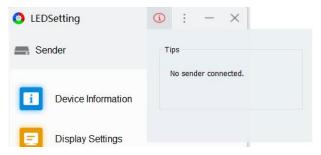


Fig 3.3 Bubble tips

Bubble tips for sender abnormality are shown in Table 3-1.

Abnormalities	Tips	
Sender is offline.	No sender connected.	
Sender brightness is 0.	The current brightness value of the sender is 0.	
Sender enabled the	The LED course is seen their Black at the leavest of the leavest o	
screen blackout.	The LED screen is currently in Blackout mode.	
Sender enabled the		
freeze mode.	The LED screen is currently in Freeze mode.	
Sender enabled the	The condense comment to be blocked as the control	
blackout test pattern.	The sender is currently in blackout test pattern.	

Table 3-1 Summary of bubble tips

- Software Settings: You can modify the software theme and general settings of the software.
 - Software Theme: Modify the theme color of the main interface. Support Light, Warm and Dark.



Fig 3.4 Software theme

■ **General**: Set the temperature display format and password memory time.



Fig 3.5 General settings

◆ Show Temperature in Fahrenheit: Select to display the temperature in

Fahrenheit (°F). Otherwise, the temperature is displayed in Celsius (°C).

◆ Common Password Memory Time: After entering the password, you don't need to input the authorized password again to operate the software within the memory time.

• Software Section: Configure the status and order of the modules in the main interface.

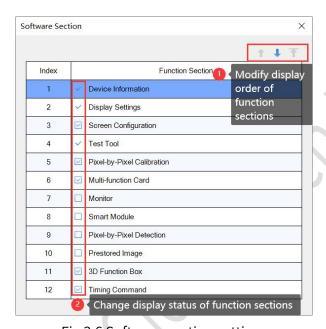


Fig 3.6 Software section settings

- Module order adjustment: To change the display order, select a module, then click ↑ to move it up, ↓ to move it down, or ↑ to move it to the top.
- Default modules: 7 modules are selected by default, including **Device** Information, Display Settings, Screen Configuration, Test Tool, Pixel-by-pixel Calibration, Multi-function Card, and Timing Command.
- Module display status modification: Select the checkbox next to a module to display it in the main interface. Deselect it to hide the module.

Device Bar

- Mode: Display the current sending mode of the software. The Sender icon indicates sender mode, and the Player icon indicates player mode.
- Device status
 - Online status: The current device is in normal connection, and the sender/player icon is green.

Colorlight LEDSetting User Manual

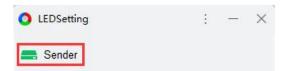


Fig 3.7 Online status

■ Offline status: The current device is in an abnormal connection, and the sender/player icon is gray.

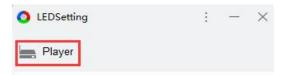


Fig 3.8 Offline status

Module Entries

- 7 common modules are displayed by default, and the display status of other module entries needs to be configured in **Software Module**.
- Click a module to open its secondary module or select it.
- Double-click a module to enter its corresponding function interface.
- If you switch the sending mode, the function entries will be changed accordingly.

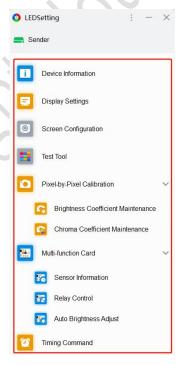


Fig 3.9 Function entries

4. Device Information

This feature is mainly used to detect sender and receiver card information, which are displayed on the left and right side of the panel respectively.

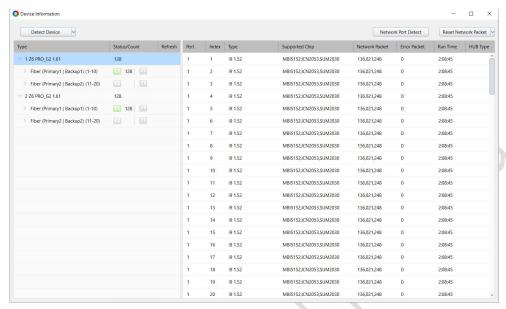


Fig 4.1 Device information interface

- Detect Device: Click Detect Device to detect all senders and receiver card information of selected senders.
 - Device cascading: When you want to cascade multiple senders, right-click the Detect Device button to show the All Devices and Sender Only options. Select Sender Only to display only sender information in the list.

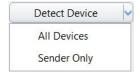


Fig 4.2 Detect senders

• Reset Network Packet: Click the Reset Network Packet button to reset the network packets and error packets of the receiver card. Right-click Reset Network Packet to show the reset network packet extension.

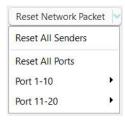


Fig 4.3 Reset network packets extension

- Reset All Senders: Reset the Network Packets and Error Packet for all receiver cards.
- Reset All Ports: Reset the Network Packets and Error Packet of all receiver cards under the selected Senders.
- Port: Select a network port and reset the Network Packets and Error Packet of all receiver cards under this port.

Sender List

The Sender information bar displays the buttons of Type, Status/Count, and Refresh.



Fig 4.4 Sender list

- Type: It displays the index, type, and version of the sender.
 - Click the sender type button to display the network ports under the sender.
 - Version Detail: Hover the mouse over the sender type to display ①, and click the button to open the **Version Detail** dialog box for the program version information.
- Status/Count: It shows the number of all receiver cards under the device. Network port icon and optical fiber transceiver icon show the connection status. Icons in green indicate normal connection and in gray indicate disconnection.
- **Refresh**: Hover the mouse over the sender, optical fiber transceiver, and network port, then button will be displayed in the **Refresh** column.
 - **Sender**: Click to re-detect all receiver cards under this sender.
 - Optical Fiber Transceiver: Click to re-detect the receiver cards under the current optical optic transceiver.
 - **Network Port**: Click to re-detect the receiver cards under the current network port.

Receiver Card List

The receiver card information column displays **Port**, **Index**, **Type**, **Supported Chip**, **Network Packets**, **Error Packets**, **Run Time**, and **HUB Type**.

Port	Index	Туре	Supported Chip	Network Packet	Error Packet	Run Time	HUB Type
1	1	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	2	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	3	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	4	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	5	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	6	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	7	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	8	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	9	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	10	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	11	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	
1	12	i9 1.52	MBI5152,ICN2053,SUM2030	0	0	2:10:48	

Fig 4.5 Receiver card list

A list of receiver card information is shown in Table 4-1.

Field	Description
Dout	Display the index of the network ports where the receiver cards are
Port	connected.
Index	Display the physical connection number of the receiver cards.
Туре	Display the receiver card type and FPGA program version.
Supported	Display the type of driver chip supported by the receiver card
Chip	program.
Network	Display the number of network packets generated by the
Packets	communication of receiver cards.
Error	Display the number of error packets generated by the communication
Packets	of receiver cards.
Run Time	Display the time the receiver card has been running continuously.
HUB Type	Display the HUB type of the receiver cards.

Table 4-1 Receiver card list information

13

5. Display Settings

Configure the sender parameters to adjust the LED screen display.

Brightness & Color Temperature

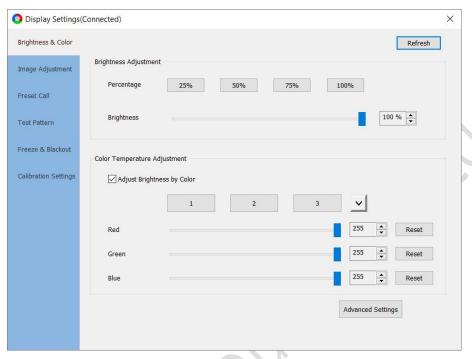


Fig 5.1 Brightness & Color temperature

- Brightness Adjustment: Configure the brightness parameters to adjust the LED screen brightness.
 - Percentage: Quickly adjust the screen to the specified brightness.
- Color Temperature Adjustment: Configure color temperature parameters to adjust the color temperature of LED screen.
 - Adjust Brightness by Color: Check to adjust the color temperature by red, green, or blue.
 - Color Temperature: Check to adjust the color temperature of the screen by dragging the slider or clicking the spin button 🕏 with your mouse.
- Advanced Settings: Click to open the Advanced Settings dialog box.
 - Adjust the brightness and color temperature for single or multiple devices.
 - Click Adjustment Brightness by Port to adjust the brightness of each output port under the sender independently.

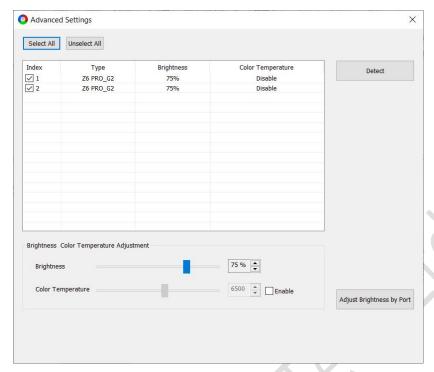


Fig 5.2 Advanced settings

- Select All: All devices in the list will be selected.
- Unselect All: No devices in the list will be selected.

The list items of the **Advanced Settings** interface are described in Table 5-1 below.

Field	Description
Index	The physical connection order of the senders.
Туре	Display the sender type and version.
Brightness	Display the brightness value of the sender.
Color	Before Color Temperature is enabled, Disable is displayed; after it is
Temperature	enabled, the color temperature value of the sender is displayed.

Table 5-1 Field description

- Detect: Detect all senders.
- Brightness & Color Temperature Adjustment: Adjust the brightness value and color temperature of the selected sender.
- Adjust Brightness by Port: After grouping the ports, adjust the brightness of the groups independently.

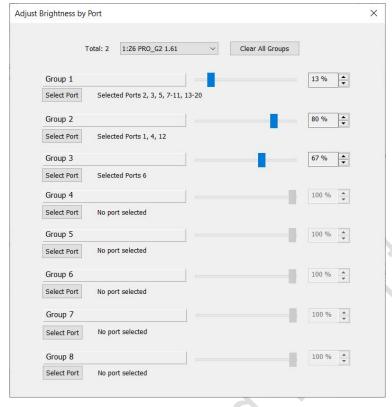


Fig 5.3 Adjust brightness by port

Image Adjustment

Select to adjust the **Hue**, **Saturation**, **Brightness Compensation**, and **Contrast** parameters by dragging the slider with the mouse, clicking the spin button \diamondsuit , or modifying the values in the fields.

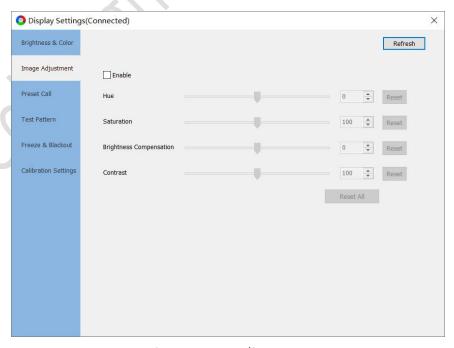


Fig 5.4 Image adjustment

- **Reset**: Reset the corresponding parameters to defaults.
- Reset All: Reset all parameters to defaults.

Preset Call

Click to call the presets of the sender.

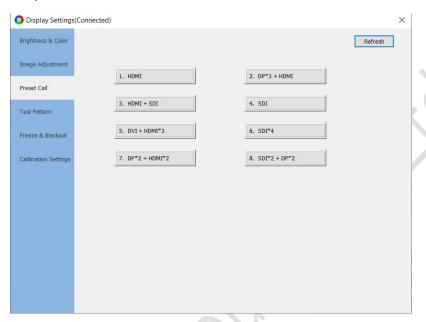


Fig 5.5 Preset call

Test Pattern

You can set different test modes according to your needs. View the display effects of LED screen with **Test Pattern** to test and diagnose the screen.

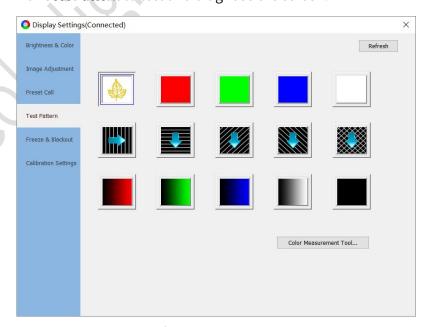


Fig 5.6 Test pattern

Freeze & Blackout

Freeze or black out the senders output screen.

- Freeze: Click Freeze to display the last frame.
- Blackout: Click Blackout to black out the LED screen.

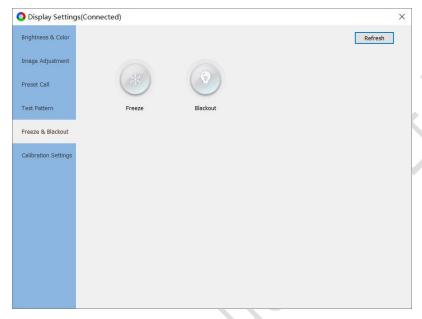


Fig 5.7 Freeze & Blackout

Calibration settings

Set Calibration Mode (**Disable**, **Brightness**, **Chroma**) and Calibration Source (**Receiver**, **Module**).

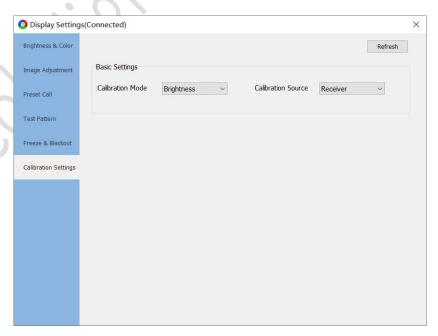


Fig 5.8 Calibration settings

6. Screen Configuration

The Screen Configuration interface includes 4 tabs: **Device Information**, **Sender Settings**, **Receiver Parameters**, and **Receiver Mapping (Front view)**.

6.1 Device Information

Display information of all devices connected.

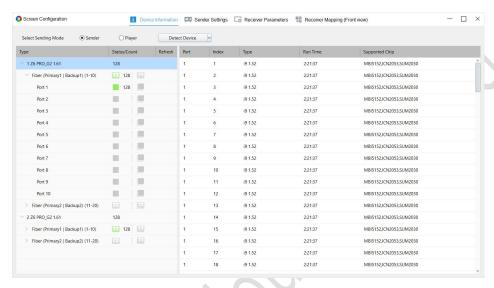


Fig 6.1.1 Device information

- Sender: Detect and control the sender.
- Player: Detect and control the player.
- Detect Device: Click the Detect Device button to show the connected device information in the list.
- List: The left panel shows the sender/player information, and the right panel shows the receiver card information.

6.2 Sender Settings

Set up the connected sender. When it is not connected, you can simulate the device and view the simulation interface of the device.

The sender settings interface is divided into two parts: **Device bar** and **Function menu**.

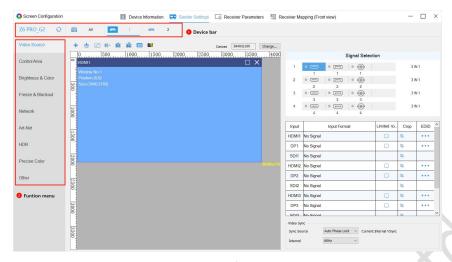


Fig 6.2.1 Sender settings

- Device bar: It displays the device type and index. Switch between indexes to configure different devices individually. When cascading multiple devices, switch to the **All** tab to configure all devices simultaneously.
 - All: It includes 4 function menus, including Video Source, Brightness & Color, Freeze & Blackout, and Other. The actual menus available may vary depending on the device.
 - ♦ Video Source: The left panel shows the signal window of the device, while the right panel shows the device's preset list.
 - ❖ Brightness & Color, Freeze & Blackout, and Other: These 3 items display information of the first device correspondingly. Any configuration will apply to all cascaded devices in real time.
- $\stackrel{\textstyle \sim}{\sim}$: Click to re-detect senders and refresh the **Sender Settings** interface.
- Function menu: It displays the functions supported by the connected devices. Take Z6PRO_G2 as an example.

6.2.1 Video Source

The video source setup interface includes toolbar, canvas area, and right panel.

Toolbar

The toolbar contains Add Window, Delete All Window(s), Resize, Guide Line, Save as Presets, Preset Management, 3D Settings, Image Adjustment, and Change (Canvas Size).

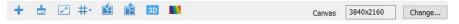


Fig 6.2.1.1 Toolbar

• Add Window: Click the + button to add a signal window to the canvas area.



Fig 6.2.1.2 Add signal window

- Delete All Window(s): Click the button to clear all signal windows in the canvas area.
- Set Window Size: Click the button to pop up the Resize window to set the starting position (X & Y coordinates), Width, and Height for the selected signal window.



Fig 6.2.1.3 Set window size

• Guide Line: It is used to guide the layout of signal windows. Click # to show the drop-down menu, then add, modify, or delete the guide lines.



Fig 6.2.1.4 Set guide line

The guide line functions are described in detail in Table 6.2.1-1.

Feature	Description
Enable Cuide Line(s)	When selected, the guide lines are shown; when unselected,
Enable Guide Line(s)	the guide lines are hidden.
Add Horizontal Guide	When selected, you can add horizontal guide lines to the
Line	canvas.
Add Vertical Guide	When selected, you can add vertical guide lines to the
Line	canvas.
Set Position of Guide	Modify the position of the selected guide line.

Colorlight LEDSetting User Manual

Line Selected			
Delete	Guide	Line	Delete the colocted guide lines
Selected			Delete the selected guide lines.
Delete	All	Guide	Delete all guide lines in the conves
Line(s)			Delete all guide lines in the canvas.

Table 6.2.1-1 Guide line functions

• Save as Presets: Click ito open the drop-down menu and save the preset to the sender.

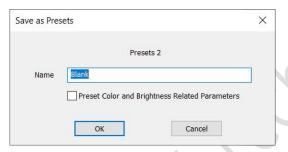


Fig 6.2.1.5 Save as presets

• Preset Management: Click is to open the Preset Management window, then click to load preset parameters.



Fig 6.2.1.6 Preset management

•3D Settings: Click the 3D button to enter the 3D settings interface. After selecting Enable 3D, the output image will be more three-dimensional and real. However, the total output capacity will reduce by half.

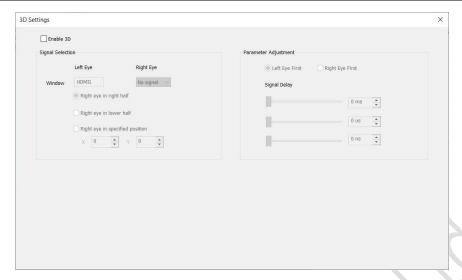


Fig 6.2.1.7 3D settings

• Image Adjustment: Click to open the Image Adjustment dialog box, then you can adjust the screen display effects by adjusting the parameters.



Fig 6.2.1.8 Image adjustment

• Change Canvas Size: The field shows the current size of the canvas. Click the OK button to change the canvas size.

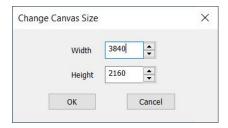


Fig 6.2.1.9 Change canvas size

Right Panel

The right panel is divided into 3 sections: **Signal Selection**, Signal list, and **Video Sync.**

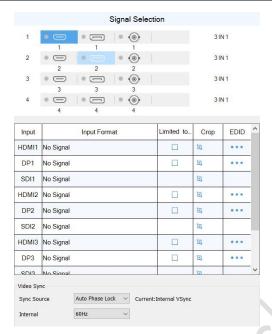


Fig 6.2.1.10 Right panel

Signal Selection

It is used for adding and switching the signal windows. It displays the board index, interface type, and board type in sequence.

- Board index: Display the physical location index of the board.
- Interface type: Display all interfaces of the board.
 - Interface status: A green indicator means the signal is connected, while a gray indicator means no signal is detected.
- Board type: Display the board type. It shows **Unconnected** when no board is inserted.



Fig 6.2.1.11 Board type and connection status

• Add signal window: Drag the board interface into the canvas area to add a signal window.

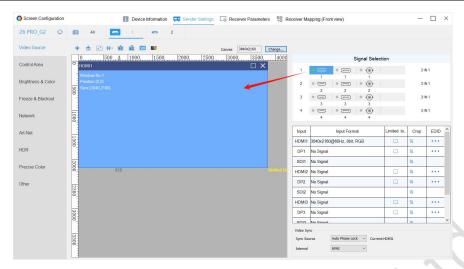


Fig 6.2.1.12 Add and switch between signal windows

Signal List

It represents device interface information, including **Input**, **Video Format**, **Limit to Full**, **Crop**, and **EDID**.

- Input: Show the signal interface type.
- Input Format: Contain resolution @ frame rate, color depth, and color model.
- Limit to Full: When enabled, you can change the color depth of the input signal.
- Crop: Click to open the Crop dialog box. Once enabled, you can set the size and position of the cropping area by dragging the dashed box with the mouse or changing the crop settings.

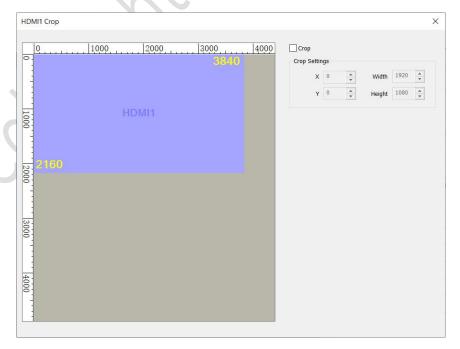


Fig 6.2.1.13 Signal cropping

■ EDID: Click ••• to open the EDID Settings dialog box for preset selection or custom resolution.

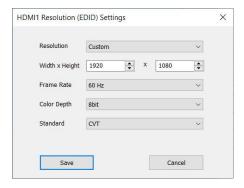


Fig 6.2.1.14 EDID settings

Video Sync

Synchronize the frame rate of the input signals. The frame rate of the LED display will be shown according to **Current Phase Lock**.

- Sync source: Select the Sync Source signal to synchronize the frame rate of the input signals with the frame rate of the Current signal.
- Internal: Modify the frame rate of Internal signal.

Canvas Area

Canvas area displays input signal layout and signal size. It also supports dragging the signal window by mouse to change the position and size of the window.

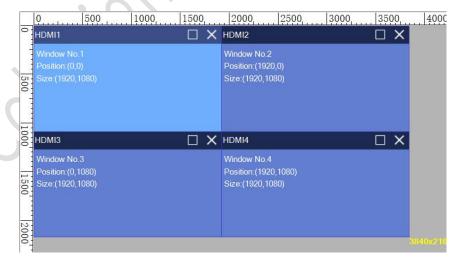


Fig 6.2.1.15 Canvas area

Right-click on the signal window to show the context menu.

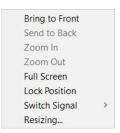


Fig 6.2.1.16 Context menu

The detailed function description of the context menu is shown in Table 6.2.1-2.

Feature	Description
Bring to Front	The selected window layer will be brought to front.
Send to Back The selected window layer will be sent to back.	
Zoom in /out	Zoom in the window to spread it over the guide line area. Zoom
Zoom in/out	out the window to restore the window size.
Full Screen	Spread the window over the canvas area.
Lock Position	Once locked, the window size and position cannot be modified.
Switch Signal	Replace the selected window signal.
Resize	Modify the window size and position.

Table 6.2.1-2 Context menu function

6.2.2 Control Area

This feature is applied to modify the network port control area, which includes view area and list area.

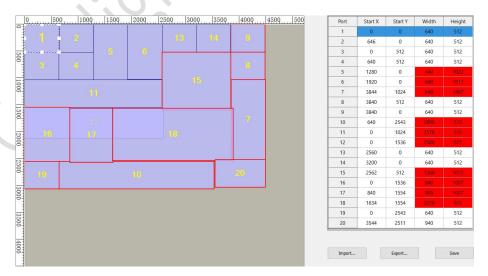


Fig 6.2.2.1 Control area

• View area: It graphically displays the port control area. You can change the position

and size of the control area by drag-and-drop operation.

- List area: It shows the position and size of the port control area. You can modify the position and size of the control area by modifying the parameter in the field.
- Import: Import the local parameter file.
- Export: Export the parameters of port control area as a local file.
- Save: Save the parameters of port control area to the sender.

6.2.3 Brightness & Color Temperature

Change the brightness and color temperature of the sender to adjust the LED display effects.

- Brightness: Adjust the brightness of LED display.
 - Abnormal tips: When the brightness is 0, a pop-up tip will be displayed at the menu bar.



Fig 6.2.3.1 Abnormal tips

• Color temperature: Adjust the color temperature of LED display.

6.2.4 Freeze & Blackout

The sender displays a freeze or blackout screen.

- Freeze: Enable Freeze to display the LED screen at the last frame. A tip will pop up at the menu bar.
- Blackout: Enable Blackout to black out the LED screen. A tip will pop up at the menu bar.



Fig 6.2.4.1 Freeze & Blackout tips

6.2.5 Network

Set the IP address of the sender.

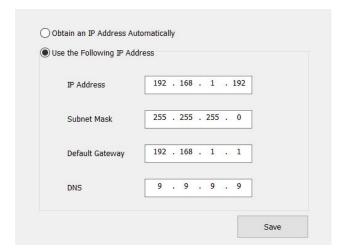


Fig 6.2.5.1 Network settings

- Obtain an IP address automatically: Use the IP address assigned by the DHCP server.
- Use the following IP address: Set the IP Address, Subnet Mask, and Default Gateway
 of the sender.
- DNS: Require sender programs for DNS settings. After configuring settings, you can access other hosts using the domain name.

6.2.6 Art-Net

The Art-Net feature works with a console.



Fig 6.2.6.1 Art-Net settings

6.2.7 HDR

HDR (High Dynamic Range) image provides a higher dynamic range and more image

details.



Fig 6.2.7.1 HDR

6.2.8 Precise Color Management

You can modify the color and brightness information, as well as color space as needed. When **HDR Dynamic Calibration** is enabled, there will be a **Before Calibration** tab.

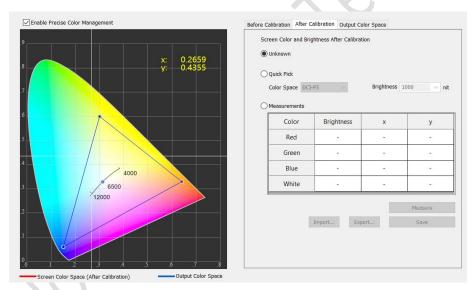


Fig 6.2.8.1 Precise color management

6.2.9 Other

Configure Advanced Parameters, Advanced Functions, and Test Pattern for the sender.

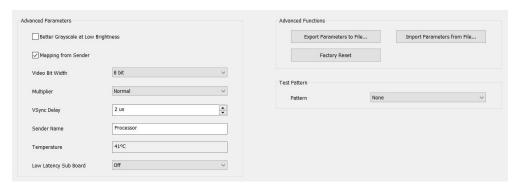


Fig 6.2.9.1 Other settings

Advanced Parameters

- Better Grayscale at Low Brightness: When selected, optimize the screen display effects at low brightness.
- Mapping from Sender: When selected, the mapping from the sender will be applied.
- Video Bit Width: Adjust the color depth from the sender.
- Multiplier: Multiply the frame rate of the input signal.
- VSync Delay: Adjust the delay time of the VSync signal.
- Sender Name: Modify the name displayed on the front panel of the sender.
- Temperature: Display the sender temperature.
- Low Latency Sub Board: Reduce the delay time of video signal from the sub board.



Fig 6.2.9.2 Low latency sub board

Advanced Functions

- Export Parameters to File: Export the sender parameters as a local file.
- Import Parameters from File: Import a local parameter file from the sender.
- Factory Reset: Reset the sender parameters.

Test Pattern

You can set different test patterns according to your needs and view the display effects of LED screen with test patterns to test and diagnose the screen.

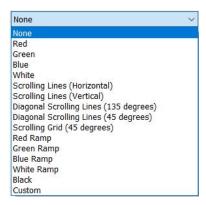


Fig 6.2.9.3 Test pattern

• Abnormal tip: Select the blackout test pattern. A tip will pop up at the menu bar.

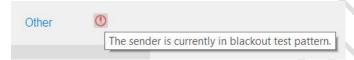


Fig 6.2.9.4 Test modes tips

6.3 Receiver Parameters

Select the Receiver Parameters tab in the Screen Configuration interface to set LED display parameters, including Basic Parameters, Driver IC, Decoder IC, Gamma Adjustment, Calibration Settings, Display Adjustment, and Other Settings.

6.3.1 Basic Parameters

The basic parameters of the receiver card can be configured, including **Module Information**, **Cabinet Settings**, and **Performance Setting**.

Depending on the cabinet construction, the basic parameters of **Module Information** and **Cabinet Settings** can be different. Take the chip set ICN2055 + ICN2013 as an example.

Module Information (Single Type Module)

The module information section displays the basic information of the module.



Fig 6.3.1.1 Module information (single type module)

Function description of module information is shown in Table 6.3.1-1.

Parameters Description	
Module Size	Show the width and height of the module.
Scan Mode	Show the scans of the module.
Driver IC	Show the driver IC of the module.
Decoder IC	Show the decoder IC of the module.
Data Polarity	Set the data polarity of the module.
OE Polarity	Set the OE polarity of the module.

Table 6.3.1-1 Functional description of module information

Cabinet Settings (Single Type Module)

In this section, the basic parameters of the cabinets can be configured.



Fig 6.3.1.2 Cabinet settings (single type module)

- Width & Height: Set the width and height of the cabinets.
- Cascade: Modify the image of cascade direction displayed on the LED screen.



Fig 6.3.1.3 Cascade

• Split Style: Increase the bandwidth by reducing the load height of the receiver card.

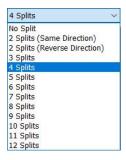


Fig 6.3.1.4 Split style

• Data Groups: Modify the number of data groups from the receiver card.

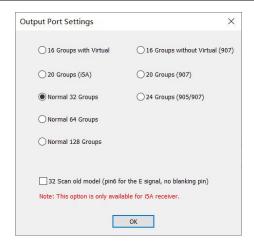


Fig 6.3.1.5 Data groups

• Data Group Swap: Click the Data Group Swap button to open the Data Group Swap dialog box, which supports two modes: Intelligent Mode and Manual Swap.

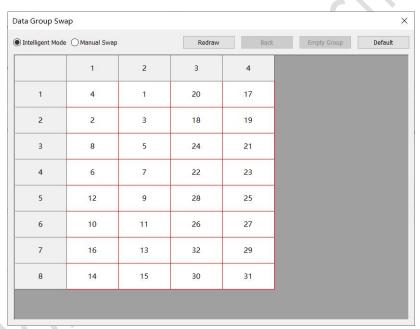


Fig 6.3.1.6 Data group swap

• Smart Group Drawing: Configure the data group location to make the cabinet display normally according to the on-screen instructions.

The description of smart group drawing is shown in Table 6.3.1-2.

Feature	Description	
Drawing Area	Configure the data group index.	
Redraw	Clear the current data group index and redraw the group.	
Back	Click the button to return to the previous step.	
Empty Group	Click the button to skip the current data group index.	

Restore	Deset the data group index	
Defaults	Reset the data group index.	

Table 6.3.1-2 Smart group drawing

 Manual Swap: Manually swap the data group index to achieve the normal display of the cabinets.

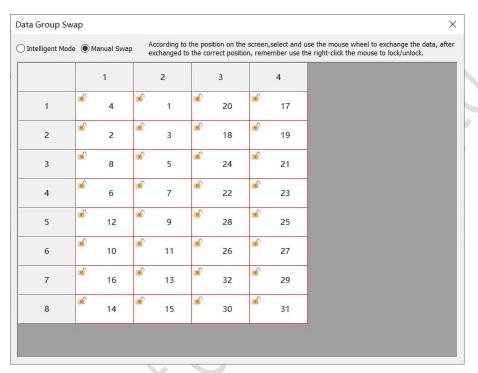


Fig 6.3.1.7 Manual swap settings

The manual swap actions are shown in Table 6.3.1-3.

Action	Description
Right-click	Lock or unlock the data group index.
Click	Select the data group index.
Mausa Wheel	Change the index of the selected data group, and the index of
Mouse Wheel	the locked data group is automatically skipped.

Table 6.3.1-3 Actions of manual swap

- Empty Row/Col: Display the number of empty rows and columns. Click ② to open the Empty Row/Col Settings dialog box, which supports two modes: Normal Empty Row and Custom Empty Row/Col.
- General empty row: Only the empty row is supported.
 - Start Row: Set the start for empty rows.

■ Empty Row Count: Empty regular rows according to the number of rows you set

• Custom Empty Row/Col: Support customizing empty rows and columns.

Quick Start

Step 1: Click the + button to open the **Add** dialog box and set the empty rows and columns according to the actual empty rows and columns position of the cabinets.

Step 2: Modify the width and height of the cabinets, as shown in Fig 6.3.1.8.

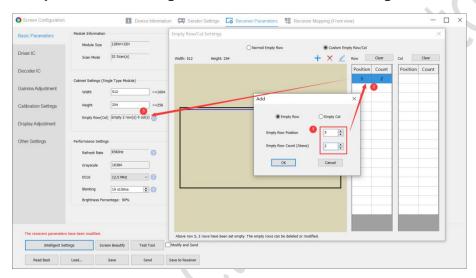


Fig 6.3.1.8 Empty row/col settings

The features of custom empty row/col are shown in Table 6.3.1-4.

Feature	Description	
List	The list displays the empty rows and columns you set.	
View Area	Graphically display the empty rows and columns you set.	
+_	Click to add empty rows and columns.	
×	Click to delete the selected empty rows and columns.	
<u>i</u>	Click to modify the position and number of the selected empty rows	
	and columns.	
Row Clear	Clear the empty rows you set.	
Col Clear	Clear the empty columns you set.	

Table 6.3.1-4 Custom empty row/col

• Smart Module Settings: Click the Smart Module Settings button to open the Smart Module Setting dialog box, which supports two modes: **Default Location** and

Customize Position and Size.

■ **Default Location**: Set module position according to the actual module size.

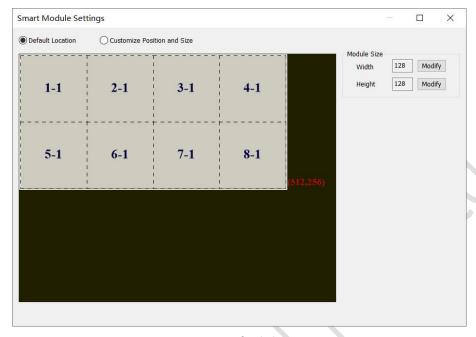


Fig 6.3.1.9 Default location

- ♦ Width: Click Modify to select the width of the module.
- ♦ **Height**: Click **Modify** to select the height of the module.
- Customize Position and Size: Set the position, size, and number of the smart module manually.

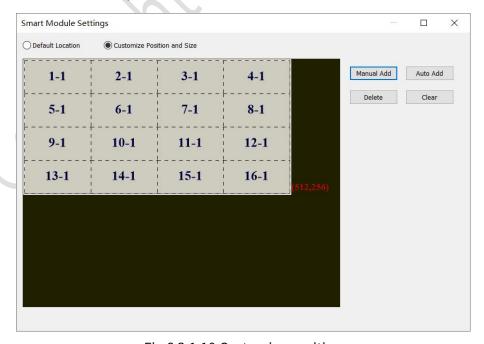


Fig 6.3.1.10 Customize position

Manual Add: Click to open the Add Module Info dialog box. Then, set the Pin Number, Cascade Location, Module Position, and Module Size for modules.

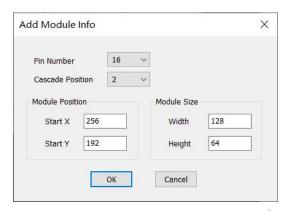


Fig 6.3.1.11 Add module information

- ♦ Auto Add: Copy the module settings from Default Location.
- ♦ **Delete**: Click to delete the selected smart module.
- ♦ Clear: Click to clear all smart modules.
- ♦ Modify: Select a smart module and modify its Pin Number, Cascade Location, Module Position and Module Size on the right side.

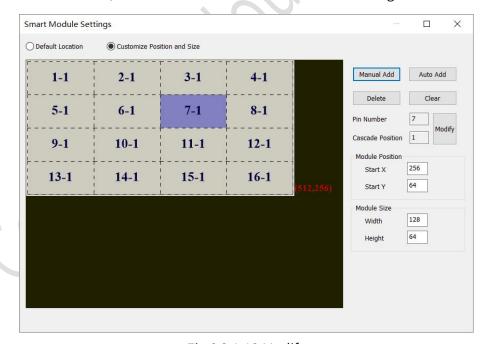


Fig 6.3.1.12 Modify

- View area: Display all the smart modules.
- Cabinet Information: Click to open the corresponding dialog box to set the cabinet information and save it to receiver card.

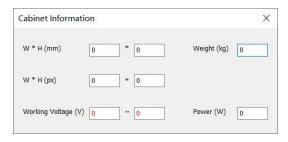


Fig 6.3.1.13 Cabinet information

Module Information (Multi-Type Module)

Switch module types on the right to check module information.



Fig 6.3.1.14 Module Information (Multi-Type Module)

Cabinet Settings (Multi-Type Module)

Configure basic parameters of cabinets.

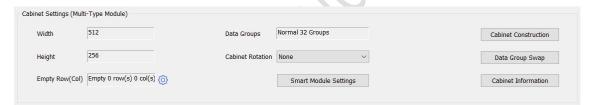


Fig 6.3.1.15 Cabinet Settings (Multi-Type Module)

Cabinet settings features are illustrated in Table 6.3.1-5.

Feature	Description	
Width	Show cabinet width.	
Height	Show cabinet height.	
Data Groups	Show cabinet data groups.	
Cabinet	Display the image after rotating cabinet.	
Rotation		
Cabinet	Click to open the Cabinet Construction dialog box	
Construction	Click to open the Cabinet Construction dialog box.	
Data Group	Click to open the Data Group Swap dialog box.	
Swap	Click to open the Data Group Swap diatog box.	
Empty	Only Custom Empty Row/Col mode is supported.	

Row/Col		
Smart Module		
Settings	Only Customize Position and Size mode is supported.	
Cabinet	Cat askingstinformation and some it to reasing a good	
Information	Set cabinet information and save it to receiver card.	

Table 6.3.1-5 Cabinet settings

- Cabinet Construction: Add modules and set the layout and data group index for the added modules to construct a complete cabinet.
- Quick Start

Step 1: Click the + button and select the module type to add modules and construct the cabinet, as shown in Fig 6.3.1.16.

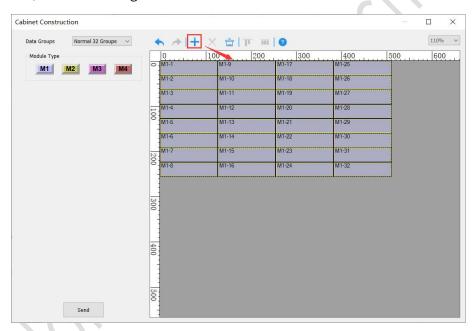


Fig 6.3.1.16 Cabinet Construction

Step 2: Select the modules one by one to number the modules. When finished, click **Send** to complete the cabinet construction, as shown in Fig 6.3.1.17.

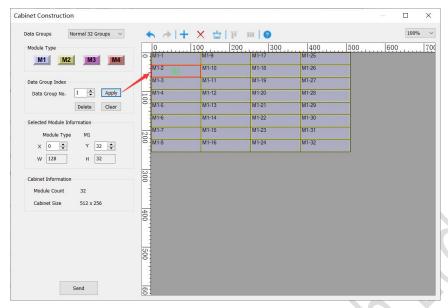


Fig 6.3.1.17 Data group numbering

• Left panel: Support configuring module types, data group numbering, modifying position and size, and viewing cabinet information.



Fig 6.3.1.18 Left panel

- **Data Groups**: Modify the number of data groups from receiver card.
- Module Type: Support adding, deleting, viewing, and editing.

The module type functions are described in Table 6.3.1-6.

Feature		Description
B: 1 . 1: 1	Remark	Rename the remark for the Module Type .
	Import	Import a locally saved module type parameter file.
Right-click module	Export	Export the module type parameter as a local file.
type	View Information	View the selected module type information.
	Delete	Delete the selected module type.
		Configure the module type information, enter Wizard 8,
	Generate	and generate a new module type after the drawing is
Add		finished.
	Import from	Import a locally saved module type parameter file to
	File	generate a new module type.
Double-Click Module		Enter Wizard 8 drawing interface.
Туре		Litter wizard o drawing interface.

Table 6.3.1-6 Module type function

■ **Data Group Index**: Number the data groups of the selected modules.

The data group index functions are described in Table 6.3.1-7.

Feature	Description
Data Group No.	Set the data group index.
Apply	Apply the Data Group No. to the data groups of the selected
Apply	modules.
Clear	Clear the data group indexes of all modules.
Delete	Delete the data group index of the selected modules.

Table 6.3.1-7 Data group numbering

- Selected Module Information: You can view module type, width and height, and position. Change the position of modules by modifying X and Y.
- Cabinet Information: Display the number of modules in the drawing area and cabinet size.
- **Send**: Send the cabinet information to the receiver card.
- Toolbar: Add, delete, and sort modules in the drawing area.

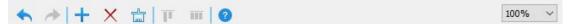


Fig 6.3.1.19 Cabinet construction toolbar

Toolbar function descriptions are shown in Table 6.3.1-8.

Feature	Description	
•	Click to return to the previous step.	
<i>→</i>	Click undo the action in the previous step.	
+	Add a module to the drawing area.	
×	Delete the modules selected in the drawing area.	
	Empty all modules in the drawing area.	
Ψ	Select multiple modules to align the layout of modules.	
III	Select multiple modules to sort the layout of the modules.	
0	Open the Cabinet Construction help document.	
Zoom	Zoom in/out by switching the drop-down box options or Ctrl + mouse	
	wheel.	

Table 6.3.1-8 Toolbar functions

• Data Group Swap: Click the Data Group Swap button to open the Data Group Swap dialog box. Two modes are supported: Smart Group Drawing and Manual Swap.

Toolbar

- Smart Group Drawing: Data group numbering based on cabinet display, where you can undo, restore, reset, and empty groups.
- Manual Swap: Exchange the indexes of two data groups individually, which supports locking and unlocking functions.

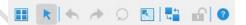


Fig 6.3.1.20 Data group swap toolbar

The description of the data group swap toolbar functions is shown in Table 6.3.1-9.

Feature		Description
		Turning on the Screen Test mode and the receiver card
		control area shows white.
*	Switch	★
	Modes	
	Select Data	
	Groups	In drawing area, click to select the data group.
	4	

	<i>→</i>	Click to undo the previous step.
	С	Reset all data group numbers.
	Void Group	Skip the current data group number.
	Data Group No.	In drawing area, click to number data groups.
	•	## 5 9 ## 1
≡ +1 □ □	Lock or Unlock	In drawing area, right click to lock or unlock data groups.
	Swap Data Groups	In drawing area, swap the number of the selected data groups with mouse wheel.
Help		Open the help file.
Zoom		Zoom in/out by switching the drop-down box options or Ctrl + mouse wheel.

Table 6.3.1-9 Toolbar

Module Information (Irregular Module)

Display basic information about the module, please refer to Single Type Module for more information.

Cabinet Settings (Irregular Module)

Configure the basic parameters of the cabinets, refer to Cabinet Settings (Multi-Type Module) for details.

Performance Settings

The display effect of the cabinets can be adjusted, which supports the configuration of Refresh Rate, Grayscale Mode, No Signal Action, Grayscale, GCLK, Power-on Fade-in, DCLK, Blanking Parameters, as well as view the Brightness Percentage.

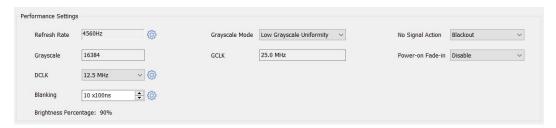


Fig 6.3.1.21 Performance settings

- Refresh Rate: Display refresh rate, which is the number of times per second that the LED screen is able to draw a new image. The higher the refresh rate, the more stable the image.
- Grayscale Mode: Select different modes to change the Gamma value of the low-grayscale part in the gamma table, making the transition of the low-grayscale part more even.
- No Signal Action: Set the content displayed when the signal of receiver card is invalid.
- Grayscale: The higher the grayscale level, the richer the color.
- GCLK: Display clock. The larger GCLK is, the higher the refresh rate, the grayscale, and the brightness percentage.
- Power-on Fade-in: When enabled, the screen becomes brighter gradually when the LED display is powered on to protect the LED beads.
- DCLK: Pixel clock. The higher the pixel clock, the higher the horizontal load capacity of the receiver card. Click to adjust DCLK duty ratio.

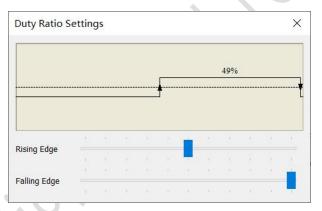


Fig 6.3.1.22 Duty ratio settings

Blanking: Solve the problem of dark LED beads and improve the display effect. Click
 to adjust 4051 parameters for further optimization of the display effects.

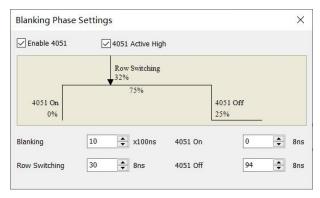


Fig 6.3.1.23 Blanking phase setting

• Brightness Percentage: The smaller blanking, lower refresh rate, and the higher gray

level leads to the higher brightness percentage.

6.3.2 Driver & Decoder IC

Driver IC

The chip parameters can be adjusted to optimize the display effect of the LED cabinet, including Chip Parameter Settings, Extended Settings, and Advanced Settings.

Chip Parameter Settings: Adjust the current gains of red, green, and blue by dragging the slider.

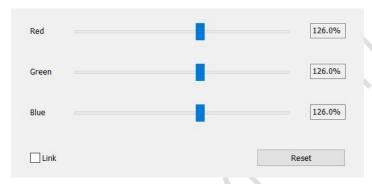


Fig 6.3.2.1 Current gains

The current gain function is described as shown in Table 6.3.2-1.

Feature	Description
Current	The higher the red, green, and blue current, the brighter the
Adjustment	brightness.
1 :1.	After ticking this checkbox, the red, green, and blue currents are
Link	synchronized for adjustment.
Reset	The red, green, and blue currents are reset to the default value.

Table 6.3.2-1 Current gain

- Extended Settings: It can be used to adjust the advanced parameters of the driver IC to solve the problems of low grayscale color blocks, color cast, color spots, darkening of the first row, high-contrast coupling, and cross-board color difference, optimizing the display effect.
- Advanced Settings: Register level parameters can be configured to optimize the display effect.

Decoder IC

Blanking can be adjusted to eliminate the upper ghost of the display and improve the caterpillar failure caused by the short circuit of the beads.

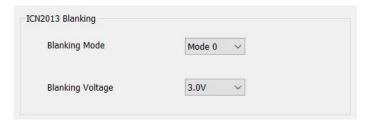


Fig 6.3.2.2 Decoder IC

6.3.3 Gamma Adjustment

The gamma values can be configured corresponding to different grayscale in the gamma table, making the image display more delicate.



Fig 6.3.3.1 Gamma adjustment

Gamma Parameters

- Gamma: Select the gamma coefficient to adjust the values in the gamma table.
- Input: Adjust the color depth of the receiver card.

Grayscale

The grayscale supports three modes: **General**, **18bit+**, and **Infi-bit**. Switching modes will affect the custom Gamma table, HDR10, HLG table values.



Fig 6.3.3.2 Grayscale

Grayscale features are described in Table 6.3.3-1.

Feature	Description				
	Expand the gamma values in the gamma table. The general value is				
Mode	16bit, and 18bit + and Infi-bit expand 2bit and 6bit respectively based				
	on the general value.				
Limit	Show the maximum gamma value for different modes.				
Maximum	Tick to limit the maximum gamma value of the general mode.				
Gray Level	The gamma value is multiplied and only the Infi-bit mode is				
Threshold	supported.				

Table 6.3.3-1 Grayscale

Gamma Settings

This feature consists of 3 settings: **Grayscale Refinement**, **HDR10**, and **HLG Gamma Table**. Select the checkbox for **Grayscale Refinement** to enable the function.

Custom Gamma Table

Custom Gamma table supports setting gamma values for all grayscale and adjusts the display of cabinets at different grayscale.

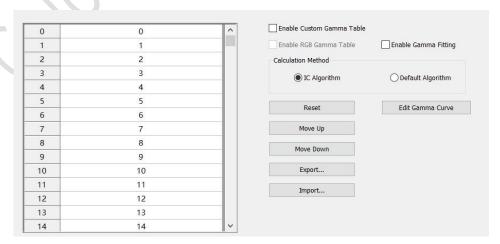


Fig 6.3.3.3 Custom Gamma table

Custom Gamma table features are shown in Table 6.3.3-2.

Feature	Description		
Enable Custom	Enable custom gamma tables to display correspondi		
Gamma Table	grayscale with gamma values.		
Enable RGB Independent Gamma Table	The gamma value of red, green, and blue vector can be modified.		
Calculation Method	Support IC Algorithm and Default Algorithm. IC Algorithm is related to the driver IC and the Default Algorithm is based on the built-in gamma table.		
Reset	Reset the custom Gamma table.		
Move Up	Select a Gamma value to move up one cell.		
Move Down	Select a gamma value to move down one cell.		
Export	Export the custom gamma table parameters to a local file.		
Import	Import a local parameter file to the custom gamma table.		
Gamma Curve Edit	Edit the gamma table by adjusting the gamma curve.		

Table 6.3.3-2 Custom gamma table function

• Gamma Curve Edit: After Gamma Curve Edit is completed, custom gamma table will be changed synchronously by clicking Apply.

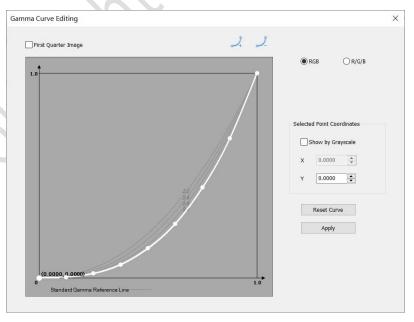


Fig 6.3.3.4 Gamma curve edit

The gamma curve edit function is described in Table 6.3.3-3.

Feature	Description	
First Quarter	The first quarter part of gamma curve is displayed in drawing	
Image	area.	
J.	Add route pixels on the gamma curve of the drawing area.	
2	Delete the route pixels on the gamma curve of the drawing area.	
RGB	Modify the white gamma curve.	
R/G/B	Modify red, green, and blue gamma curves.	
Show by	Tick to convert the coordinate in the gamma curve to show be	
Grayscale	grayscale.	
Reset Curve	Reset to the gamma curve that specifies the gamma coefficient.	
Apply	Click the button to apply the gamma curve to a custom gamma	
Apply	table.	
Drawing Area	Show the gamma curve, which can be adjusted by modifying the	
Drawing Area	points.	

Table 6.3.3-3 Gamma curve editing function

Grayscale Refinement

Grayscale refinement mainly solves the problem of brighter low grayscale or darker high grayscale which are resulted from the circuit design, chip performance and other factors. Grayscale refinement is divided into White (Normal Grayscale Refinement) and RGBW (Infi-bit Grayscale Refinement).

Quick Operations

Step 1: Set up the measurement environment to set the grayscale mode of the gamma table and enter the **Grayscale Refinement** tab.

Step 2: Click the **Measure** button to open the **Grayscale Refinement Measurement** window.

Step 3: Set the grayscale refinement measurement mode to match the grayscale mode of the gamma table. After configuring **Advanced Settings**, click the **Measure** button, then the color meter begins to measure the data, as shown in Fig 6.3.3.5.

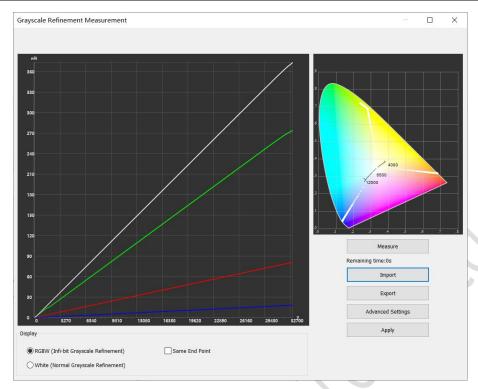


Fig 6.3.3.5 Grayscale refinement measurement

Step 4: When the measurement is completed, click the **Apply** button to update the grayscale color cast table and refinement table according to the measurement data.

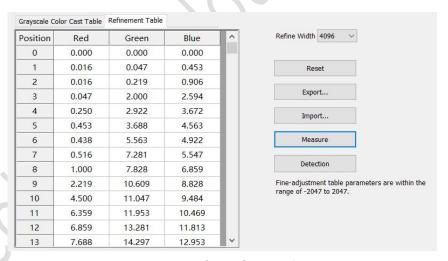


Fig 6.3.3.6 Interface after application

The functions of **Grayscale Refinement** are described in Table 6.3.3-4.

Feature	Description
	Support Grayscale Refinement extension features, with
Refinement Width	available refinement widths of 4096, 7168, 13312, 25599,
	50175, and 99327.
Grayscale Color Cast	View and modify grayscale color cast table information.

Table				
Export Grayscale Color	Export the parameters of the grayscale color cast table to			
Cast Table	a local file.			
Import Grayscale Color	Import the local parameter file to the grayscale color cast			
Cast Table	table.			
Refinement Table	View and modify refinement table information.			
Export Refinement				
Table	Export the refinement table parameters to a local file.			
Import Refinement				
Table	Import a local parameter file to the refinement table.			
Reset	Reset the grayscale color cast table or refinement table			
Reset	information.			
Measure	Click the Measure button to open the window of			
Measure	Grayscale Refinement Measurement.			
Detection	Click the Detection button to detect the receiver cards.			

Table 6.3.3-4 Description of grayscale refinement

• Grayscale Refinement Measurement: The brightness and color coordinates at each grayscale of the red-green-blue-and-white display is measured by a color meter to generate calibrated data according to the Refinement Mode. After application of the algorithm, you will get a new grayscale color cast table and refinement data table, LED display effects are optimized.

The descriptions of Grayscale Refinement Measurement are shown in Table 6.3.3-5.

Feature	Description			
RGBW (Infi-bit Gray Refinement)	The gray mode for gamma table is Infi-bit.			
White Mayned Cyay Definement	The gray mode for gamma table is General or			
White (Normal Gray Refinement)	18bit +.			
Comp Ford Bright	When checked, all curve ends in the view area			
Same End Point	are at the same endpoint.			
Measure	Click the Measure button to measure the curve			
Measure	in the current grayscale mode.			
Import	Import a local parameter file into the view area.			
Typort	Export the view area measurement parameters			
Export	to a local file.			

	Click to open the Advanced Settings dialog box.						
	1. Switch between Refinement Mode						
	(Eye/Professional).						
	2. Select White Priority or Monochrome						
	Priority as required.						
Advanced Settings	3. Set Gray Level Threshold for measurement						
	4. Set Refinement Width for Grayscale						
	Refinement Extension.						
	5. Enable Correction Mode and set Correction						
	Times.						
	Click OK to save the settings.						
Application	When applied, the gray table and refine table						
Application	will be updated.						
View Area	Display the measurement curve.						

Table 6.3.3-5 Grayscale refinement measurement

HDR10

You can adjust HDR10 Gamma table information to optimize the HDR video display.

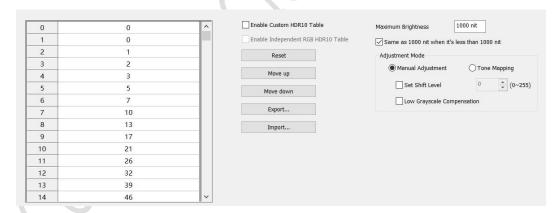


Fig 6.3.3.7 HDR10

The descriptions of **HDR10** are shown in table 6.3.3-6.

Feature	Description				
	Select Enable Custom HDR10 Table checkbox to				
Enable Custom HDR10 Table	display the corresponding grayscale with				
	Gamma values.				
Enable Independent RGB HDR10	The Gamma value of red, green, and blue vectors				

Table	can be modified.				
Reset	Reset the HDR10 Gamma table.				
Move up	Select a Gamma value to move up one cell.				
Move down	Select a Gamma value to move down one cell.				
Typort	Export the HDR10 Gamma table parameter as a				
Export	local file.				
Import	Import the local parameter file to the HDR10				
Import	Gamma table.				
W. C. D. L.	Adjust the maximum brightness of the LED				
Maximum Brightness	screen.				
	Adjust the values in the Gamma table to support				
Adjustment mode	both manual adjustment and tone mapping				
	modes.				

Table 6.3.3-6 HDR10 function

HLG Gamma Table

You can adjust HLG Gamma table information to optimize HLG video display.

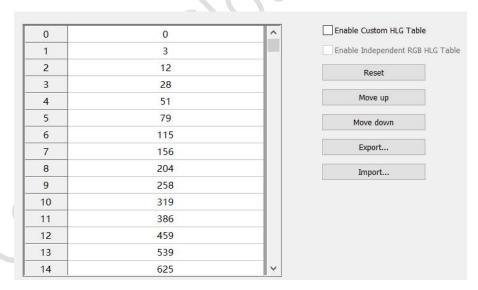


Fig 6.3.3.8 HLG Gamma table

HLG gamma table features are described in Table 6.3.3-7.

Feature	Description							
Enable Custom HLG Table	Enable	the	custom	HLG	table	to	display	the
Ellable Custolli HEG Table	corresponding grayscale at gamma values.							

Enable Independent RGB	The gamma value of red, green, and blue vectors can	
HLG Table	be modified.	
Reset	Reset the HLG gamma table.	
Move up	Select a gamma value to move up one cell.	
Move down	Select a gamma value to move down one cell.	
Export	Export the HLG gamma table parameters to a local file.	
lan a set	Import the local parameter file to the HLG gamma	
Import	table.	

Table 6.3.3-7 HLG Gamma table

6.3.4 Calibration Settings

Calibration Mode

Switch the calibration status of the cabinets.

Calibration Coefficient Source

Select the source of the cabinet calibration coefficient.

Advanced Deseam

Turn on or turn off Advanced Deseam.

Double Layer Calibration

Set the grayscale interval where the double layer calibration (**Low Layer Grayscale** and **High Layer Grayscale**) coefficients take effect.

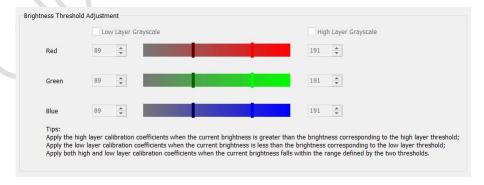


Fig 6.3.4.1 Double layer calibration

• Low Layer Grayscale: Select the checkbox to enable or disable calibrating low layer grayscale.

- **High Layer Grayscale**: Select the checkbox to enable or disable calibrating high layer grayscale.
- Brightness Threshold Adjustment: Adjust the low layer grayscale and high layer grayscale thresholds by sliders or input boxes.

Low Grayscale Calibration



Fig 6.3.4.2 Low grayscale calibration

- Specify Calibration Coefficients in Low Grayscale: When the screen shows a grayscale value less than the grayscale value you set, please use the given correction coefficient.
 - Enable: Select this checkbox to enable or disable Low Brightness Compensation Calibration.
 - **Grayscale Value**: Set the interval where the specified coefficients for calibration in low grayscale of red, green, and blue take effect.
 - Specified Coefficient: Specify the coefficient for calibration in low grayscale.

Thermal Dynamic Calibration

This feature addresses the problem of reduced screen calibration effect resulting from changes in screen temperature.

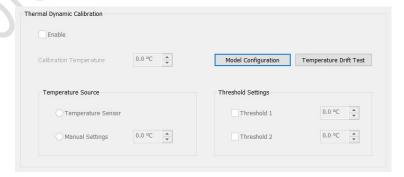


Fig 6.3.4.3 Thermal dynamic calibration

• Enable: Enable or disable the Thermal Dynamic Calibration function.

- Calibration Temperature: Set the temperature for screen calibration.
- Temperature Source: Get screen temperature. You can apply different models based on detected temperature changes to adjust the calibration effect.
 - **Temperature Sensor**: Get data from an external temperature sensor connected to the cabinet.
 - Manual Settings: Enter the screen temperature value manually.
- Threshold Settings: Set the temperature range for model 1 and model 2 to take effect.

Notes:

0°C ~ calibration temperature: No calibration model should be applied.

Calibration temperature ~ threshold 1: Model 1 should be applied.

Threshold 1 ~ threshold 2: Both model 1 and model 2 should be applied.

Threshold 2 ~ 100°C: Model 2 should be applied.

 Model Configuration: Click to open the Model Configuration window, as shown in the figure below.

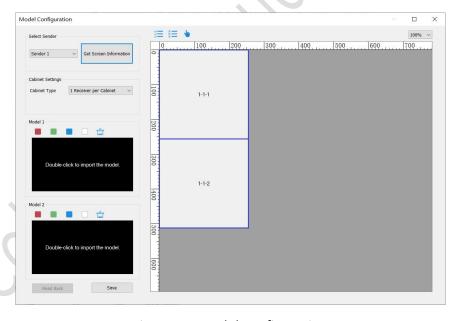


Fig 6.3.4.4 Model configuration

- Select Sender: Select a sender from the drop-down options under Select Sender. Click Get Screen Information to obtain a real-time mapping diagram of the receiver cards connected to the selected sender. The mapping will be displayed in drawing area on the right side.
- Cabinet settings: Configure Cabinet Type, with 4 available options 1

Receiver per Cabinet, 2 Receivers per Cabinet, 4 Receivers per Cabinet, and 6 Receivers per Cabinet.

- Model 1/Model 2: Double-click to import a local brightness/chrome model. Once imported, the model is saved to your user profile and can be previewed immediately. To view the model's effects under different colors, switch between the icons of Red, Green, Blue, and White. Click to delete the imported model.
- **Read Back**: Read back the model of the selected receiver card.
- Save: Save the model from the current interface to the selected receiver card.
- Toolbar
 - ≔: Select all receiver cards.
 - : Unselect all receiver cards.
 - : Highlight the selected receiver card.
- Temperature Drift Test: Collect color gamut information of the display screen under different temperatures.
 - Measurement mode: Support 2 modes, namely, **Measure Original Data** and **Effect Verification**.
- Prerequisites for Measurement
- 1. Disable color gamut adjustment and dynamic color temperature adjustment using Colorlight's ColorAdept. Adjust the color temperature to 6500K.
- 2. Enable Infi-Bit, Grayscale Refinement, and Calibration.

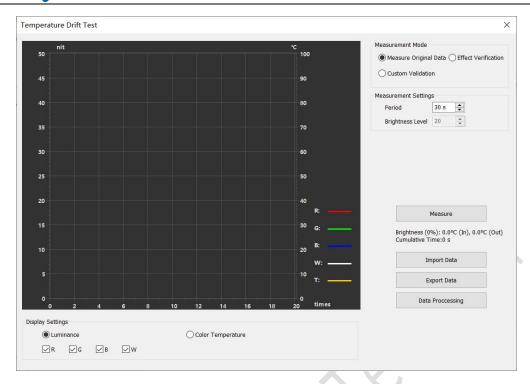


Fig 6.3.4.5 Temperature drift test

Drawing Area

Left vertical axis: Indicates **Luminance** (nits) or **Color Temperature** (K). The step per grid is dynamically displayed based on the cabinet's measured maximum and minimum values.

Right vertical axis: Indicates temperature (°C) ranging from 0°C to 100°C. Each grid represents 10°C.

Horizontal axis: Indicates measurement time (min) calculated based on measurement period and times.

Curves: Display the brightness curves for red, green, blue, and white incorresponding colors. The temperature curve (T) is displayed in yellow.

Coordinate grid: 10×10 by default. You can drag your mouse to adjust the coordinate accuracy.

Display

♦ Measure Original Data

Luminance: The coordinate system displays the relation curve between temperature and **Luminance**, supporting separate display of red, green, blue, and white curves.

Color Temperature: The coordinate system displays the relation curve between temperature and **Color Temperature**.

♦ Effect Verification

Luminance: The coordinate system displays the relation curve between temperature and **Luminance**, supporting separate display of white only.

Color Temperature: The coordinate system displays the relation curve between temperature and **Color Temperature**.

♦ Custom Verification

Luminance: The coordinate system displays the relation curve between temperature and **Luminance**, supporting separate display of red, green, blue, and white curves.

Color Temperature: The coordinate system displays the relation curve between temperature and **Color Temperature**.

■ Measurement Settings

♦ Measure Original Data

Period: Set the time interval for a single measurement.

Brightness Level: The default value is 20 and cannot be adjusted. This setting divides the sender's brightness range into 20 levels.

♦ Effect Verification

Step 1: Period: Set the time interval for a single measurement.

Step 2: Count: Set the total number of measurements.

♦ Custom Verification

Period: Set the time interval for the measurements.

Count: Set the total number of measurements.

Red, Green, Blue, White: Set the grayscale of these 4 colors during the measurement.

- **Measure**: Click to start measurement as set. Click again to stop the measurement.
 - ♦ Measure Original Data

The brightness and temperature of the screen, as well as accumulative time for measurement are shown under the **Measure** button.

♦ Effect Verification

Step 3: The remaining time for measurement is shown under the **Measure** button.

♦ Custom Verification

Step 4: The remaining time for measurement is shown under the **Measure** button.

- Import Data: Import the measurement data from a local file.
- Export Data: Export the measurement data to a local file.
- Data Processing: The software fits tristimulus values across 0~100°C in 1°C increments for different colors based on measurement data. The data will be exported and saved as a local file.

Calibration Coefficient Rotation

After selecting the checkbox, the coefficient automatically rotates with the cabinets.

Deseam in Low Grayscale



Fig 6.3.4.6 Specify deseam coefficient in low gray

- Specify Deseam Coefficient in Low Grayscale: When the gray value displayed on the screen is less than the gray value set by the software, the coefficient will be used.
 - Enable: Enable or disable the function of Specify Deseam Coefficient in Low Grayscale.
 - **Grayscale Value**: Set the interval in which the specified coefficients for deseam in low grayscale take effect for red, green, and blue.
 - Specified Coefficient: Specify coefficients for deseam in low grayscale.

Multi-Layer Deseam

Set the gray scale interval in which the **Multi-Layer Deseam** coefficients take effect.



Fig 6.3.4.7 Multi-layer deseam

6.3.5 Display Adjustment

White Balance

You can modify the proportion of red, green, and blue colors to optimize the white effect of the display screen.



Fig 6.3.5.1 White balance

Color Exchange

Color exchange is used to adjust the order of the red, green, and blue signal outputs from the video source to the physical pins of the receiver card.



Fig 6.3.5.2 Color exchange

Photo Optimization



Fig 6.3.5.3 Photo optimization

- This can be used to optimize the photos taken with the camera.
 - Photo Optimization 1: Enable or disable the photo optimization function.
 - Photo Optimization 2: Optimize the black field time during LED screen swap scan.

6.3.6 Other Settings

Phase Adjustment

By adjusting SCLK, LAT, swap scan signal, R, G and B phase parameters, the signal frequency is changed to avoid abnormal screen display caused by the same frequency of the signal output from the receiver card.

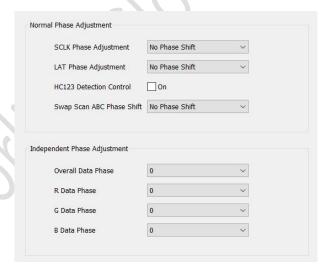


Fig 6.3.6.1 Phase adjustment

Scan Order

Scan order can be applied to change the scanning mode of the row selection signal of screen output, which supports progressive scanning and interlaced scanning and needs to be supported by the receiver card program.

Data Remapping

This feature improves the receiver card's efficiency in processing routing.

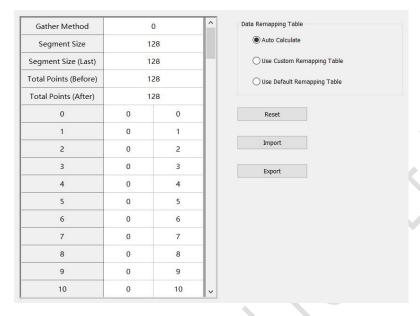


Fig 6.3.6.2 Data Remapping

EMC

By adjusting the system clock phase shift and SCLK phase shift, EMC strengthens the immunity of hardware devices to electronic magnetic fields.

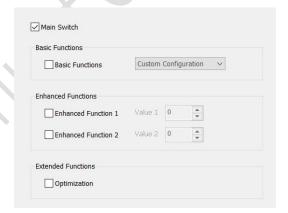


Fig 6.3.6.3 EMC

Independent Settings

Set the on/off state of the green indicator on the receiver card.

6.3.7 Intelligent Settings

Configure the parameters of the receiver card to light up the modules with intelligent settings.

Prerequisite: The **Intelligent Settings** function needs to be supported by the program of receiver card to display the intelligent settings effect.

- This software supports 3 types of module parameter configurations: Single Type
 Module, Multi-Type Module, and Irregular Module.
 - Single Type Module: Within a single module, it supports only one data group and one regular routing.
 - Multi-Type Module: Within a single module, it supports multiple data groups and multiple regular routings.
 - Irregular Module: Within a single module, it supports multiple data groups and multiple irregular routings.

Single Type Module

Wizard 1

Click the intelligent settings button to enter **Wizard 1**, and select **Single Type Module** as the cabinet type.

➤ Wizard 2

In **Wizard 2**, you can set the cabinet information, module size, and module information for a single type module.

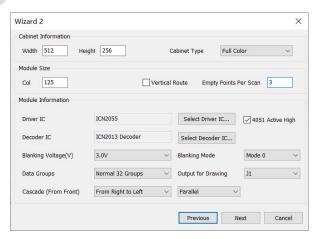


Fig 6.3.7.1 Wizard 2 for single type module

Options available in Wizard 2 of the single type module are described in Table 6.3.7-1.

Feature	Description
Width	Set the width to match the actual cabinet width.
Height	Set the height to match the actual cabinet height.
Cabinet Type	Support 3 cabinet types: Full Color, Monochrome Screen, and
	Dual-Color Screen.
Col	Set columns of a single data group in the module.
Vertical Route	This function is enabled when the module routes vertically.
Empty Points Per Scan	Set the number of empty points per scan which can be up to 128.
	After setting the empty points, Guide 8 will show the empty point
	configuration and other functions.
Driver IC	Select the corresponding driver IC according to module.
Decoder IC	Select the corresponding decode IC according to module.
Data Groups	Set the number of data groups to be output from the receiver card.
Output for	Select the physical J-port position of the receiver card shown in
Drawing	Intelligent Settings effect.
Cascade	When the cabinet position is incorrect, use this function to make the
	screen display normally.
Data Type	Set the data type of the module: parallel, serial (R16G16B16), and
	serial (R1G1B1).
Previous	Click the button to return to the previous Guide.
Next	Click the button to go to the next Guide.
Cancel	Click the button to cancel the intelligent settings.

Table 6.3.7-1 Wizard 2 - Single Type Module

Wizard 3

Wizard 3 is applied to set the data polarity of modules. Switch state 1 and 2 to select the corresponding option according to the display state of the module.

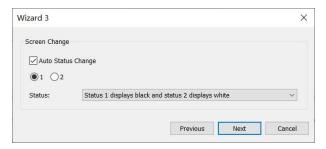


Fig 6.3.7.2 Wizard 3 for single type module

Wizard 4

Wizard 4 can be used to set the OE polarity of modules. Switch state 1 and 2 to select the corresponding option according to the display state of the module. Guide 4 will be displayed only when the driver IC is a normal chip.



Fig 6.3.7.3 Wizard 4 for single type module

Wizard 5

Wizard 5 is designed to set the signal output order of red, green, and blue from the video source to the physical pins of the receiver card. Switch state 1, 2, 3, 4 and select the corresponding option according to the module display status.

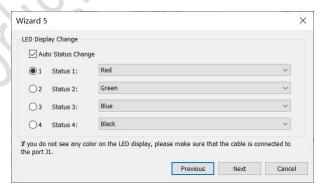


Fig 6.3.7.4 Wizard 5 for single type module

Wizard 6

Set the height of individual data groups according to the number of rows displayed on the module.

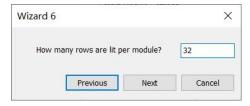


Fig 6.3.7.5 Wizard 6 for single type module

Wizard 7

Wizard 7 can be used to set the number of rows displayed for each scan of a single data group according to the number of rows on the module.

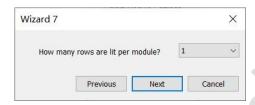


Fig 6.3.7.6 Wizard 7 for single type module

Wizard 8

Wizard 8 is designed to set the drawing information and routing for a single type module. The window is divided into a function bar and a drawing area.

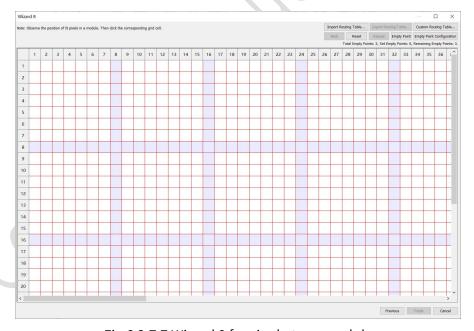


Fig 6.3.7.7 Wizard 8 for single type module

• Function Bar



Fig 6.3.7.8 Function bar

The function bar features are described as shown in Table 6.3.7-2.

Feature		Description
Import	Routing	Click the button to import the local voluting table
Table		Click the button to import the local routing table.
Export	Routing	After finishing drawing points, click the button to export the
Table		routing table to a local file.
Custom	Routing	Click the button to open the Routing Table (Manual) dialog box
Table		and draw randomly.
Back		Return to the previous step of drawing.
Reset		Reset the drawing information in the drawing area.
Repeat		Support repetition of the current drawing.
Empty Point		Click the button to add an empty point at the current position.
Empty	Point	Click the button to open the Empty Point Configuration dialog
Configuration		box.
Previous		Click the button to return to the previous Guide.
Finish		Click on the button to complete the intelligent settings and
		synchronize the information in basic parameter interface.
Cancel		Click the button to cancel the intelligent settings.

Table 6.3.7-2 Function bar

■ Routing Table (Manual): This mode is used when there is a difference in drawing points between scans in the routing table.

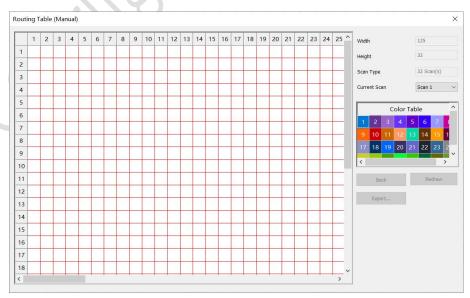


Fig 6.3.7.9 Routing table (manual)

The functional fields and buttons in **Routing Table (Manual)** window are described in Table 6.3.7-3.

Feature	Description
Width	Same as the number of module columns set in Wizard 2 .
Height	Same as the number of module rows set in Wizard 6 .
Scan Tuno	Same as the result of dividing the number of rows in Wizard 6
Scan Type	by the number of rows in Wizard 7 .
Current Scan	Select the number of scans for drawing.
Color Table	Select the number of scans for drawing.
Back	Return to the previous step.
Redraw	Reset the drawing points of the drawing area.
Even a set	When drawing is finished, click the button to export the routing
Export	table to a local file.
Drawing area	Draw pixels for each scan which will be automatically
Drawing area	overwritten to the drawing area of Wizard 8 when finished.

Table 6.3.7-3 Manual routing

■ **Empty point configure**: Configure the position of the empty point for the first scan and repeat the empty point for the other scans.

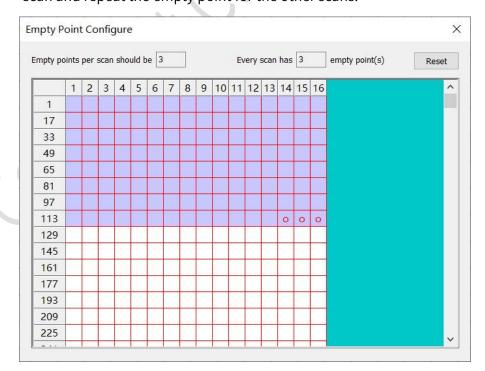


Fig 6.3.7.10 Empty point configure

- **Reset**: Click the button to reset the empty point.
- Empty point drawing area: Click o to cancel the empty point and click to set the empty point.
- Drawing area: It displays the trace information for the module. You can trace points following the "blinking dot" displayed on the module.
 - Draw: When the points are not drawn, click in the drawing area to draw points manually.
 - Draw scan: After completing the first scan, click on the drawing area to draw the scans.

Multi-Type Module

Wizard 1

Click the **Intelligent Settings** button to enter **Wizard 1** and select **Multi-Type Module** as the cabinet type.

➤ Wizard 2

Set the driver/decoder IC and module information for multi-type module.

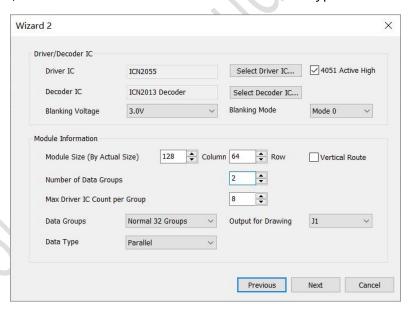


Fig 6.3.7.11 Wizard 2 for multi-type module

The multi-type module functions are described as shown in Table 6.3.7-4.

Feature	Description
Driver IC	Select the corresponding driver IC according to the module.
Decoder IC	Select the corresponding decoder IC according to the module.

Module Size	Set the number of columns and rows of the module
Module Size	according to the actual size of the module.
Vertical Route	Enable this function when the route of the module is in
vertical Route	vertical direction.
Number of Data	Set the number of data groups in the module which is up to
Groups	four.
Max Driver IC Count	Set the number of data group chips that occupy the most
per Group	pixels in one scanning among all data groups in the module.
Data Crouns	Set the number of data groups output from the receiver
Data Groups	card.
Output for Drawing	Select the physical J-port position of the receiver card
Output for Drawing	displayed in the Intelligent Settings effect interface.
Data Tura	Set the data type of the module, which supports three types:
Data Type	Parallel, Serial (R16G16B16) and Serial (R1G1B1).
Previous	Click the button to return to the previous Wizard.
Next	Click the button to go to the next Wizard.
Cancel	Click the button to cancel the intelligent settings.

Table 6.3.7-4 Multi-type module description

Wizard 3

Set the data polarity of the modules, please refer to "Single Type Module Wizard 3" for details.

Wizard 4

Set the OE polarity of the modules, please refer to "Single Type Module Wizard 4" for details.

➤ Wizard 5

Wizard 5 is designed to set the signal output order of red, green, and blue from the video source to the physical pins of the receiver card. Refer to "Single Type Module Wizard 5" for more details.

Wizard 6

Set the height of individual data groups according to the number of rows displayed on the module. Refer to" Single Type Module Wizard 6" for more details.

Wizard 7

Wizard 7 can be used to set the number of rows displayed for each scan of a single

data group according to the number of rows on the module. Refer to "Single Type Module Wizard 7" for more details.

Wizard 8

Wizard 8 is designed to set the trace information and route for a multiple type module. The window is divided into a function bar and a drawing area.

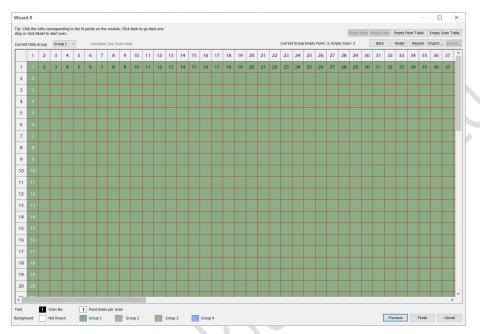


Fig 6.3.7.12 Multiple type module intelligent settings

• Current data group: Click the drop-down box to switch data groups and open the Step 1: Confirm target module dialog box.

Step 1: Set the index of the current data group.

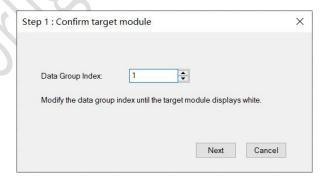


Fig 6.3.7.13 Confirm target module

Step 2: Input the number of corresponding ICs following the operation steps.

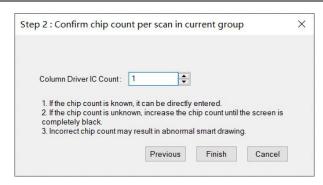


Fig 6.3.7.14 Confirm one scan IC counts

Function Bar

The multiple type module function bar is described as shown in Table 6.3.7-5.

Feature	Description
Draw Scan 1	Select the checkbox to complete the first scan point.
Empty Point	Click the button to add an empty point to the current position.
Empty Scan	Click the button to add an empty scan to the current position.
Empty Point Table	Click the button to open the Empty Point Settings popup window.
Empty Scan Table	Click the button to open the Empty Scan Settings popup window.
Back	Return to the previous step of point trace.
Reset	Click the button to reset the drawing information of the current data group or all data groups.
Repeat	Copy the drawing points completed in the previous data group and apply them to the current data group.
Import	Click the button to import the local routing table.
Export	After completing the drawing, click the button to export the routing table to a local file.
Previous	Click the button to return to the previous Wizard.
Finish	Click the button to complete the intelligent settings and synchronize them to the basic parameter interface.
Cancel	Click the button to cancel the intelligent settings.

Table 6.3.7-5 Multiple type module function bar

■ Empty Point Settings: Configure the position and number of empty points for the First Scan and repeat the empty points for other scans.



Fig 6.3.7.15 Empty point setting

The **Empty Point Settings** function is described as shown in Table 6.3.7-6.

Feature	Description
Data group	Select data groups.
Reset Current Group	Reset the empty point of the current data group.
Reset All	Reset empty points of all data groups.
Empty point drawing	Sat the position and number of amount points
area	Set the position and number of empty points.

Table 6.3.7-6 Empty point settings function

■ Empty Scan Settings: Configure the position and number of empty scans for the data group.

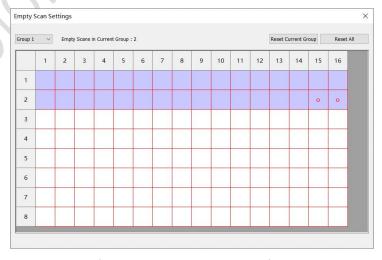


Fig 6.3.7.16 Empty scan settings

The **Empty Scan Settings** function is described as shown in Table 6.3.7-7.

Feature	Description
Data group	Select data groups.
Reset Current Group	Reset the empty point of the current data group.
Reset All	Reset empty points of all data groups.
Empty point drawing area	Set the position and number of empty points.

Table 6.3.7-7 Empty scan settings function

- Drawing area: It displays the drawing information for the module. You can draw points following the "blinking dot" displayed on the module.
 - Draw point: Before points are drawn, click on the drawing area to draw points manually.
 - Draw scan: After completing the first scan, click on the drawing area to draw the scans.

Irregular Module

➤ Wizard 1

Click the intelligent settings button to enter **Wizard 1** and select **Irregular Module** as the cabinet type.

➤ Wizard 2

In **Wizard 2**, you can set the module size, and module information for the irregular module.

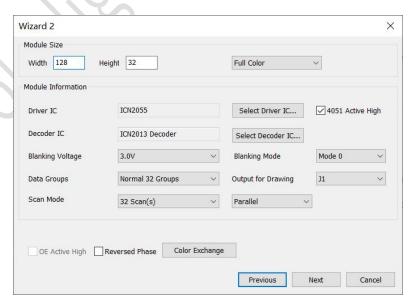


Fig 6.3.7.17 Wizard 2 for shaped module

The irregular module Wizard 2 features are described in Table 6.3.7-8.

Feature	Description
Module Size	Set the width and height of the module.
Cabinet Type	Support three cabinet types: Full color, Monochrome
Савінеї туре	Screen, and Dual-Color Screen.
Driver IC	Select the corresponding driver IC according to module.
Decoder IC	Select the corresponding decoder IC according to module.
Data Crounc	Set the number of data groups to be output from the
Data Groups	receiver card.
Output for Drawing	Select the physical J-port position of the receiver card
Output for Drawing	shown in the Intelligent Settings effect interface.
Scan Mode	Set the number of scans for the module.
Data Typo	Set the data type of the module, which supports Parallel,
Data Type	Serial (R16G16B16) and Serial (R1G1B1).
OE Active High	Set the OE polarity of the module.
Reversed Phase	Set the data polarity of the module.
Color Evolungo	Set the order of red, green, and blue signal outputs from
Color Exchange	the video source to the physical pins of the receiver card.
Previous	Click the button to return to the previous wizard.
Next	Click the button to go to the next wizard.
Cancel	Click the button to cancel the intelligent settings.

Table 6.3.7-8 Guide 2 for shaped module function

Wizard 3

After adding a route type, add a data group to the drawing area to construct the cabinet. The **Wizard 3** interface is divided into the route type and cabinet construction area.

Routing Type

Routing type is allowed to be added, edited, and viewed, and up to 128 types can be added.

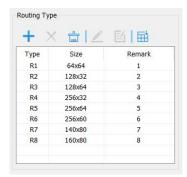


Fig 6.3.7.18 Route type list

• +: Click the button to open the **Add Module Routing Type** dialog box. You can set the parameters of the route type, then click the **OK** button to enter the interface for drawing points.

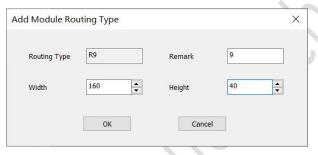


Fig 6.3.7.19 Add module routing type

- ullet \times : Click the button to delete the selected routing type.
- 🗔: Click the button to delete all routing types.
- <a>_: Click the button to enter the interface for drawing points of the selected routing type.
- 🖆: Click the button to modify the remark of the selected routing type.
- \boxplus : Click the button to import the drawing point file of irregular screen and add a new routing type to the list.
- List: Display the added routing types and you can double click the routing type to enter the interface for drawing points.

Cabinet Structure Area

The interface can be divided into toolbar and drawing areas.

• Toolbar: The data groups in the drawing area can be added, deleted, aligned, or swapped, etc.



Fig 6.3.7.20 Toolbar of Guide 3

Toolbar is described as shown in Table 6.3.7-9.

Feature	Description
Data Groups	Set the number of data groups output from receiver card.
6	Click to undo the previous step.
<i>→</i>	Click to redo the previous step.
+	Add a data group to the drawing area.
X	Delete the data group selected in the drawing area.
	Clear all data groups in the drawing area.
T	Select multiple modules to align the module layout.
III	Select multiple modules to number the modules.
+	Click the button to enter the Data Group Swap window.
₽	Export the routing of the cabinet to a local file.
<u>C</u> ,	Export the routing of the local irregular modules' parameter files in
	batch.
0	Open the Help document.
700m	Zoom by switching the drop-down box options or the Ctrl + mouse
Zoom	wheel.

Table 6.3.7-9 Toolbar description

- Drawing area: Add and edit data groups to construct cabinets. Click **Finish** to complete the intelligent settings, which will be synchronized in basic parameters interface.
- Selected Data Group Information: Select a data group and display the selected data group information on the left of the drawing area.

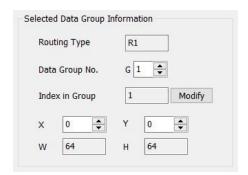


Fig 6.3.7.21 Selected data group information

Interface for Drawing Points

In Wizard 2, you are allowed to choose Parallel as the Data Type to go to the parallel

drawing interface and choose **Serial** to go to the serial drawing interface.

• Parallel drawing interface: Draw points of the parallel modules and the software interface includes toolbar and drawing area.

■ Toolbar

A description of the parallel drawing toolbar is shown in Table 6.3.7-10.

Feature	Description
~	Undo the last action performed.
	Reset the drawing in the drawing area.
	Verify the data group sequence number for the module and the
<u> </u>	number of ICs in one scan.
	When the drawing is completed, click the button to export the
	routing table as a local file. Support export directly or after
	rotation.
≕	Click the button to import the local routing table.
Empty point	Click the button to add an empty point to the current position.
<u></u>	Click the button to open the Empty Point Configuration dialog box.
Scan Point by	Once selected, each point in one scan can be individually drawn.
Point	Office selected, each point in one scan can be individually drawn.
②	Click the button to open the Help document.
ОК	Click the button to complete the drawing and synchronize with the
	list of routing types.
Cancel	Click the button to cancel the drawing.

Table 6.3.7-10 Parallel trace toolbar

■ Empty Point Configuration

If the **Scan Point by Point** is not selected, you can configure the position and number of empty points in the First Scan.

If the **Scan Point by Point** is selected, you can configure individual empty points for Each Scan.

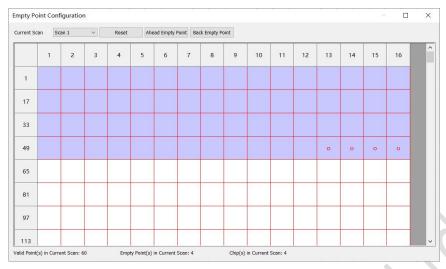


Fig 6.3.7.22 Empty point configuration

The **Empty Point Configuration** window is described in Table 6.3.7-11.

Feature	Description
Current Scan	Select the number of scans for empty point configuration.
Reset	Reset the empty points of the current data group.
Ahead Empty	Move forward the empty points at the end of the current and all
Point	scans.
Rack Empty Daint	Move backward the empty points at the beginning of the
Back Empty Point	current and all scans.
Empty point	Click to cancel empty point and click to draw empty
drawing area	point.

Table 6.3.7-11 Empty point configuration window

• Drawing area: If **Scan Point by Point** is not selected, please refer to the single type module for the trace. If the **Scan Point by Point** is selected, you can configure individual points for each scan by switching **Current Scan**.

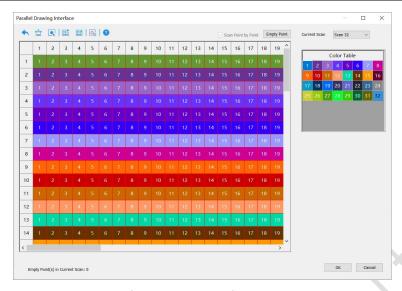


Fig 6.3.7.23 Drawing area

• Serial drawing interface: Draw the serial module. Please see the introduction to the parallel module drawing interface for reference.

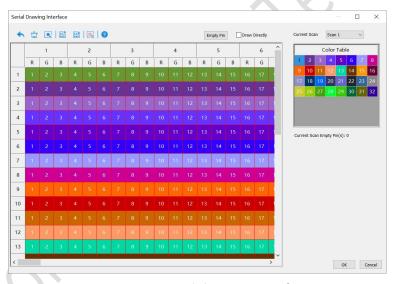


Fig 6.3.7.24 Serial drawing interface

6.3.8 Function Button



Fig 6.3.8.1 Function buttons

Function buttons are described as shown in Table 6.3.8-1.

Feature	Description
Intelligent	Click the button to open Intelligent Settings . Please refer to Section
Settings	6.3.7 for details.
Screen	Click the button to open Screen Beautify . See relevant description
Beautify	below.
Test Tool	Click the button to open LEDTester . Please refer to Chapter 7.
Modify and	When selected, the modification of parameters will be sent to the
Send	receiver card in real-time.
Read Back	Read back the receiver card parameters and load them onto the
Read Back	software.
Load	Click the button to load the local/cloud parameter files.
Save	Save the display parameters as a local/cloud file.
C	Send real-time parameters to the receiver card, which will be lost
Send	after power cycling.
	Click to save parameters to the receiver card, which will be valid
Save to	after power cycling.
Receiver	Right click to specify the receiver card saving and parameters
	readback.

Table 6.3.8-1 Function buttons

Screen Beautify

The driver IC in **Receiver Parameters** supports **Screen Beautify** and displays the **Screen Beautify** button.

Screen Beautify walks you through the chip parameter configuration, thus delivering better display effects.



Fig 6.3.8.2 Screen optimizer

Quick Start

Step 1: After configuring **Intelligent settings**, the screen is lit up. Select the **Screen Beautify** button to open the **Screen Beautify** dialog box.

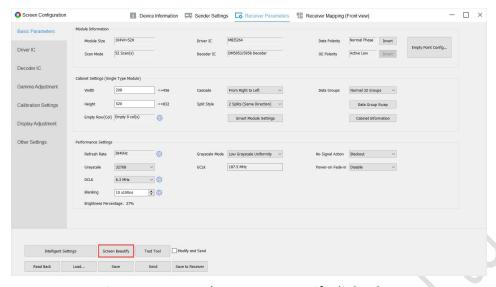


Fig 6.3.8.3 Open the Screen Beautify dialog box

Step 2: Select the blue sentence under **Step 1** to open the **Screen Settings** dialog box, and set the position and size of the playback canvas.

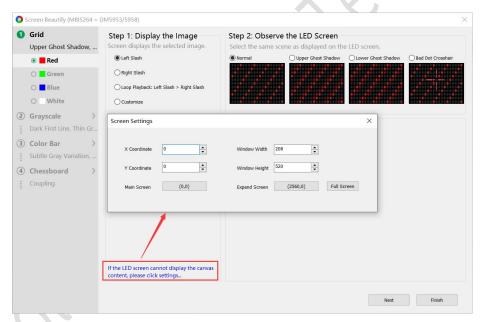


Fig 6.3.8.4 Reposition and resize the playback canvas

Step 3: Access Guide 1. Switch to **Assistant Guide** (red-green-blue-and-white) and select options under **Step 1** to change the display effects. View the changes and select options under **Step 2**, then adjust parameters for normal display effects according to the on-screen instructions.

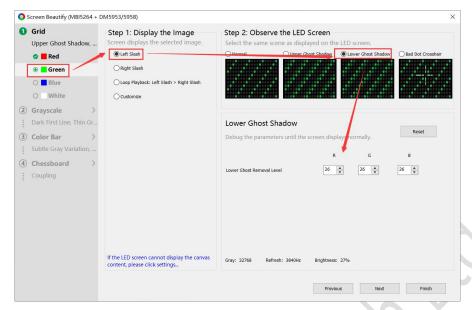


Fig 6.3.8.5 Guide 1

Step 4: Access Guide 2. Switch to **Assistant Guide** (red-green-blue-and-white) and select options under **Step 1** to change the display effects, then view the changes. If the display effect is normal, select **Next** to access the next guide; if the display effect is abnormal, select options under **Step 2**, and adjust parameters for normal display effects, then access the next guide.

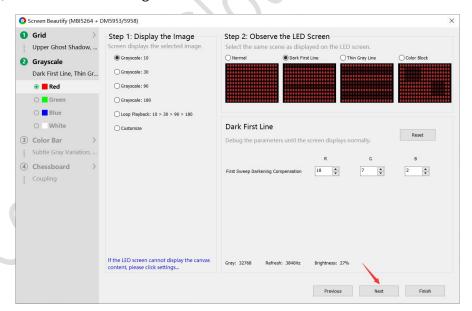


Fig 6.3.8.6 Guide 2

Step 5: If testing is done through all guides and the display effects are normal, select **Complete** to exit the **Screen Beautify** and update parameters.

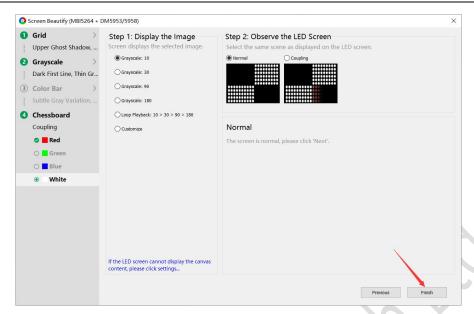


Fig 6.3.8.7 Complete settings in screen optimizer

Description

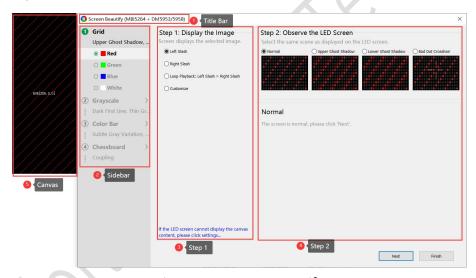


Fig 6.3.8.8 Screen Beautify

■ Title bar

Display Screen Beautify (driver IC + decoder IC).

Side bar

Master guide: Change the playback canvas style, including grid, grayscale, band, and chessboard.

Assistant guide: Change the playback canvas color, including red, green, blue, and white.

■ Step 1

Set the image style: Support changing preset styles and custom styles, and the

display effects will change in real time.

Set the screen position and size: Select the blue sentence to open the **Screen Settings** dialog box, and set the position and size of the playback canvas.

■ Step 2

Select the display changes: Select the options according to the display changes and reference pictures.

Parameter configuration: Adjust the chip parameters and apply the changes in real time. The screen will change correspondingly.

■ Playback Canvas

Keep the aspect ratio of the original playback canvas size with the cabinet size in **Basic Parameters** when you access the **Screen Optimizer** interface every time.

Playback canvas context menu: Right-click the playback canvas to display the playback canvas context menu.



Fig 6.3.8.9 Playback canvas context menu

The playback canvas context menu is described in Table 6.3.8-2.

Feature	Description
Show Mouse	The checkbox is selected by default. Navigate to the playback canvas and show the mouse.
Bring to Front	Select the Bring to Front checkbox to pin playback canvas.
Allow Dragging	Select the Allow Dragging checkbox and drag the position of the playback canvas with mouse.
Allow Resizing	Select the Allow Resizing checkbox and resize Screen by dragging screen frame with mouse.
Shortcut Key Explanation	Select the Shortcut Key Explanation checkbox to display the shortcuts description in the lower-left corner of the playback canvas.

Table 6.3.8-2 Playback canvas context menu functions

■ Function Keys

Previous, **Next**: Click the button and switch between the previous and next (Master/Assistant) guide.

Finish: Click the button to exit **Screen Beautify** and update chip parameters.

X: Click the button to exit **Screen Beautify**, restore chip parameters, and apply the changes in real time.

Parameters Backup

Back up the display parameters. Enter "dkbf" in basic parameters interface to display the **Read Back Backup**, **Save to Backup**, and **Restore Backup** button.



Fig 6.3.8.10 Parameters backup

The parameter backup features are described in Table 6.3.8-3.

Feature	Description
David D	Click to read back the parameters in the receiver card backup area.
Read Back	Right-click to read back the parameters in the specified receiver
Backup	card backup area.
	Click to save the parameters to the backup area of the receiver
Save to Backup	card.
	Right-click to save the parameters to the backup area of the
	specified receiver card.
	Click to override the backup area parameters of the receiver card
Restore	to the application area.
Backup	Right-click to override the backup area parameters of the specified
	receiver card to the application area.

Table 6.3.8-3 Parameter backup function

Specify Receiver Card

According to the graphic location or list location, specify the receiver card firstly and do not close the **Specify Receivers Operations** dialog box. Then, you can perform intelligent settings, data group swap, sending parameters, saving parameters, read parameters and other specified receiver card operations.

In basic parameters interface, right-click **Save** and open the **Read and save from the specified receivers** dialog box. Click **Advanced Settings** to open the **Specified Receivers Operations** dialog box, which is divided into two tabs **Graphic Location** and **List Location**.

• Graphic Location: You are allowed to specify receivers using the graphic location.

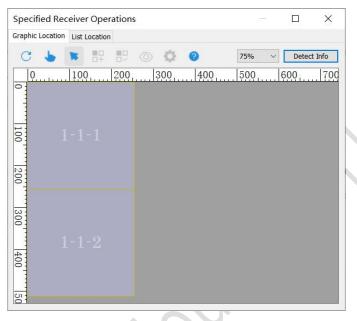


Fig 6.3.8.11 Graphic location

• List Location: You can specify receivers by entering parameters in the list.

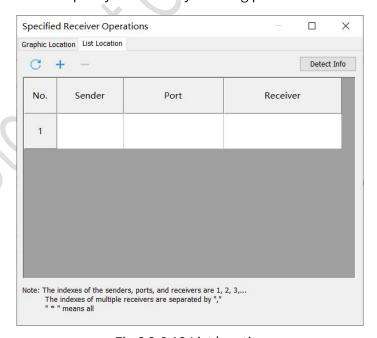


Fig 6.3.8.12 List location

Tab page of **List Location** is described as shown in Table 6.3.8-4.

Feature	Description
C	Click to reset all information in the table.
+	Click to add a row to the table.
	Click to reduce a row from the table.
Detect Info	Detect information on all senders and receiver cards.

Table 6.3.8-4 Tab page of list location

6.4 Connecting a Display

Set the mapping of the receiver cards that are connected to sender's ports according to cabinet count and physical connection mode with support for Standard and Complex mode.

6.4.1 Device Management Area

Show cascading sender count, sender's Ethernet ports count, and Ethernet payload.

• Device: Switch a device and set its mapping.



Fig 6.4.1.1 Device information

• Port: Switch Ethernet port and set its mapping.

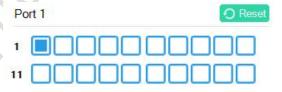


Fig 6.4.1.2 Port information

- **Reset**: Select to clear selected Ethernet port's mapping diagram.
- Load Capacity: Show the Ethernet port's loading status of the selected device.



Fig 6.4.1.3 Ethernet port's loading status

- Port area settings: Select **Set to allow the Port Area Settings** dialog box with support for Auto Calculate and Manual Input.
- Auto Calculate: Calculate automatically sender's Ethernet port control area according to the mapping diagram.
- Manual Input: Enter parameters manually to set sender's Ethernet port control area.

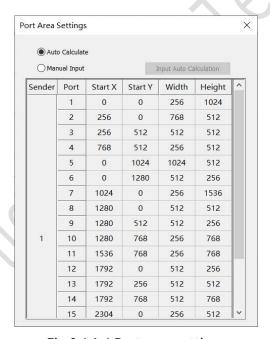


Fig 6.4.1.4 Port area settings

6.4.2 Standard

Quick Start

Step 1: To add receiver cards to the drawing area, set **Receiver Count** and **Selected Receiver Info** according to the actual cabinets (see Fig 6.4.2.1 below).



Fig 6.4.2.1 Add receivers

Step 2: Draw each sender Ethernet ports' mapping diagram using **Port Numbering** and **Receiver Numbering** according to the actual mapping of receiver cards (see Fig 6.4.2.2 below).

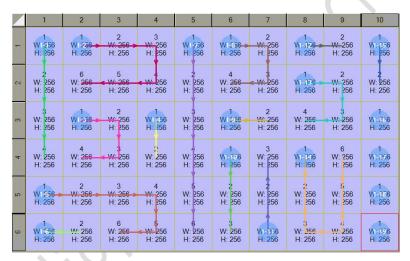


Fig 6.4.2.2 Mapping diagram

Step 3: Click **Send** and view the screen.

Toolbar

Set display's mapping diagram using **Port Numbering**, **Receiver Numbering**, and **Highlight**.



Fig 6.4.2.3 Standard - toolbar

For details of Standard toolbar, see Table 6.4.2-1.

Function	Description
6	Select to back.

<i>→</i>	Select to undo last.
*	Select to reset selected Ethernet port's mapping diagram.
	Select to reset all Ethernet ports' mapping diagram.
Ü	Select to reset the drawing area.
	Select from full screen numbering, port numbering, and write to
	numbering font library.
•	Select to enable Highlight and highlight the selected receiver cards.
K	Enable Normal Mode by default to control receiver cards in the drawing
	area.
8	Select to set selected receiver cards to be void cards and disable
	mapping.
7	Select a single receiver card, click the button, the Output Data Offset
	dialog box appears.
2	Select to open the Help documentation.
Zoom	Zoom by selecting options from the drop-down menu or scrolling mouse
	wheel.

Table 6.4.2-1 Standard toolbar

• Output Data Offset: Ensure normal display using Output Data Offset to offset data output of receiver cards when cabinet modules are biased during the actual installation.

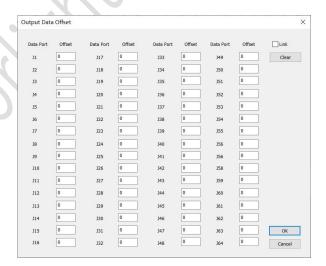


Fig 6.4.2.4 Output data offset

For more information about **Output Data Offset**, see Table 6.4.2-2.

Function	Description
Data Port	J1-J64 Data Port.
Offset	Set offset pixels for the corresponding data port.
Link	Select the Link checkbox to offset all output data.
Clear	Reset offset of all data ports.
OK	Select to enable the offset.
Cancel	Close the dialog box.

Table 6.4.2-2 Output data offset

Cabinet Configuration

Draw mapping diagram in the drawing area, and set receiver count and size.

- Show Routing: Select the Show Routing checkbox to show mapping diagram in the drawing area.
- Receiver Count: Set the count of the receiver cards in the drawing area.



Fig 6.4.2.5 Receiver count

- **Reset All**: Select to reset the count of receiver cards in the drawing area.
- Select All: Select all receiver cards in the drawing area.
- Selected Receiver Info: You can view the number of selected receiver cards and enter values in the width and height fields to resize the cards.



Fig 6.4.2.6 Selected receiver information

- Apply to Column: Select the Apply to Column checkbox, enter values in the width and height fields to apply them to all receivers in the column where the selected receiver card is located.
- Apply to Row: Select the Apply to Row checkbox, enter values in the width and height fields to apply them to all receivers in the row where the selected

receiver card is located.

 Mapping Settings: Select the Mapping Settings button, select receiver cards in the drawing area to draw mapping diagram.

Drawing area

Drawing area shows all receiver cards' mapping diagram, size, and index. You can distinguish senders and Ethernet ports by colors and numbers. See the **Help** documentation to find out shortcuts of the drawing area.

6.4.3 Complex

Quick Start

Step 1: Select sender's port according to actual cabinets, select , set the position, count, size, and selected style of the receiver cards that are connected to corresponding Ethernet ports to draw mapping diagram (See Fig 6.4.3.1 below).

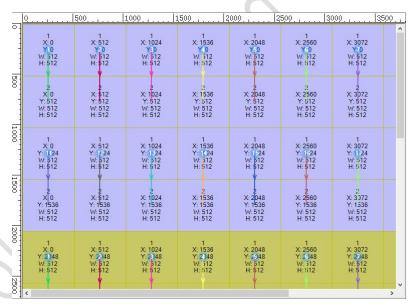


Fig 6.4.3.1 Mapping diagram

Step 2: Adjust parameters in cabinet configuration area on the right using **Port Numbering** and **Receiver Numbering**, Keeping receiver cards' mapping order and physical mapping order consistent.

Step 3: Click **Send** and view the screen.

Toolbar



Fig 6.4.3.2 Toolbar

• †: Select an Ethernet port, click the button to allow **Add Receiver** dialog box. Configure parameters and then click **Add** to draw the port's mapping diagram.

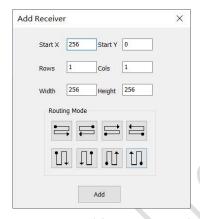


Fig 6.4.3.3 Add receiver card

- .: Click the button to delete the selected receiver card in the drawing area.
- III: Select and align multiple receiver cards.
- II: Select and sort multiple receiver cards.
- Other functions: You can find out other functions in Standard Toolbar.

Cabinet configuration area

Set the size and position of the selected receiver card.



Fig 6.4.3.4 Cabinet configuration area

- Show Routing: Select this checkbox to show mapping diagram in the drawing area.
- Receiver Size: Resize the selected receiver card.
- Selected Receiver Info: Show the count of the selected receiver card and set its position.

Drawing area

Drawing area shows all receiver cards' mapping diagram, position, size, and index. You can tell senders and Ethernet ports by colors and numbers. See the **Help** documentation to find out shortcuts of the drawing area.

Function keys



Fig 6.4.3.5 Function keys

To learn more about function keys, see Table 6.4.3-1.

Function	Description
Read Back	Read the receiver card's mapping diagram and load it on
	LEDSetting.
Load	Click the button to load local parameter file of mapping diagram.
Save	Save receiver card's mapping diagram as local files.
Send	Send real-time mapping diagram to all receiver cards. The
	parameters will be invalid after power cycling.
Save to Device	Save parameters of mapping diagram to all receiver cards. The
	parameters will remain valid after power cycling.

Table 6.4.3-1 Function keys

7. LEDTester

Test LED display by entering parameters in LEDTester to change display effect of the playback canvas in LEDSetting.

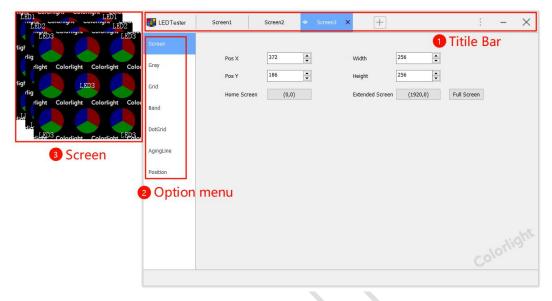


Fig 7.1 Test tool (LEDTester)

- ➤ Title bar
- Screen management: Add, delete, switch screens. Show/Hide LEDSetting playback canvas.

 - Delete screen: Click

 to delete the selected screens.
 - Screen switching: Select screen name and switch to the corresponding screen from option menu to pin playback canvas.
 - Show/Hide screen: Select on thide the playback canvas, select to show the playback canvas.
- Shortcut menu: Select to open the pop-up menu.
- ➤ Option menu

Screen

Adjust the position and size of LEDSetting playback screen.

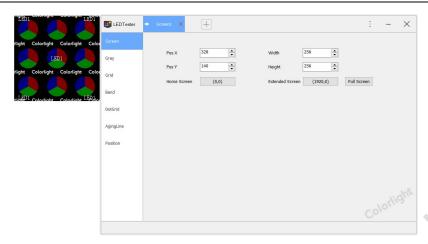


Fig 7.2 Screen

To know how to change screen settings, see Table 7-1.

Parameter	Description
Pos X	Set the horizontal coordinate of the playback canvas.
Pos Y	Set the vertical coordinate of the playback canvas.
Width	Set the width of the playback canvas.
Height	Set the height of the playback canvas.
Home Screen	Click (0, 0) to set the coordinate of the playback canvas as (0, 0).
Extended	Click (1920, 0) to set the coordinate of the playback canvas as
Screen	(1920, 0).
Full Screen	Click Full Screen to set the size of the playback canvas to match
	your computer screen resolution.

Table 7-1 Screen settings

Gray

Test LED display in solid color view.

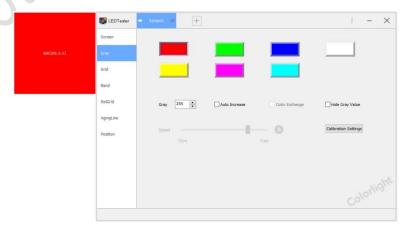


Figure 7.3 Gray

For detailed information about Gray, see Table 7-2.

Parameter	Description
Color button	Click the clock blocks Red, Green, Blue, White, Yellow, Purple, or
	Cyan to switch the color of the playback canvas.
Crov	Enter value in the field provided to adjust grayscale of the playback
Gray	canvas.
	Select the checkbox, the grayscale of the playback canvas does
Auto Increase	cyclic increment automatically in the range of 0~255.
Color	Select the checkbox, the playback canvas switches the grayscale
Exchange	cyclic display sequentially in color order.
Hide Gray	Show/Hido gray value on of the playback capyas
Value	Show/Hide gray value on of the playback canvas.
Speed	Adjust the speed of Auto Increase on the playback canvas, click
	to enable Auto Increase .
Calibration	Enable or disable calibration
Settings	Enable or disable calibration.

Table 7-2 Gray

Grid

Test LED display in the Grid view.

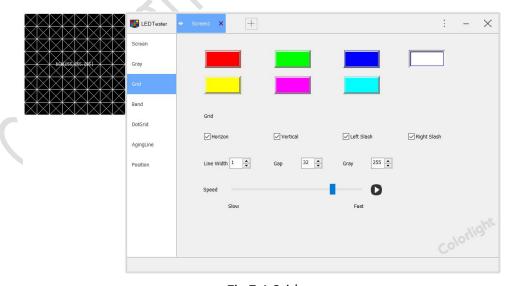


Fig 7.4 Grid

For details of **Grid**, see Table 7-3.

Parameter	Description
Color button	Click the color blocks Red, Green, Blue, White, Yellow, Purple, or Cyan
Color button	button to switch the grid color of the playback canvas.
Horizon	Hide/Show grid horizontal lines of the playback canvas.
Vertical	Show/Hide vertical lines of the playback canvas grids.
Left Slash	Show/Hide left slash of the playback canvas grids.
Right Slash	Show/Hide right slash of the of the playback canvas grid.
Line Width	Enter values in the field to adjust the line width of the Screen grid.
Gap	Enter values in the field to adjust the gap of the Screen grid.
Gray Value	Enter values in the field to adjust the gray value of the Screen grid.
Speed	Move the slider to adjust the speed of the playback canvas grid
	movement, click O to move grid.

Table 7-3 Grid

Band

Test LED display by setting screen gradient Band.

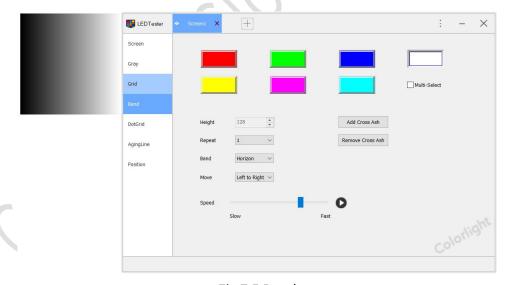


Fig 7.5 Band

For more information about **Band**, see Table 7-4.

Parameter	Description
Color button	Click the color blocks Red, Green, Blue, White, Yellow, Purple, or
	Cyan button to switch band color of the playback canvas.

Multi-Select	Select the Multi-Select checkbox to simultaneously display
	multiple color bars on the playback canvas.
Height	Select the Multi-Select checkbox, and enter values in the field to
	adjust band height.
Donast	Select different values in the drop-down to change the number of
Repeat	pixel points in the same grayscale of the tablecloth color bar.
	Horizon: Playback canvas band fades from left to right on a 0-255
Band	gray scale.
Ballu	Vertical: Playback canvas band fades from top to bottom on a
	0-255 gray scale.
Move	Select options from the drop-down menu to change the moving
моче	direction of the playback canvas band.
Spood	Move the slider to change the moving speed of the playback
Speed	canvas band, and click t o start moving.
Add Cross Ash	Click Add Cross Ash, navigate over the playback canvas to add
	cross cursor markers.
Remove Cross	Click Remove Cross Ash to clear cross cursor on the playback
Ash	canvas.

Table 7-4 Band

Dot Grid

Test LED display by setting Dot Grid.

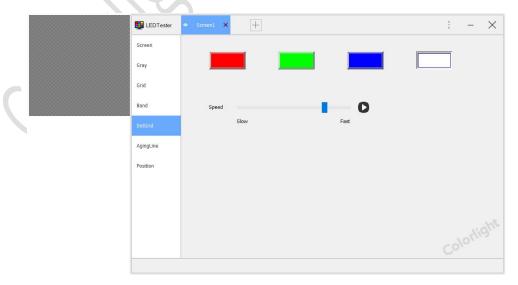


Fig 7.6 Dot grid

To learn more about **Dot Grid**, see Table 7-5.

Parameter	Description	
Color button	Click the color blocks Red, Green, Blue, White, Yellow, Purple, or	
	Cyan button to switch the color of dot grid on the playback canvas.	
Speed	Move the slider to change the flickering speed of dot grid on the	
	playback canvas, and click O to start flickering.	

Table 7-5 Dot grid

Aging Line

Test LED display by setting Gray, Band, Grid, and Picture.

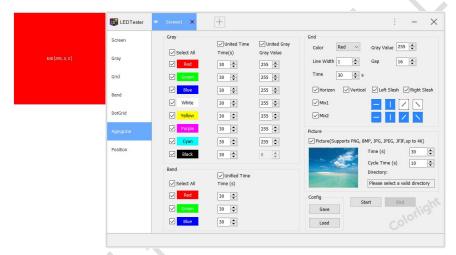


Fig 7.7 Aging line

To know how to configure aging line, see Table 7-6.

Parameter		Description
Gray	Color Options	Select the checkbox(es) to pick which grayscale
		color(s) will appear in the loop.
	Time(s)	Set the display time for each grayscale color. Or,
		select the United Time checkbox to apply the
		same display time to all grayscale colors.
	Gray Value	Set the gray value for each grayscale color. Or,
		select the United Gray checkbox to apply the same
		gray value to all grayscale colors (except black).
Band	Color Options	Select the checkbox(es) to pick which band
		color(s) will appear in the loop.
	Time(s)	Set the display time for each band color. Or, select

		the Unified Time checkbox to apply the same
		display time to all band colors.
	Color	Select an option from the drop-down menu to
	Color	change the color of the playback canvas grid.
	Gray Value/Line	Enter values in corresponding fields to adjust gray
	Width/Gap	value, line width, and gap of the playback canvas
	, ,	grid.
Grid		Enter a value in the field to adjust the time interval
	Time	at which the grid line style switches on the
		playback canvas.
	Horizon/Vertical/Left	Show/Hide playback canvas grid.
	Slash/Right Slash	
	Mix1/Mix2	Select and show multiple grid line styles.
	Picture Option	Select the Picture checkbox to display one or more
	·	pictures in the loop.
		Support preview of the first picture in the current
	Picture Preview	directory. Click the preview picture to choose a
		new directory path. Once a new directory is
Picture		selected, the display field will update to show the
		chosen path.
	Time(s)	Set the total display time for all pictures under the
		selected directory.
	Circle Time(s)	Set the display time for each picture under the
		selected directory.
Config	Save	Save the parameter settings from the AgingLine
		interface to a local file.
	Load	Load a local file to display the previously saved
		parameter settings on the AgingLine interface.
		Click to display the grayscale, band, grid, and
Start		picture sequentially based on the configured settings. During the loop, the Cycle Count and
		Cycle Time will be shown below the Start button.
End		Click to stop the loop.
LIIU		Click to stop the loop.

Table 7-6 Aging line

Position

Configure parameters according to actual cabinets and module information, mark the location of modules.

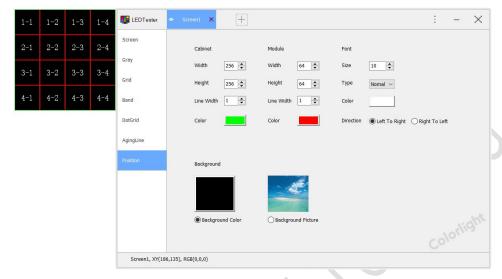


Fig 7.8 Position

For detailed information about **Position**, see Table 7-7.

Parameter	Description
Width	Set the width of cabinets and modules.
Height	Set the height of cabinets and modules.
Line Width	Set the line width of cabinets and modules.
Color	Set the color of cabinets and modules.
Size	Set the font size of module index.
Туре	Set the font type of module index.
Color	Set the font color of module index.
Direction	Set the order of module index.
Background	Sets the screen background. Supports for solid color background and
	custom background.

Table 7-7 Position

Context Menu

Right-click playback canvas to open context menu and do quick action.

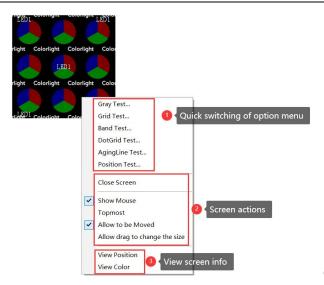


Fig 7.9 Context menu

- Quick switching of option menu: Click to switch option menu, and the screen switches to corresponding test mode.
- Screen operation: See Table 7-8 to learn about screen menu options.

Menu Item	Description
Close Screen	Close playback canvas and delete corresponding screens in
Close Screen	LEDTester.
Show Mouse	Select the Show Mouse checkbox to show cursor on the
Show Mouse	playback canvas.
Topmost	Select the Topmost checkbox to pin playback canvas.
Allow to be Moved	Select the Allow to be Moved checkbox and drag the
Allow to be moved	position of the playback canvas with mouse.
Allow drag to change	Select the Allow drag to change the size checkbox and resize
the size	Screen by dragging Screen frame with mouse.

Table 7-8 Menu Item

• Screen information viewing: Click options from the menu, navigate over the playback canvas to see the coordinate and color of the cursor.

8. Pixel-by-pixel Calibration

Title Bar

The title bar includes the following options: **LEDSetting** icon, interface title, **By Pixel** tab, **By Receiver** tab, **Deseam** tab, calibration mode switch, **Minimize/Maximize** icon, and **Close** icon.



• Switch between Calibration Modes: Click the : icon to quickly switch between Brightness Calibration and Chroma Calibration.

8.1 Quick Operations

8.1.1 Brightness/Chroma Calibration

Step 1: Go to the **By Pixel** tab and click **Getting Screen Information**, as shown in Fig 8.1.1.1.



Fig 8.1.1.1 Getting screen information

Step 2: Click of to set the size and coordinates of the calibration screen according to the actual screen, as shown in Fig 8.1.1.2.

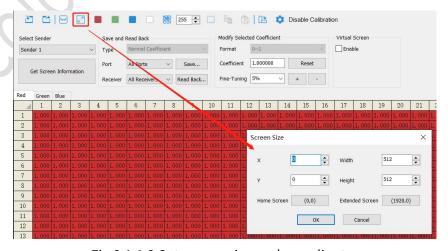


Fig 8.1.1.2 Set screen size and coordinates

Step 3: Click the **Import** icon to import brightness calibration coefficients. Alternatively, manually set coefficients in the coefficient adjustment area, as shown in Fig 8.1.1.3.

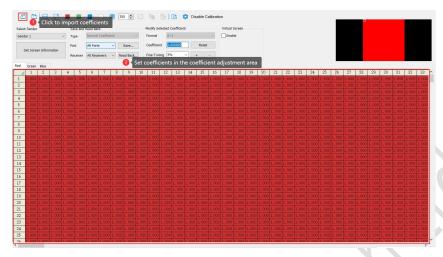


Fig 8.1.1.3 Set brightness calibration coefficient

Step 4: Click , and select **Set Calibration Switch** to open the **Calibration Settings** dialog box. Then, select the desired options under **Calibration Source** and **Calibration Mode**. As shown in Fig 8.1.1.4.

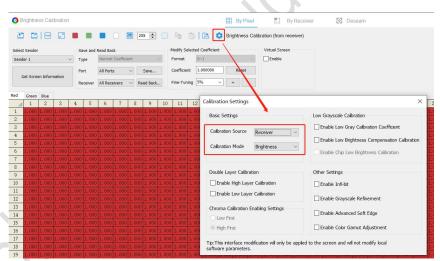


Fig 8.1.1.4 Enable brightness calibration of receiver card

Step 5: Select **Normal Coefficient** under **Save and Read Back**. Then, click **Save** to save the normal calibration coefficients, as shown in Fig 8.1.1.5.

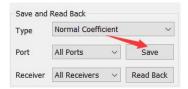


Fig 8.1.1.5 Save calibration coefficient

Step 6: Check the screen and enable calibration.

8.1.2 Gradient Adjustment

Step 1: Go to the **By Cabinet** tab and click **Get Screen Information**.

Step 2: Click of the size and coordinates of the calibration screen according to the actual screen.

Step 3: Click **Read Back** to retrieve the calibration coefficients, and select the receiver card you want to adjust the gradient for. Right-click the selected receiver card to open the context menu, then select **Gradient Adjustment**.

Step 4: Under **Gradient Adjustment**, enter the desired coefficient value. Click the **Apply Gradient** button to save the new coefficient values, as shown in Fig 8.1.2.1.

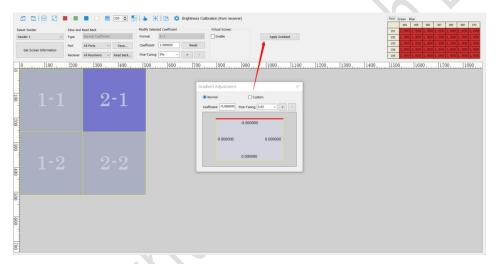


Fig 8.1.2.1 Set gradient adjustment coefficients

Step 5: Click , and select **Set Calibration Switch** to open the **Calibration Settings** dialog box. Then, select the desired options under **Calibration Source** and **Calibration Mode**.

Step 6: Under the **Save and Read Back** settings, select **Normal Coefficient** from the **Type** drop-down menu. Then, click **Save** to save the normal calibration coefficients, as shown in Fig 8.1.2.2.

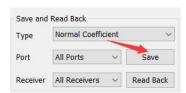


Fig 8.1.2.2 Save gradient adjustment coefficients

Step 7: Check the screen and enable calibration to view the effect after gradient

adjustment.

8.1.3 Deseam

Step 1: Go to the **Deseam** tab and click **Get Screen Information**.

Step 2: Click of the size and coordinates of the calibration screen according to the actual screen.

Step 3: Click to open the **Module Size** dialog box. Select the **Enable Module** checkbox, then set the module size as required, as shown in Fig 8.1.3.1.

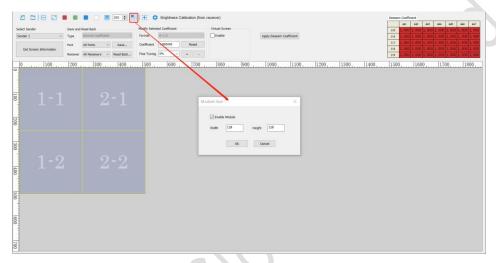


Fig 8.1.3.1 Set module size

Step 4: Click **Read** to retrieve the calibration coefficients, and select a seam. Under **Modify Selected Coefficient**, set coefficients as required. Then click **Apply Deseam Coefficient** to save the new coefficient value for the selected seam, as shown in Fig 8.1.3.2.

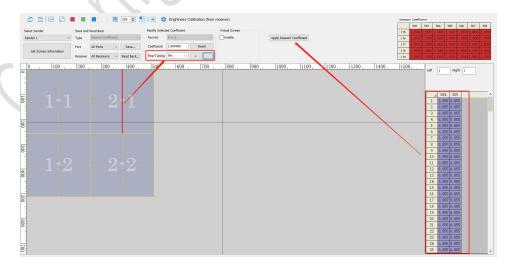


Fig 8.1.3.2 Set deseam coefficient

Step 5: Click , and select **Set Calibration Switch** to open the **Calibration Settings** dialog box. Then, select the desired options under **Calibration Source** and **Calibration Mode**.

Step 6: Under the **Save and Read Back** settings, select **Normal Coefficient** from the **Type** drop-down menu. Then, click **Save**, as shown in Fig 8.1.3.3.

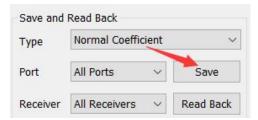


Fig 8.1.3.3 Save deseam coefficient

Step 7: Check the screen and enable calibration to view the effect after deseam adjustment.

8.2 Brightness Calibration

Brightness Calibration ensures highly consistent calibrated brightness of the screen by adjusting the brightness of the LED display. During adjustment, the maximum brightness of most LEDs needs to be lowered to an appropriate level. The brightness calibration coefficient has 3 components: R, G, and B.

8.2.1 By Pixel

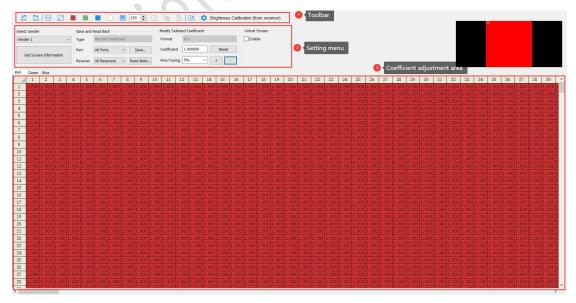


Fig 8.2.1.1 By Pixel

Toolbar

E: Click to open the drop-down menu, and select a desired option to import a local calibration coefficient file.

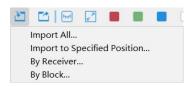


Fig 8.2.1.2 Import

The available options in the **Import** drop-down menu are described in Table 8.2.1-1 below.

Option	Description
Import All	Import all calibration coefficients, which will be automatically
Import All	cropped to match the calibration screen size.
Import to	Set initial coordinates and import the coefficients to the
Specified	Set initial coordinates and import the coefficients to the
Position	specified position.
Py Possivor	Import the calibration coefficients by receiver cards. The results
By Receiver	will be displayed in the list.
Dy Block	Import the calibration coefficients by block. The imported
By Block	coefficients will be assigned to their matching areas.

Table 8.2.1-1 Description of options in import drop-down menu

Procedures for Importing by Block

Step 1: Click to load a coefficient file, as shown in Fig 8.2.1.3.

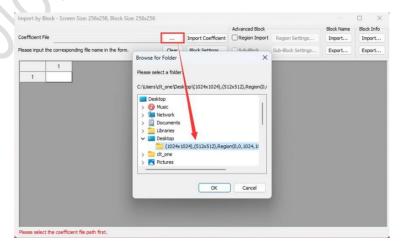


Fig 8.2.1.3 Load a coefficient file

Step 2: Enter parameter values in **Block Settings**, **Region Settings**, and **Sub-Block Settings** respectively, as shown in Fig 8.2.1.4.

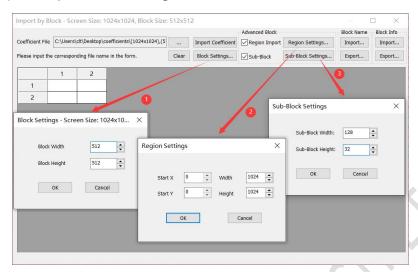


Fig 8.2.1.4 Set blocks

☐ Notes:

- 1. If the coefficient file you are loading contains certain regions or sub-blocks, the **Region Settings** and **Sub-Block Settings** must be set.
- 2. The block width and height cannot be larger than the coefficient file's block size.
- 3. The sub-block width and height cannot be smaller than the coefficient file' sub-block size.

Step 3: Click the **Import** button under **Block Name** or **Block Info** to import relevant files. Then click **Import Coefficient**, as shown in Fig 8.2.1.5.

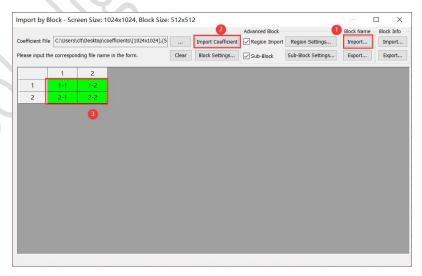


Fig 8.2.1.5 Import coefficients

A Note:

Successfully imported areas will have a green grid background; areas where import failed will have a red grid background.

: Click to open the drop-down menu, and select a desired option to export the calibration coefficients to a local file.

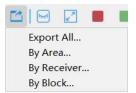


Fig 8.2.1.6 Export

The available options in the **Export** drop-down menu are described below in Table 8.2.1-2.

Option	Description
Export All	Export all coefficients.
By Area	Export the coefficients from a selected area.
Dr. Dogoissor	Export all coefficients by receiver card, with the coefficient file
By Receiver	name being "Port No Receiver No.".
D. Dissels	Click By Block to open the dialog box. Set the block parameters
By Block	and export the block coefficients to a local file.

Table 8.2.1-2 Description of options in export drop-down menu

: Click the icon to open the **Screen Size** dialog box, and enter parameter values to adjust the size and position of the calibration screen.

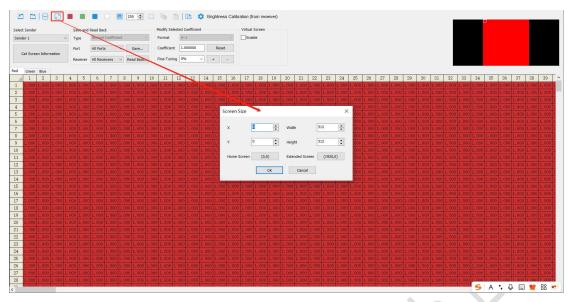


Fig 8.2.1.7 Set screen size and coordinates

E : Click to switch the corresponding color for the calibration screen. When linked with **Test Pattern**, this option allows you to change the sender's test pattern.

255 : Enter values in the input field to adjust the grayscale of the calibration screen.

Example 2: Links to the sender's test pattern. When selected, the sender's test pattern is enabled; when deselected, it is disabled. You can switch between different test patterns by cycling through red, green, blue, and white.

: Click to open the **Area Selection** dialog box, and enter values in the coordinate and size fields. Then, choose an area to apply the configuration.

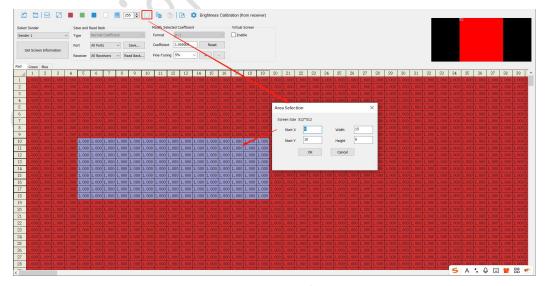


Fig 8.2.1.8 Area selection

🛅: After selecting a desired coefficient adjustment area, click this icon to copy the

real-time coefficients of the selected area.

is: After copying the coefficients, click this icon to paste the copied real-time coefficients.

: Click to open the **Rotate Calibration Coefficient** dialog box. Select a desired rotation option to load the coefficient file, and then click **OK** to generate a new coefficient file with the selected rotation applied.

• The size of the coefficient file must match that of the current screen.

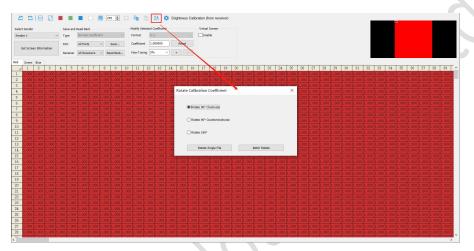


Fig 8.2.1.9 Rotate calibration coefficient

• : Click to configure **Calibration Settings**. The calibration status will be displayed on the right side of the icon.

- Disable Calibration Before getting screen information, the status of Disable
 Calibration is displayed; after getting screen information, the options of Calibration
 Mode and Calibration Source are displayed for the current LED screen.
- * : Click this icon to open a drop-down menu with 2 options: **Set Calibration Switch** and **Enable Simulate by PC**.
 - Set Calibration Switch: Click to open the Calibration Settings dialog box and select the checkbox for the desired calibration.

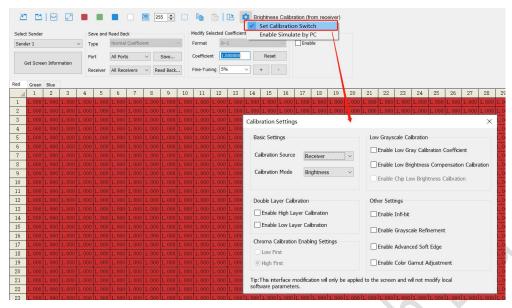


Fig 8.2.1.10 Calibration settings

■ Enable Simulate by PC: Select this option to view a simulated image on the calibration screen according to the calibration coefficients set in the coefficient adjustment area.

Settings Menu

- Select Sender
 - **Select Sender**: Select a sender as required from the drop-down menu.
 - **Get Screen Information**: Click this button to get screen information.

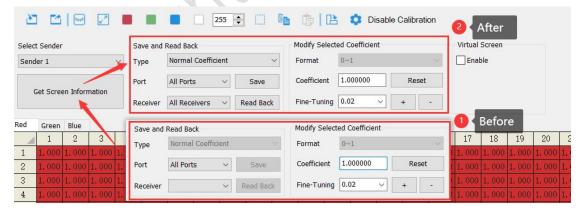


Fig 8.2.1.11 Get screen information

- Save and Read Back
 - **Type**: Select a calibration coefficient type.
 - **Port**: Select a port from the drop-down menu.
 - **Receiver**: Select a receiver card from the drop-down menu.
 - **Save**: Save calibration coefficients to the receiver card.

■ **Read Back**: Read back calibration coefficients from the receiver card and load them into the software.

Modify Selected Coefficient

■Format:

- ♦ When Normal Coefficient or Low Layer Coefficient is selected as the Type, the Format is set to 0~1 by default. The Format field will be grayed out and cannot be modified.
- ♦ When Chip Low Brightness Coefficient is selected as the Type, select an option from the Format drop-down menu to change the format of the calibration coefficients.



Fig 8.2.1.12 Set format for chip low brightness coefficient

Notes:

When changing the **Format** from $0\sim1$ to $0\sim63$, the following formula is used for coefficient conversion:

Extended coefficient = Original coefficient * 64

(When the **Format** is set to 0~63, each adjustment of the coefficient will increase or decrease the value by 1. The result will be rounded to the nearest integer.)

- Coefficient: Modify the coefficient in the input field; click Reset to reset all coefficients to their default values.
- Fine-Tuning: Modify the step in the input field or select a value from the drop-down options to adjust the fine-tuning step, then click + or to adjust the selected coefficients.

Virtual Screen

Procedures

Step 1: Select the **Enable** checkbox under **Virtual Screen** to turn on virtual screen calibration. This will display **Pixel Configuration Rule** and **Virtual Green** button in the interface, as well as the **Virtual Green** tab as shown in Fig 8.2.1.13.

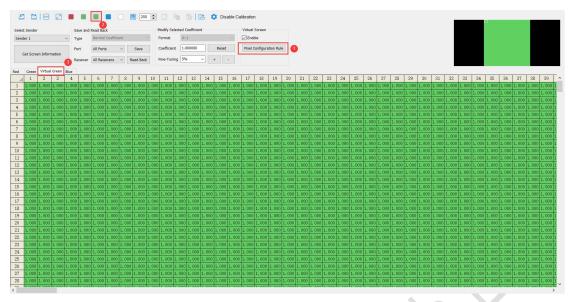


Fig 8.2.1.13 Enable virtual screen

Step 2: Click **Pixel Configuration Rule** to open the dialog box and select one of the rules as shown in Fig 8.2.1.14.

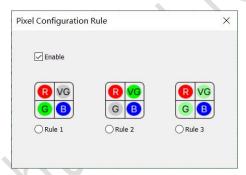


Fig 8.2.1.14 Pixel Configuration Rule

Step 3: Set the calibration coefficients and click **Save** to check the display effect.

Calibration Coefficient Adjustment Area

Each "cell" in the coefficient adjustment area represents a single pixel.

- Click a pixel: Select the coefficient for that pixel.
- Double-click a pixel: Edit the coefficient for the selected pixel.
- Keyboard shortcuts
 - CTRL+A: Select all coefficients.
 - CTRL+C: Copy the real-time coefficients of the selected area.
 - CTRL+V: Paste the previously copied real-time coefficients.

8.2.2 By Receiver

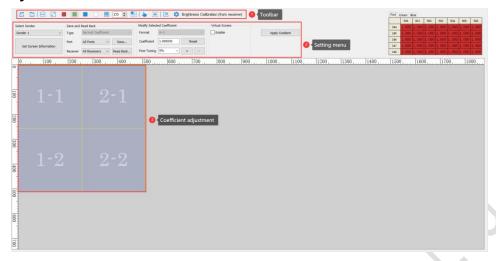


Fig 8.2.2.1 By receiver

Toolbar

The toolbar includes: Import, Export, Show/Hide Screen, Screen Size, 4 buttons for switching screen colors (Red, Green, Blue, White), Grayscale adjustment, Rotate, and Calibration Settings. For related functions, see Section 8.2.1 By Pixel.

: Click to open the **Module Size** dialog box, then enter the width and height.

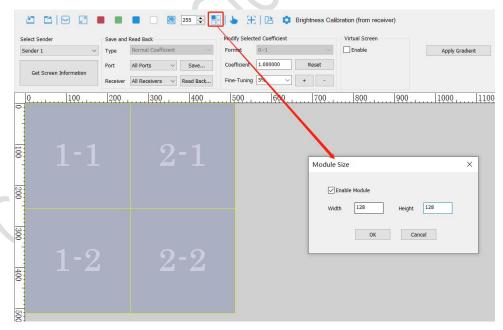


Fig 8.2.2.2 Set module size

•: Click this icon and select a receiver card. The selected receiver card will be displayed in highlight mode.

: Click this icon to display a cross cursor in the coefficient adjustment area. The values of the coefficients where you place the cross cursor will be shown in the top-right preview area.

Settings Menu

The functions are the same as the **By Pixel** settings menu. See Section 8.2.1 **By Pixel** for details.

• Apply Gradient: After making gradient adjustments to the coefficients in the selected area, click Apply Gradient to apply the gradient coefficients to the calibration coefficients.

Coefficient Adjustment Area

• If **Enable Module** is unselected:

Select a receiver card area, then right-click to display the menu.

Сору	
Paste	
Save Normal Coeffici	ent to Receiver
Save Low Layer Coef	ficient to Receiver
Save Chip Low Bright	tness Coefficient(CHIPONE) to Receiver
Read Back Receiver N	Normal Coefficient
Read Back Receiver L	ow Layer Coefficient
Read Back Receiver (Chip Low Brightness Coefficient(CHIPONE)
Import by Receiver	
Export by Receiver	
Gradient Adjustment	·

Fig 8.2.2.3 Receiver card context menu

The options under the context menu of the receiver card are described in Table 8.2.2-1.

Option	Description
Conv	Copy the real-time coefficients of the selected receiver
Сору	card area.
Paste	Paste the copied real-time coefficients.
Save Normal Coefficient to	Save the normal coefficient to the selected receiver
Receiver	card.
Save Low Layer Coefficient	Save the low layer coefficient to the selected receiver
to Receiver	card.

Save Chip Low Brightness	Save the chip low brightness coefficient to the
Coefficient to Receiver	selected receiver card.
Read Back Receiver Normal	Read back the normal coefficient of the selected
Coefficient	receiver card.
Read Back Receiver Low	Read back the low layer coefficient of the selected
Layer Coefficient	receiver card.
Read Back Receiver Chip	Read back the chip low bright coefficient of the
Low Brightness Coefficient	selected receiver card.
Import by Possiver	Import the coefficients to the selected receiver card
Import by Receiver	area.
Evport by Possivor	Export the coefficients from the selected receiver card
Export by Receiver	area and save them to a local file.
	Perform gradient adjustments on the coefficients of
Gradient Adjustment	the selected receiver card area (Ensure that the virtual
	screen calibration function is disabled).

Table 8.2.2-1 Description of receiver card context menu

• If **Enable Module** is selected:

Select an area for the module, then right-click to display the menu.

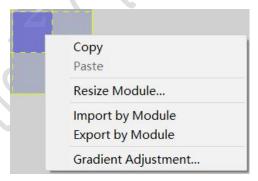


Fig 8.2.2.4 Module context menu

The options in the Module context menu are described in Table 8.2.2-2.

Option	Description
Сору	Copy the real-time coefficients of the selected receiver card area.
Paste	Paste the real-time coefficients of the copied area.
Resize Module	Open the Module Size dialog box.
Import by	
Module	Import the coefficients to the selected module area.

Export	by	Export the coefficients from the selected module area and save
Module		them to a local file.
Gradient		Perform gradient adjustments on the coefficients of the selected
Adjustment	t	module area.

Table 8.2.2-2 Description of module context menu

8.2.3 Deseam

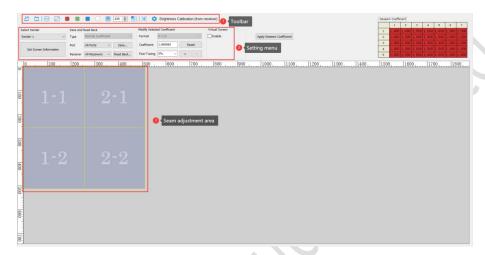


Fig 8.2.3.1 Brightness Calibration - Deseam

Toolbar

See Sections 8.2.1 By Pixel and 8.2.2 By Receiver for details.

Settings Menu

See Section 8.2.1 By Pixel for details.

- Reset: Reset the deseam coefficients of all seams or selected seams.
- Apply Deseam Coefficient: After adjusting the coefficients for the selected seam, click Apply Deseam Coefficient to apply the deseam coefficients to the calibration coefficients.

Coefficient Adjustment Area

- Deseam settings: Select a seam to adjust its settings for range and coefficients.
 - Deseam range settings: The Seam Settings area is located to the right or below the coefficient adjustment area. Here, you can enter desired values for Left/Right to adjust the width of the seam range, and enter desired values for Start/End to adjust where the seam is positioned.

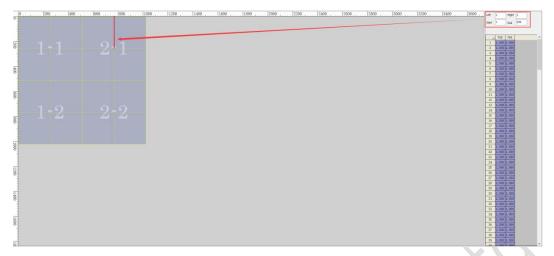


Fig 8.2.3.2 Deseam range settings

■ Deseam coefficient settings: Under **Modify Selected Coefficient**, enter values in the input filed of **Coefficient** to set the deseam coefficient.

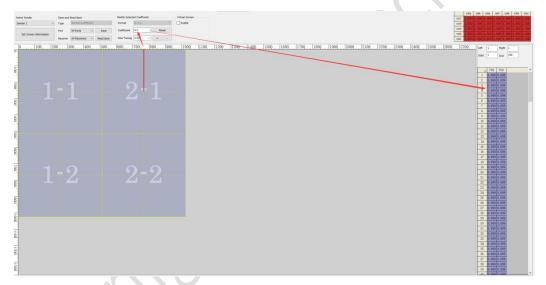


Fig 8.2.3.3 Deseam coefficient settings

■ Context menu: Select a seam and right-click to display the context menu.



Fig 8.2.3.4 Seam context menu

The options under the seam context menu are described in Table 8.2.3-1.

Option		Description
Resize Module		Open the Module Size dialog box.
Import	Deseam	Import deseam coefficients to the position where the selected
Coefficient		seam is located.
Export	Deseam	
Coefficient		Export deseam coefficients to a local file.

Table 8.2.3-1 Description of seam context menu

A Note:

- When exporting deseam coefficients, the corresponding seam positions will be automatically saved with the coefficients.
- When importing deseam coefficients, you need to manually enter the deseam positions to match the correct positions.

8.3 Chroma Calibration

Chroma calibration is based on the fundamental principle of chroma compensation, which involves compensating for each primary color by two additional primary colors and adjusting the colors through mixing. Chroma calibration consists of 9 components: Rr, Rg, Rb, Gr, Gg, Gb, Br, Bg, and Bb.

This chapter only introduces the functions of **Color Gamut Adjustment** and **Batch Adjustment**. For the remaining functions, see Section 8.2 **Brightness Calibration**.

8.3.1 Color Gamut Adjustment

: Go to the **By Pixel** tab and click this button to open the **Color Gamut Adjustment** dialog box.

Step 1: Click the **Original Value** tab to obtain the color gamut of the current screen.

As shown in Fig 8.3.1.1, there are 4 ways to obtain the color gamut of the receiver card:

- Edit the input values in the table.
- Click **Measure** to measure the color gamut using a colorimeter.
- Import color gamut data.
- Read back data directly from the receiver card.

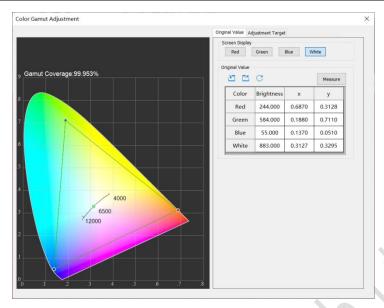


Fig 8.3.1.1 Obtain original color gamut

Note:

If the screen is already calibrated, first read back the calibration coefficients before adjusting the color gamut. Based on your specific needs, determine if recalibration is necessary. After that, you can proceed with adjusting the color gamut.

Step 2: Select the **Adjustment Target** tab to set the target color gamut.

As shown in Fig 8.3.1.2, there are 3 ways to set the target gamut:

- Choose a target color gamut option.
- Edit the input values in the table.
- Import a target color gamut.

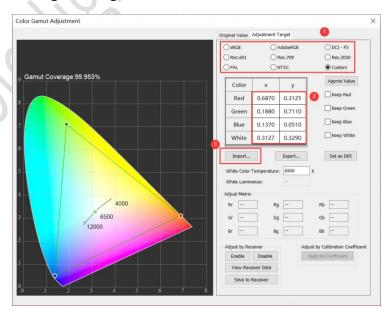


Fig 8.3.1.2 Set target color gamut

Step 3: Click **Approx Value** and select the checkboxes for **Keep Red, Keep Green, Keep Blue, Keep White,** or **Set as D65** based on your actual requirements. This will automatically generate an adjust matrix, as shown in Fig 8.3.1.3.

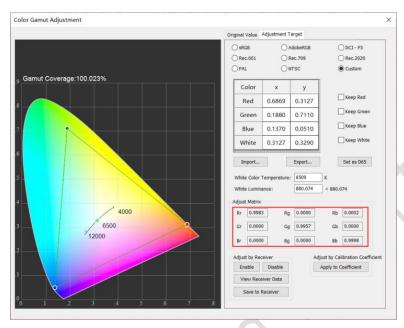


Fig 8.3.1.3 Generate adjust matrix

Step 4: Select a desired mode between **Adjust by Receiver** and **Adjust by Calibration Coefficient**.

◆ Adjust by Receiver

Click **Enable**, then click **Save to Receiver** to complete the color gamut adjustment for the receiver card. Check the screen to see the effect of the color gamut adjustment, as shown in Fig 8.3.1.4.



Fig 8.3.1.4 Adjust by receiver

◆ Adjust by Calibration Coefficient

Click **Apply to Coefficient,** then enable **Chroma** and click **Save Calibration Coefficient** to save the adjusted coefficient. Check the screen to see the effect of the color gamut adjustment.

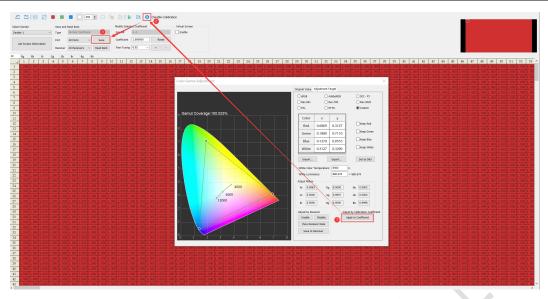


Fig 8.3.1.5 Adjust by calibration coefficient

8.3.2 Batch Adjustment

: Go to the **By Cabinet** tab and click this icon to open the drop-down menu. Batch adjustments can be made in **Settings**.

Step 1: Click and select **Settings** to open the **Batch Adjustment Settings** dialog box. Select an adjustment mode, add a batch, and modify input values or import batches to set batch information, as shown in Fig 8.3.2.1.

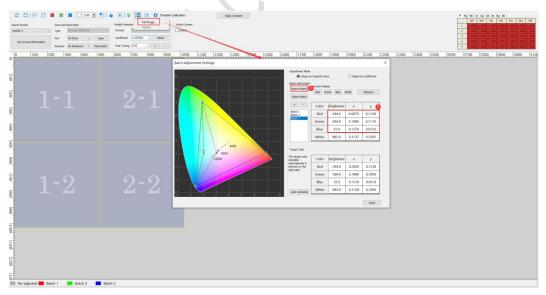


Fig 8.3.2.1 Set batch information

A Note:

If the screen is already calibrated, first read back the calibration coefficients before making batch adjustments. Then, determine whether calibration needs to be performed again based on your specific needs. After that, you can proceed with making batch adjustments.

Step 2: Close the **Batch Adjustment Settings** dialog box. Then, select a receiver card, right-click and select **Specify Batch** to perform batch designation on the selected card, as shown in Fig 8.3.2.2.

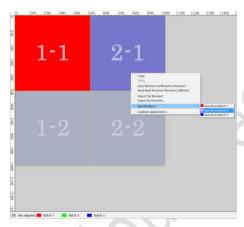


Fig 8.3.2.2 Specify batch

Step 3: Click and select **Apply**. In the drop down menu that appears, select a mode, as shown in Fig 8.3.2.3.

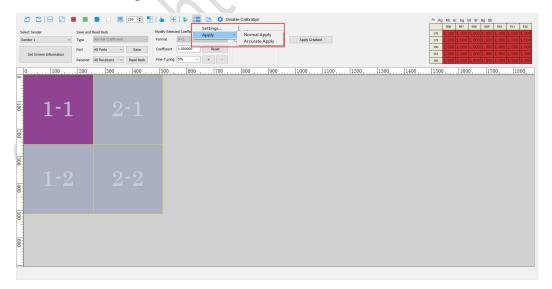


Fig 8.3.2.3 Batch adjustment mode selection

Step 4: You can choose between normal application and accurate application. The operations for each are as follows.

Normal Application

Supports both calibration coefficients and color gamut adjustments.

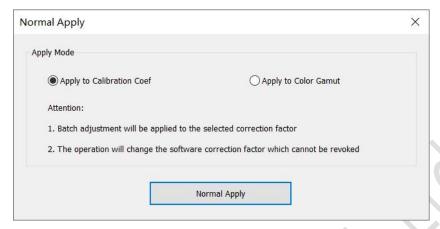


Fig 8.3.2.4 Normal application – Apply to calibration coefficients

Apply to Calibration Coefficients

Apply the batch adjustment information to the calibration coefficients, enable **Chroma Calibration**, and save the calibration coefficients to the receiver card. Then, review the adjusted results.

Apply to Color Gamut

Apply batch adjustment information to the receiver card's adjustment matrix and save it to the receiver card.

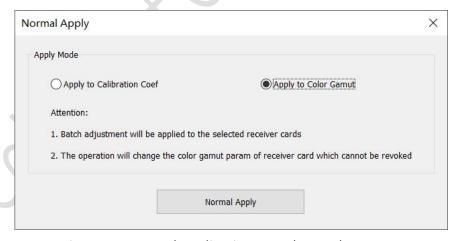


Fig 8.3.2.5 Normal application – Apply to color gamut

Accurate Application

Supports both calibration coefficients and color gamut adjustments. Before application, select a desired batch adjustment mode. Once application, the batch adjustment mode cannot be changed.

Apply to Calibration Coefficients

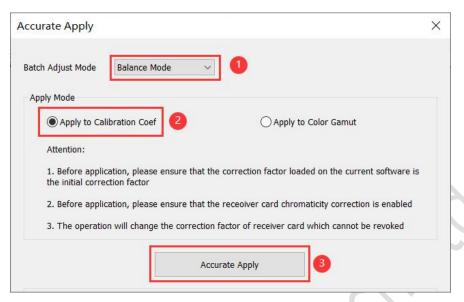


Fig 8.3.2.6 Accurate application – Apply to calibration coefficients

Step 1: Select a desired batch adjustment mode, then choose **Apply to Calibration Coef** and click **Accurate Apply**. The calibration coefficients will be saved to the receiver card of the current batch.

Step 2: After saving, aim the color meter at the cabinet of the current batch and measure its color gamut.

Step 3: The software will automatically calculate the deviation between the measured value and the target color gamut. If the deviation meets the criteria (brightness < 1%, chroma < 0.3%), the measurement for the current batch is complete. If not, iterative measurements will automatically proceed, recalculating and saving the chroma coefficients.

Step 4: Repeat Step 3 until the deviation meets the criteria or the iteration count exceeds 5, then complete the current batch adjustment.

Step 5: Once all batches are measured, the process will be completed.

Apply to Color Gamut

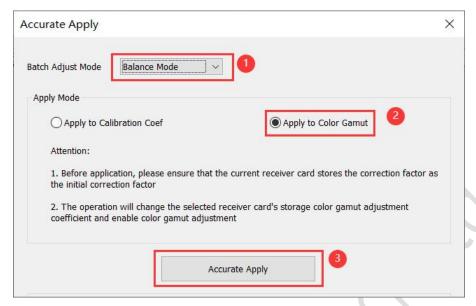


Fig 8.3.2.7 Accurate application – Apply to color gamut

Step 1: Select a desired batch adjustment mode, then choose **Apply to Color Gamut** and click **Accurate Apply**. The adjustment matrix will be saved to the receiver card of the current batch.

Step 2: After saving, aim the color meter at the cabinet of the current batch and measure its color gamut.

Step 3: The software will automatically calculate the deviation between the measured value and the target color gamut. If the deviation meets the criteria (brightness < 1%, chroma < 0.3%), the measurement for the current batch is complete. If not, iterative measurements will automatically proceed, recalculating and saving the adjustment matrix.

Step 4: Repeat Step 3 until the deviation meets the criteria or the iteration count exceeds 5, then complete the current batch adjustment and begin measuring the next batch.

Step 5: Once all batches are measured, the process will be completed.

8.4 Special Calibration

8.4.1 Double Layer Calibration

■ Brightness Calibration

Step 1: Go to Receiver Parameters > Calibration Settings to enable Low Layer

Grayscale and **High Layer Grayscale** under **Double Layer Calibration**. Specify the threshold values under **Brightness Threshold Adjustment**. Then click **Save to Receiver**, as shown in Fig 8.4.1.1.

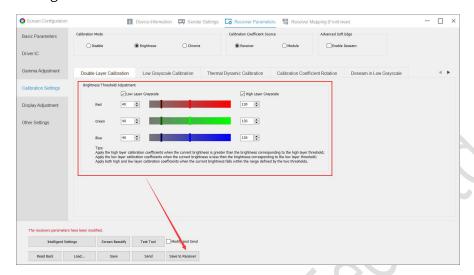


Fig 8.4.1.1 Brightness – Enable double layer calibration

Step 2: Go to Pixel-by-pixel Brightness Calibration, and click Get Screen Information.

To set the high layer coefficient:

- Select the **Normal Coefficient** type.
- Click Save to apply the high layer coefficient.

To set the low layer coefficient:

- Select the **Low Layer Coefficient** type.
- Click **Save** to apply the low layer coefficient.



Fig 8.4.1.2 Save high/low layer coefficients

Step 3: Adjust the grayscale range for corresponding threshold values and check the display effect.

■ Chroma Calibration

After enabling **Double Layer Calibration**, you can choose **High First** or **Low First** under **Chroma**. The display effect is as follows:

- ◆ For main components (Rr, Gg, and Bb): The display matches the threshold settings you configured.
- ◆ For minor components (Rg, Rb, Gr, Gb, Br, and Bg):

If you select **Low First**: The minor components use only the low layer calibration coefficients.

If you select **High First**: The minor components use only the high layer calibration coefficients.

8.4.2 Chip Low Brightness Calibration

Step 1: Click **Get Screen Information**. To set the calibration coefficient, select **Chip Low Brightness Coefficient** as the type, then click **Save**, as shown in Fig 8.4.2.1.

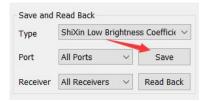


Fig 8.4.2.1 Save chip low brightness coefficient

Step 2: Click and select **Set Calibration Switch** to open the **Calibration Settings** dialog box. Select the checkbox for **Enable Chip Low Brightness Calibration**, as shown in Fig 8.4.2.2.

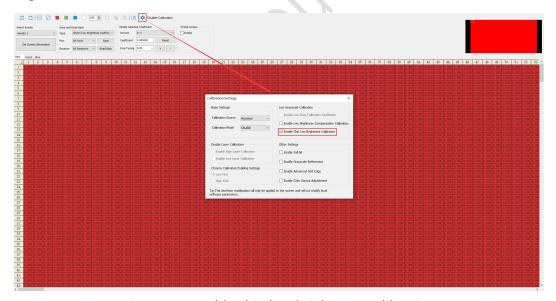


Fig 8.4.2.2 Enable chip low brightness calibration

Step 3: View the effect of chip low brightness calibration on the screen in low grayscale.

8.4.3 Coefficient Backup

Coefficient Backup allows you to save a copy of the calibration coefficients in the

backup area of the receiver card.

If the coefficients in the application area of the receiver card get changed, you can click **Restore Backup** to restore the coefficients from the backup area back to the application area. This will restore the calibration effect.

■ Enable Coefficient Backup

Enter "dkbf" under **Basic Parameters** and press **Enter** to enable the coefficient backup function in **Brightness Calibration**, as shown in Fig 8.4.3.1.



Fig 8.4.3.1 Enable coefficient backup

Note:

For a receiver card program that supports coefficient backup, a **Restore Backup** button will appear under the calibration settings area.

8.4.4 Sender Cascading Calibration

Step 1: Double-click on **Brightness/Chroma** under **Pixel-by-Pixel Calibration** in the main interface to set parameters under **Sender Offset Setting**. Then, click **OK** to access the **Brightness/Chroma Calibration** interface, as shown in Fig 8.4.4.1.

(Note: Normally, no offset adjustment is required. Only if the physically connected LED display has an offset do you need to adjust the offset value to match your particular setup.)



Fig 8.4.4.1 Sender offset setting

Step 2: Click **Get Screen Information**. Then click of the calibration screen according to the actual screen.

Step 3: Select the desired options under Type and Format for calibration coefficients.

Step 4: Import the calibration coefficients, or set the calibration coefficients in the coefficient adjustment area.

Step 5: Click and select **Set Calibration Switch** to open the **Calibration Settings** dialog box. Then, select the desired options under **Calibration Source** and **Calibration Mode**.

Step 6: Switch between different senders and save its calibration coefficients to the corresponding receiver card. Then, check the display effect on the corresponding LED screen, as shown in Fig 8.4.4.2.

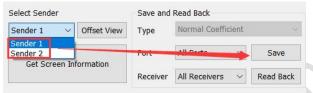


Fig 8.4.4.2 Save calibration coefficients for different senders

9. Multi-function Card

The iM9 Multi-function Card is an important accessory of the Colorlight control system for environmental monitoring and remote control. iM9 can monitor the operating environment of the LED displays in real time. This chapter introduces version 2.0 of the iM9.

9.1 Sensor Information

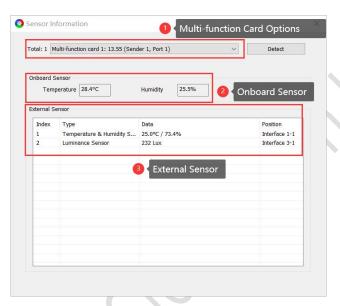


Fig 9.1.1 Sensor information

Multi-function Card Options

- Quantity: Display the total number of connected multi-function cards.
- Dropdown menu: Switch between the dropdown options, with the interface displaying the corresponding sensor information for the selected multi-function card.
- Detect: Click to detect multi-function cards and refresh the interface.

Onboard Sensor

The multi-function card contains built-in onboard sensors that measure temperature and humidity. The software automatically reads data from these sensors.

External Sensor

The description for items under **External Sensor** is shown in Table 9.1-1.

Item	Description	
Index	Display the external sensor index.	
	Display the sensor type. The supported sensors include brightness	
Type	sensors, temperature and humidity sensors, noise sensors, smoke	
	sensors, and air quality sensors.	
Data	Display the environmental information detected by the external sensors.	
Position	Display the physical interface positions for the external sensors on the	
	multi-function card.	

Table 9.1-1 Description of external sensor

9.2 Relay Control

Multi-function Card Time

This feature is used for the timing control function of Relays J9~J12 on the multi-function card.



Fig 9.2.1 Multi-function card time

- **Time**: Show the internal clock from the selected multi-function card.
- Read Time: Read the current time from the selected multi-function card and update with the latest time.
- Sync with PC Time: Sync the selected multi-function card with the local PC time.

Factory Reset

Click **Factory Reset** to clear the commands that have been set for the multi-function card.

Screen Power

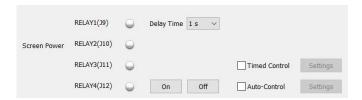


Fig 9.2.2 Screen power

• Click the On/Off button to turn on/off screen power manually. Select an option

from **Delay Time** to change the time intervals for manually closing/opening J9~J12.

- Timed Control: Enable Timed Control to set timed control commands.
- Timed control command: Relays J9~J12 will execute the command at the time specified in **Timed Command**.

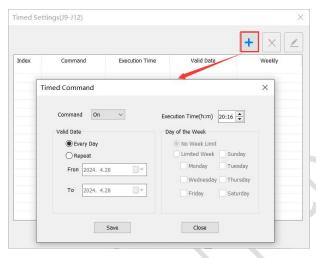


Fig 9.2.3 Set timed command

• Auto-Control: Enable **Auto-Control** to set an automatic control demand.

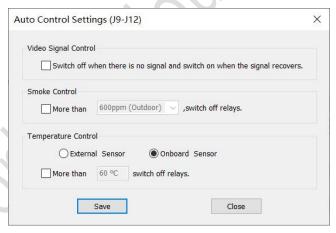


Fig 9.2.4 Auto-control settings (J9-J12)

J13-J16



Fig 9.2.5 J13~J16

- Click the On/Off button to control the relay to turn on/off.
- Auto-Control: Enable Auto-Control to set an auto-control command for the designated relay.

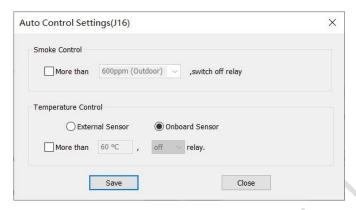


Fig 9.2.6 Auto-control settings

9.3 Auto Brightness Adjustment

Auto Brightness Adjustment

Select the checkbox for **Enable Automatic Adjustment** to enable auto brightness adjustment. When environmental illumination cannot be collected, the display brightness will be adjusted to the level set under **Cannot Collect Illumination**, **Set The Brightness To**:

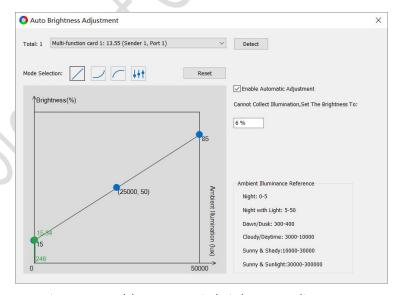


Fig 9.3.1 Enable automatic brightness adjustment

- Mode Selection: Click one of the 4 mode icons of the 4 mode icons to apply corresponding brightness adjustment curve: Linear, Gamma, Anti Gamma, and Custom.
- Reset: Click to reset the curve under the corresponding mode.

 Curve adjustment panel: The horizontal axis represents Ambient Illumination levels, while the vertical axis represents Brightness levels. You can drag the blue dot points on the curve to modify the automatic brightness adjustment curve.

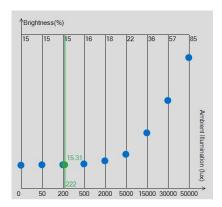


Fig 9.3.2 Curve adjustment panel

- Blue curve: Edit the shape of the **Ambient Illumination Brightness** curve.
- Green line: Show the detected illumination level and the corresponding brightness level of the sender on the automatic adjustment curve.

9.4 Troubleshooting

- Issue 1: After commands are sent from the controller or serial port, the commands are not executed.
- 1.Use a serial debugging assistant (for example, UartAssist) to check and configure the serial port settings:
- Select a COM number from the **PortNum** drop-down menu.
- Configure the serial port parameters, as shown in Fig 9.4.1.



Fig 9.4.1 Set serial port parameters

- 2.To check if the serial port driver is installed:
- Go to This PC > Manage > Device Manager > Ports (COM & LPT);
- Confirm that the serial port listed under **Ports** corresponds to the port selected in the serial debugging assistant, as shown in Fig 9.4.2.



Fig 9.4.2 Serial port number identification

- 3. Disable Auto-control command on the multi-function card;
- 4.If commands are issued via the serial port and a correct return value is received but the command is not executed, there are 2 possibilities to check:
- The same command is being sent repeatedly.
- The relay is damaged.
- 5. Manually turn the relay on/off to check if the relay is functioning properly.
- 6.Ensure the serial port cable is within the 10 meters limit.
- 7. Adopt the correct wiring method if an adapter cable is used.
- Issue 2: The screen brightness level does not change automatically after configuring Auto Brightness Adjustment.
- 1.Check if the automatic brightness adjustment curve of the multi-function card is configured correctly.
- 2. Check the sensor information on the multi-function card to determine:
- If the brightness sensor can be detected correctly.
- If ambient illumination levels can be measured accurately.
- 3. Confirm that the multi-function card is connected to Port1 on Sender1.
- Issue 3: Relays J9~J12 are not responding as expected to control signals from the host computer.
- 1. Check the multi-function card and verify if it can communicate properly with the sender.
- 2.Check the video source interface of the sender and modify parameters under the icon if necessary.
- 3. Manually turn the relay on/off to check if the relay is functioning properly.
- Issue 4: The timed control controls set for the multi-function card are not functioning.

1.Confirm that the internal clock is working properly by reading the date and time from the multi-function card multiple times.

- 2.Confirm that the timed commands have been successfully saved to the multi-function card.
- 3. Manually turn the relay on/off to check if the relay is functioning properly.

10. Monitor

The **Monitor** interface is comprised of 4 key components: Settings, log, toolbar, and information preview area. Its primary function is to monitor connected devices and ensure they are operating normally. The interface constantly monitors device activity, and if any abnormalities are detected, the user is immediately notified via email. This feature helps prevent adverse consequences that may result from device malfunctions.



Fig 10.1 Monitor interface

Step 1: Navigate to the **Monitor** interface to turn Monitor on. Then confirm that all devices are connected well.

Step 2: Click **Settings** to open the **Monitoring Settings** dialog box. Configure the settings for **Monitoring Item, Parameter Range** and **Email Settings**, as shown in Fig 10.2.

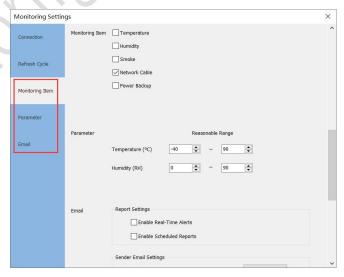


Fig 10.2 Set monitoring item

Step 3: Navigate back to the **Monitor** interface to access and view the monitoring information of the connected devices.

10.1 Toolbar

The toolbar includes a sender selection area, **Reset Cable Status** button, Monitor on/off switch, and 3 icons for preview modes.



Fig 10.1.1 Monitor configuration

- Sender selection area: Display all cascaded senders. Select a sender to view its monitoring information. If a sender is not connected, the displayed. If a sender has no signal, the icon will be displayed.
- Reset Cable Status: Click this button to reset the network packets and error packets for the receiver under the selected sender.
- Monitor Off (Default): Click to turn on Monitor.
- •3 preview modes available: Graphics, List, and Briefing.

10.2 Monitor Preview Area

The preview area displays the information of every connected device. If any device issues are detected, a status banner will scroll at the bottom of the preview area, showing the total number of monitors as well as the number of abnormal monitors.

• Graphics mode: Display the mapping diagram of the receivers, showing the cascading order of senders from top to bottom in the preview area.

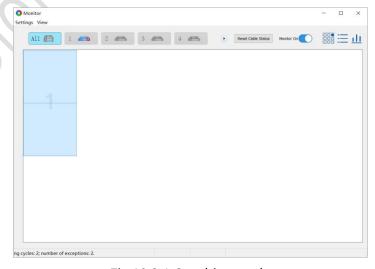


Fig 10.2.1 Graphics mode

• List mode: Display the receiver information in a list organized by the cascading order of their corresponding senders and network port numbers. When abnormalities are monitored, the corresponding list items for those receivers will be highlighted in red.

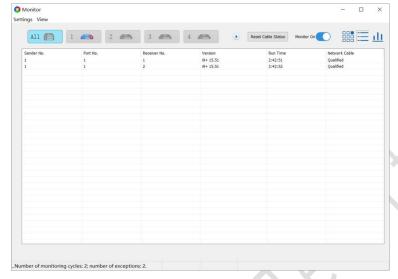


Fig 10.2.2 List mode

• Briefing mode: Display port information in a briefing format organized by the cascading order of their corresponding senders.

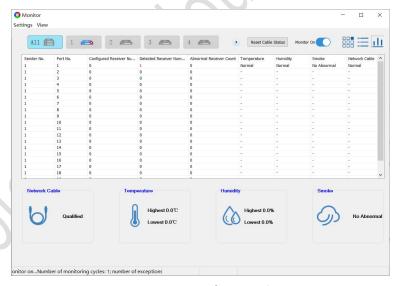


Fig 10.2.3 Briefing mode

10.3 Monitoring Settings

It includes Connection Settings, Refresh Cycle, Monitoring Item, Parameter Range, and Email Settings.

Connection Settings

It supports setting the number of cascaded senders and viewing the number of receivers connected to each sender.

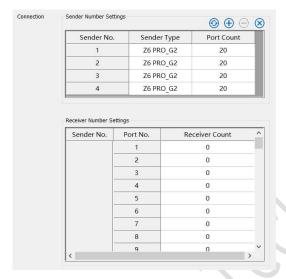


Fig 10.3.1 Connection settings

- ②: Click this icon to refresh the **Connection Settings** interface.
- ①: Click this icon to open the **Sender Connection Settings** dialog box, and set the type and number of the sender.

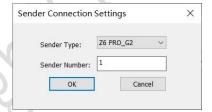


Fig 10.3.2 Sender connection settings

- \bigcirc : Click this icon to delete the selected sender.
- 🕸: Click this icon to delete all senders.

Refresh Cycle

Set the time for the software to automatically detect the monitoring information.

Monitoring Item

To monitor temperature, humidity, smoke, network cable, and power backup, select the corresponding checkboxes.



Fig 10.3.3 Monitoring item

Parameter Range

Specify the range for monitoring temperature and humidity.



Fig 10.3.4 Parameter range

Email Settings

Monitoring results can be notified to users via email, reminding users to follow up in time. This allows users to choose between 2 notification modes: **Enable Real-Time Alerts** and **Enable Scheduled Reports**.

- Enable Real-Time Alerts: Select this option to receive an email notification if any monitored items exceed their exception thresholds.
- Enable Scheduled Reports: Select this option to receive regular monitoring reports by email on a scheduled basis.
- Sender Email Settings: Set the Sender's email information.

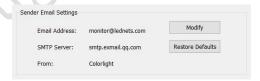


Fig 10.3.5 Sender email settings

• Receiver Email Settings: Enter the user's email address.

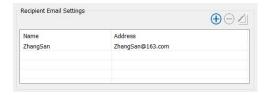


Fig 10.3.6 Recipient email settings

• Send Test Email: Click this button to send a test email to the receiving party's inbox.

10.4 View History Exceptions and Email Log

Click **View** and then select **View History Exceptions**. This will display the abnormal information of the device recorded after enabling monitor.

Receiver

This feature allows you to view the exceptions monitored by the receiver during a specified time period.

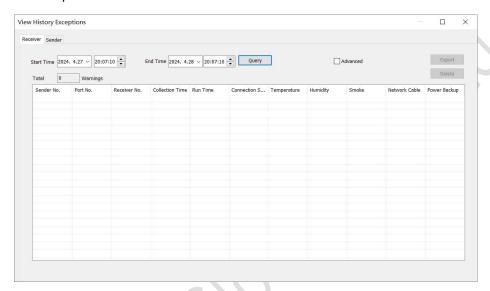


Fig 10.4.1 Exceptions from the receiver

- Query: Set Start Time and End Time, click Query to view abnormal information of the receiver within this time period.
- Advanced: Select the checkbox for Advanced to specify the port the sender should use for queries.
- Export: Click the button to export the information in the table and save it to a local file.
- Delete: Click the button to delete all contents in the table.

Sender

This feature allows you to view the exceptions monitored by the sender between selected dates/times.

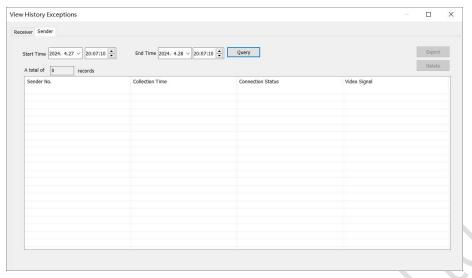


Fig 10.4.2 Exceptions from sender

View Email Log

Click **View** and then select **View Email Log**. This will display all emails sent during monitoring.

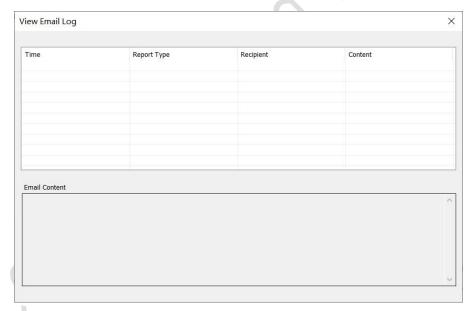


Fig 10.4.3 Email log

11. Smart Module

11.1 Screen Connection

Prerequisite: Go to Screen Configuration > Receiver Parameters > Smart Module Settings. Enter the desired parameter values and then save them to the receivers.

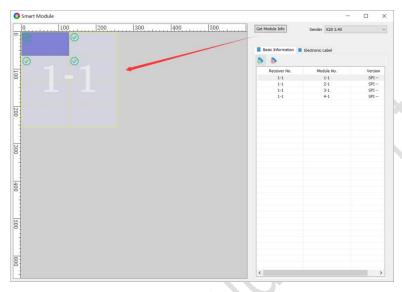


Fig 11.1.1 Smart module information

- Get Module Info: Click this button to get the smart module information of the selected sender.
- Drawing area: Show the detected smart modules. Modules that are valid and working properly can be selected. Modules that are invalid or not working will be grayed out and cannot be selected.

11.2 Basic Information

- ⇒: Click ⇒, and the icon of ✓ will appear at the top left corner of any valid module within the drawing area.
- Solution is a simple of the street of the street

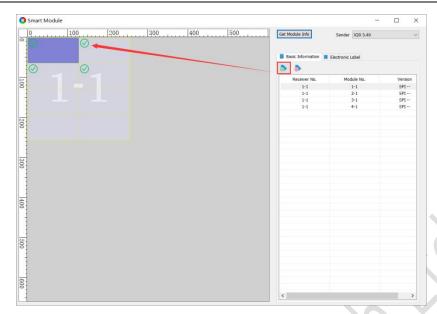


Fig 11.2.1 Mark valid module

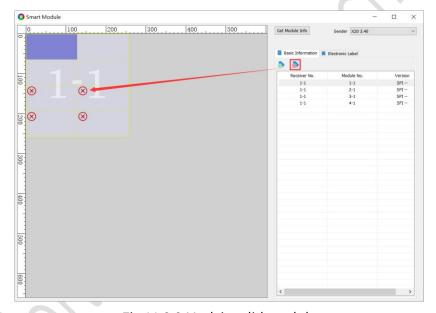


Fig 11.2.2 Mark invalid module

The list on the right side displays information of valid modules. The description of the list field is shown in Table 11.2-1.

List Field	Description
Receiver No.	Display the sender's "Port No. –Receiver No.".
Module No.	Consistent with the smart module number set in Receiver
	Parameters.
Version	Display the version of smart modules.

Table 11.2-1 Description of list field

11.3 Electronic Label

Click | Electronic Label to switch to the Electronic Label tab.

Functions

is Select a smart module, then click the icon to import the electronic label from a local file.

: Select a smart module, then click the icon to export the electronic label of a smart module to a local file.

Delete All: Click to delete the electronic labels of all smart modules.

Write: Click to write the electronic label to the selected smart module.

Descriptions of the electronic labels are shown in Table 11.3-1.

Parameter	Description
Module ID	Enter an intelligent module ID.
Brightness and Colo	Enter the desired brightness and color parameters
(Before Calibration)	before calibrating the screen.
Brightness and Colo	Enter the desired brightness and color parameters after
(After Calibration)	calibrating the screen.
Note	Enter a remark for the selected smart module.

Table 11.3-1 Description of electronic labels

• Electronic Labels Writing Procedures

Step 1: Select a module and click **Read**, as shown in Fig 11.3.1.

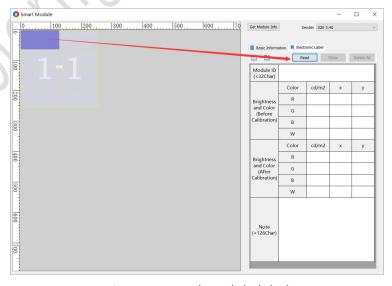


Fig 11.3.1 Read module label

Step 2: Click the **Import** icon above the table or enter the label information directly in the table, as shown in Fig 11.3.2.

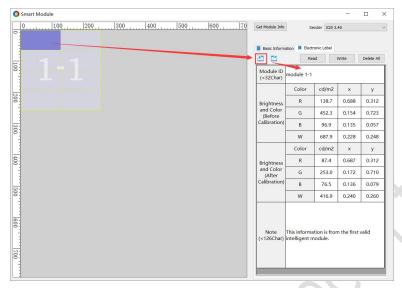


Fig 11.3.2 Import electronic labels

Step 3: Click **Write** to write the electronic label to the selected module. Once the label is written, the icon will be displayed at the top left of the module in the drawing area, as shown in Fig 11.3.3.

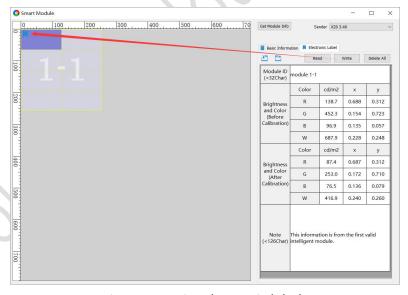


Fig 11.3.3 Write electronic labels

12. Pixel-by-Pixel Detection

This feature allows for detecting if any LED beads are malfunctioning. It will display the number of red, green, and blue beads detected as dead pixels in the **Dead Pixels Detected** list. To use this function, you need a compatible LED cabinet and the receiver program.

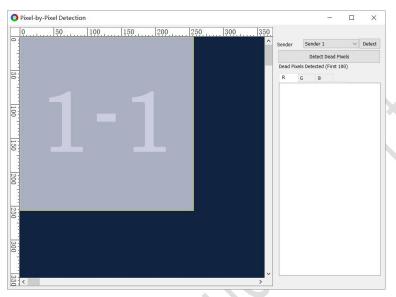


Fig 12.1 Pixel-by-pixel detection

- Detect: Detect all senders.
- Detect dead pixels: Click this button to perform a pixel-by-pixel detection of the selected sender, and display the number of malfunctioning LED beads.
- Information area: Display the number of malfunctioning LED beads detected for the selected sender. The totals are shown under the R, G, and B categories respectively.
- Preview area: Display the mapping diagram of the currently senders.

13. Prestored Image

13.1 Prestore Screenshot

- Unselect the checkbox next to **LEDSetting is generating prestored image**. Click the **Capture** button to save the last displayed frame (still frame) as a prestored image.
- Select the checkbox next to **LEDSetting is generating prestored image**. Click the **Capture** button to save the image loaded by LEDSetting as a prestored image.

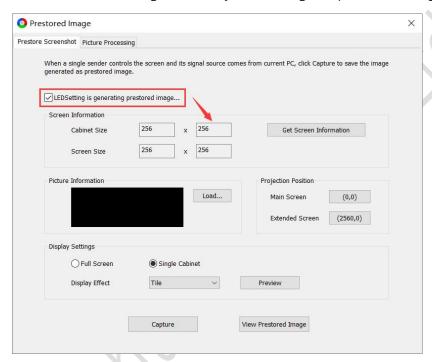


Fig 13.1.1 Prestore screenshot

Procedures

- Step 1: Click Get Screen Information to view the cabinet size and screen size.
- Step 2: Click **Load** to load a picture to be captured.
- Step 3: Choose a desired projection position and the picture will be displayed on the corresponding area of the screen.

Notes:

To choose where the picture is displayed:

- 1. Selecting **Main Screen** under **Projection Position** will show the picture on the computer's duplicate screen.
- 2. Selecting **Extended Screen** under **Projection Position** will show the picture on the computer's extended screen.

Step 4: After setting the picture display mode and effect, click **Preview** to view the picture effect.

Step 5: Click **Capture** to save the loaded picture as a prestored image.

Step 6: Click View Prestored Image to view the prestored picture on the screen.

Functions

The functions of **Prestore Screenshot** are described as shown in Table 13.1-1.

Area	Parameter/Button	Description
Screen	Cabinet Size	Display the width and height of the cabinet.
	Screen Size	Display the width and height of the screen.
Information	Get Screen	Get the screen information by updating the
	Information	cabinet size and screen size values.
Picture		Load a picture from a local file. The selected
Information	Load	picture will appear in the preview area on the
information		left side of the interface.
Projection	Main Screen/	Switch the projection position between Main
Position	Extended Screen	Screen and Extended Screen.
	Full Screen/	Switch the display mode of a selected picture
Display Settings	Single Cabinet	between Full Screen and Single Cabinet.
	Display Effect	Switch the display effect of a selected picture
	Display Effect	between Tile and Stretch .
	Preview	Preview the picture's effect at the chosen
	Preview	projection position.
Button	Captura	Save the captured picture as a prestored
	Capture	image.
	View Prestored Image	Display the prestored image on the screen.

Table 13.1-1 Description of prestore screenshot

LEDSetting User Manual

13.2 Picture Processing

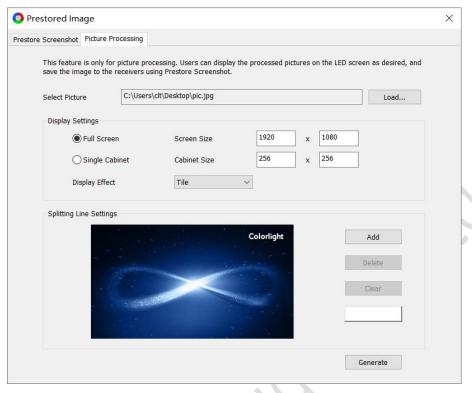


Fig 13.2.1 Picture processing

Procedures

Step 1: Click Load to load a picture.

Step 2: Enter the desired screen size and cabinet size. Then, choose a display mode and an effect for the picture.

Step 3: Add splitting lines where you want to divide the picture.

Step 4: Click **Generate**. This will split the image along the lines you added under **Splitting Line Settings** and save the pieces to local files.

Functions

The functions of Picture Processing are prescribed as shown in Table 13.2-1.

Area	Parameter/Button	Description
Select	Lood	Load a picture from a local file, and its file
Picture	Load	path will display in the text field.
Display Settings	Full Screen/Single	Switch the display mode of a selected picture
	Cabinet	between Full Screen and Single Cabinet.
	Display Effect	Switch the display effect of a selected picture

		between Tile and Stretch .
	Screen Size/Cabinet	Adjust the width and height of the screen and
	Size	the cabinet.
Splitting Line Settings	Left Side Preview	Display the display effect of a selected
	Area	picture.
	Add	Add a splitting line, and adjust its direction
	Add	and position.
	Delete	Delete the most recently added splitting line.
	Clear	Clear all splitting lines.
	Splitting Line	Click to select a desired color for
	Settings	splitting lines.
Button		Split the picture along the lines you added
	Generate	under Splitting Line Settings and save the
		pieces to local files.

Table 13.2-1 Description of picture processing

14.3D Function Box

Detect the model, connection status, program, and mainboard temperature of the 3D function box.

Note: LEDVISION does not support detecting the 3D function box when connected to the sender via the LAN port.

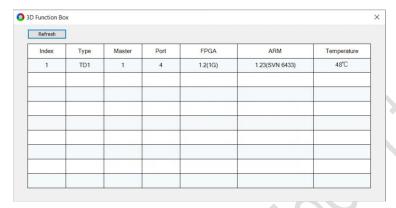


Fig 14.1 Detect 3D function box

15. Timing Command

The timing command table is a function in LEDSetting software. To use it, ensure that the computer is running the software properly and the device is correctly connected and communicating.

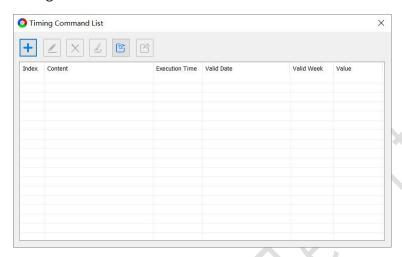


Fig 15.1 Timing command list

Timing Command Content

Enable/disable screen power: Work with the multi-function card to control the screen power supply via multi-function card relay.

Enable/disable screen display: Set the blackout status of sender.

Set the screen brightness/color temperature: Set the brightness/color temperature of the sender.

Timing Command Execution

Select a command in the list, and the command can be executed as long as the execution duration is within 15 seconds; If not selected, the command will not be executed.

If there are multiple commands with the same execution time, within a time frame of 15 seconds, execute the commands sequentially every 3 seconds according to the order in the list. After 15 seconds, no further commands will be executed.

Start Automatically at Boot

Step 1: Right-click the LEDVISION shortcut on the desktop and select "Run as Administrator" to launch LEDVISION.

Step 2: Click Settings > Software Settings, then choose Startup Settings in the window

Colorlight

that appears, and select the checkbox for **Start Automatically at Boot**.

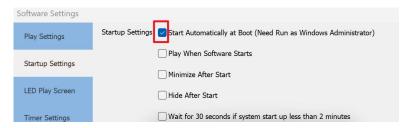


Fig 15.2 Start automatically at boot

16. Advanced Deseam

This feature ensures uniform brightness across the entire screen. There are two types of seam correction: standard deseam and advanced deseam. Standard deseam modifies the receiver card's calibration coefficients, while advanced deseam operates independently of calibration coefficients, preserving the original values. Advanced deseam also supports multiple controllers for simultaneous seam correction.

Quick Start

Prerequisite: Both the sender and receiver cards must support advanced Deseam.

Step 1: Open the **Advanced Deseam** interface and click **Get Screen Information**, as shown in Fig 16.1.

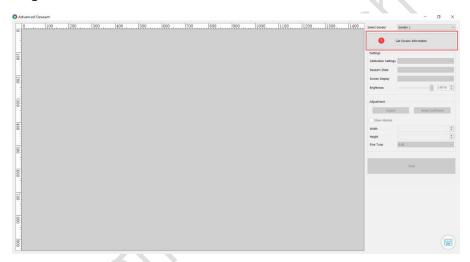


Fig 16.1 Get screen information

Step 2: Configure the deseam correction status and screen display settings.

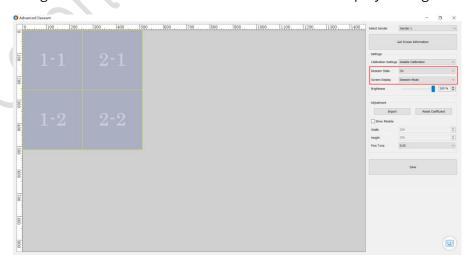


Fig 16.2 Set deseam status

Step 3: Set the module size, select the seam, and use the +/- fine-tune buttons to adjust the deseam coefficients.

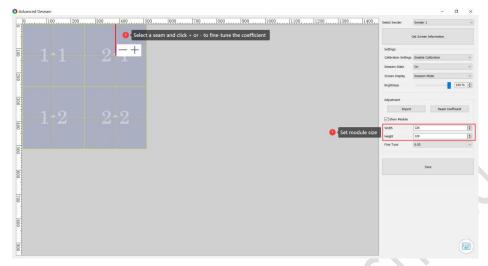


Fig 16.3 Adjust deseam coefficients

Step 4: Repeat Step 3 for all seams. Once all coefficients are adjusted, click **Save** to apply the settings to the receiver card, then check the screen display.

Feature Details

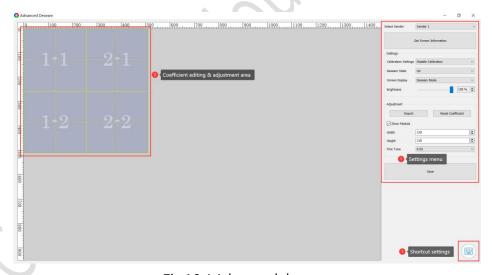


Fig 16.4 Advanced deseam

- Settings Menu
 - **Select Sender**: Choose the sender from the dropdown menu.
 - **Get Screen Information**: Click to get screen information.
 - Calibration Settings: Set the screen calibration mode.
 - **Deseam State**: Enable or disable deseam.

- Screen Display: When deseam mode is selected, the screen will switch to white screen deseam mode.
- **Brightness**: Adjust screen brightness to evaluate the deseam effect under different brightness levels.
- Import: Import advanced deseam coefficients in SeamCoef or seamxCoef format.
- Reset Coefficient: Reset all deseam coefficients to 1.
- **Show Module**: Display the coefficient editing area by module.
- Width/Height: Set the module width and height.
- Fine Tune: Adjust the step size for coefficient fine-tuning.
- **Save**: Apply and save the correction coefficients to the receiver card.
- Coefficient editing & adjustment area
 - Selecting seams: Left-click a seam to select it. Hold Ctrl to select all seams in the same row or column.
 - Fine-tuning: When a seam is selected, +/- buttons appear next to it for fine adjustments.
- Shortcut settings
 - Default Shortcuts:
 - Arrow keys (Up/Down/Left/Right): Move selection between seams.
 - +/- keys: Fine-tune the coefficient.
 - Shortcuts can be customized in the settings.

17. Module Coefficient Matching

Prerequisite: The receiver card program supports writing the module UID, and the receiver card parameters are correctly configured for smart modules.

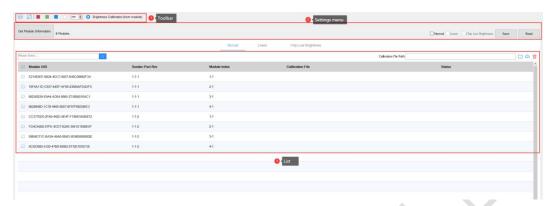


Fig 17.1 Module coefficient matching

Toolbar

See Section 8.2.1 By Pixel for details.

Settings Menu

- **Get Module Information**: Click to get the screen and smart module information, which will be displayed as text to the right of the button.
- Calibration coefficient types: Support 3 types Normal, Low Layer, and Chip Low Brightness.
- Save: After loading a local calibration coefficient file, click Save to save the calibration coefficients of a designated type to the selected module.
- **Read**: Read back the calibration coefficients of a designated type from the selected module, and save them to a local folder.

List

- Tab switching: Switch between the 3 tabs, namely, Normal, Lower, and Chip Low
 Brightness, to view the corresponding module information.
- Search: Enter a keyword in the search box and click to find all modules that match the criteria. The results will be displayed in the list.
- Calibration File Path: Display the path of the loaded calibration coefficient folder.
- : Click to select a local calibration coefficient folder that you want to load.
- 🗠 : Click to download the calibration coefficient file from the server.

 \bullet $\ensuremath{\bar{\mathbb{I}}}$: Delete the loaded correction coefficient file.

• List: Display the obtained module information, as shown in Table 17-1.

List Field	Description	
Module UID	Display module UID information.	
Sender-Port-Rcv	Display the physical connection location of the modules.	
Module index	Consistent with the module indexes as configured in Receiver	
	Parameters – Smart Module Settings.	
Calibration file	Match the calibration coefficient files from the loaded	
	calibration folder based on the module UID information.	
Status	Display readback and saving status of calibration coefficients.	

Table 17-1 Description of module information

18. Player Mode

Go to **Screen Configuration > Device Information**, and select **Player** as the sending mode.



Fig 18.1 Switch to player mode

Main Interface

Access the main interface in the **Player** mode.

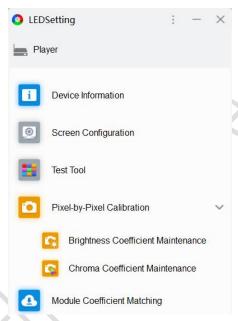


Fig 18.2 Main interface

- The main interface contains 5 default modules: **Device Information**, **Screen Configuration**, **Test Tool**, **Pixel-by-Pixel Calibration**, and **Module Coefficient Matching**.
- Customize the modules and their order in the main interface under **Software** Settings > Software Modules.

Screen Configuration

Device Information

Display information for all connected devices.



Fig 18.3 Device information

■ **Detect Device**: Click to display a list of information about the connected devices.

■ List: Sender/Player information is displayed on the left side, while the receiver information is displayed on the right side. See Chapter 4 **Device** Information for details.

Player Settings

₹: Click this icon to detect a player and refresh the interface.

Device List: When multiple players are cascaded, all connected players appear in the device list. Select a player icon to access and configure its settings.

For more player configuration options, download the **PlayerMaster** software.

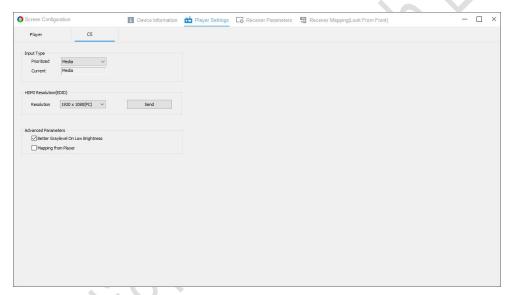


Fig 18.4 Player settings

Receiver Parameters

When multiple players are cascaded together, select a desired device under **Player Settings**, and set its parameters in **Receiver Parameters**. Then, click the **Save to Receivers** button to apply the new parameter settings to the receiver connected to the selected player. See Section 6.3 for parameter configuration.

Receiver Mapping

When multiple players are cascaded together, switch a desired device in **Player Settings**, and draw the mapping diagram in **Receiver Mapping**. Then, click the **Save to Devices** button to apply the mapping diagram to the receiver connected to the selected player. See Section 6.4 for drawing the mapping diagram.

Statement

Copyright © 2025 Colorlight Cloud Tech Ltd. All rights reserved.

No part of this document may be copied, reproduced, transcribed, or translated without the prior written permission of Colorlight Cloud Tech Ltd., nor be used for any commercial or profit-making purposes in any form or by any means.

This guide is for reference only and does not constitute any form of commitment. Please refer to the actual products (including but not limited to color, size, screen display, etc.).

Colorlight



Official Website



Colorlight Cloud Tech Ltd

Service Phone: 4008 770 775

Official Website:www.colorlightinside.com

Head Office Address: 37F-39F, Block A, Building 8, Zone C, Phase III, Vanke Cloud City, Xili Street, Nanshan District, Shenzhen, China