

User Manual

Splicing Processor

HD-VP8000M

V2.2

Document Description

Before using this product, please read this manual carefully and keep it properly for reference. Read the safety operation guide carefully. Note: ⚠ Danger、⚠ Attention。

This manual is only used as an instruction for the user's operation, not for maintenance services. The deadline for the described functions is June 24, 2023. If the functions or related parameters are changed after this date, supplementary explanations will be made without prior notice. For details, please check with the dealers.

All rights reserved. Without the written permission of the company, no unit or individual may extract or reproduce part or all of the content of this document, and may not transmit it in any form.

Trademark notices, and all other trademarks or registered trademarks mentioned in this document are the property of their respective owners.

This manual takes the rendering of the 20x16 hybrid plug-in multi-image splicing processor as an example. The product pictures are for reference only, please refer to the actual product.

This document applies to the following types of Hybrid plug-in image splicing processors:

No.	Name	Chassis	Max input channels	Max output channels
1	8x12 Hybrid plug-in processor	2U	8	24
2	20x16 Hybrid plug-in processor	3U	20	32
3	36x36 Hybrid plug-in processor	6U	36	72

Safe Operation Guide

To ensure the reliable use of the equipment and the safety of personnel, please observe the following matters during installation, use and maintenance



Danger

- There are live parts in the device. Non-professionals are not allowed to disassemble the device without permission to avoid the risk of electric shock.
- Please do not disassemble the device when it is powered on or running to avoid the risk of electric shock.
- Do not operate with wet hands to avoid electric shock.
- It is strictly forbidden to place the product in an environment containing flammable substances, explosive gases or heat sources.



Attention

- It is strictly forbidden to spill any corrosive chemicals or liquids on or near the device.
- Do not block the heat dissipation holes, and keep the working environment well ventilated, so that the heat generated by the equipment can be discharged in time, so as to avoid damage to the equipment due to excessive temperature.
- Do not place the device on an unstable surface to avoid damage caused by falling of the device.
- In order to prevent the equipment from being damaged by strong vibration during transportation, it is recommended to use appropriate packaging or original packaging during transportation.
- Do not squeeze the power cord and device with heavy objects.
- The equipment must use a power supply with grounding.
- Please do not repair without permission, so as not to aggravate the damage to the device.
- When carrying the equipment, be careful not to drop the equipment to avoid personal injury or equipment damage.
- The main power of the device should be turned off when it is not in use for a long time in a humid environment.
- If the equipment is stored for a long time before use, it must be checked and tested before use.
- Before cleaning the device, the device must be powered off, and please use a dry cloth to clean the device.
- Discarded equipment should be treated as industrial waste, and incineration is strictly prohibited.

CONTENTS

1. INTRODUCTION TO CLIENT SOFTWARE CONTROL.....	6
1.1 LOG IN	6
1.2 INPUT SIGNAL SETTING.....	6
1.3 SOFTWARE MAIN INTERFACE INTRODUCTION.....	6
1.3.1 OSD Setting	7
1.3.2 EDID Setting	8
1.3.3 Crop	8
1.3.4 Rename.....	9
1.3.5 Properties.....	9
1.4 SCENE MANAGEMENT.....	9
1.4.1 Start/stop Polling	9
1.4.2 Scene save	10
1.4.3 Scene Calling.....	10
1.4.4 Scene deletion	10
1.4.5 Clear Scene	10
1.5 BASIC OPERATIONS.....	10
1.5.1 Device Management	10
1.5.2 Splicing settings	12
1.5.3 Screen Mapping.....	14
1.5.4 Splicing window description	16
1.5.5 Splicing operation	17
1.5.6 Polling settings.....	19
1.5.7 Preset windows and applications.....	20
1.5.8 Pre-layout and application	20
1.5.9 Input grouping	20
1.5.10 One-key windowing.....	21
1.5.11 Terminal output.....	21
1.5.12 Peripheral Control	21
1.5.13 Preview echo	21
1.5.14 Subtitle Settings.....	22
1.5.15 Basemap Settings.....	24
1.5.16 Audio setting	25
1.5.17 Multi-function card.....	26
1.5.18 Screen Grouping.....	38
1.6 SYSTEM MANAGEMENT.....	38
1.6.1 Language Selection	38
1.6.2 Import configuration	38
1.6.3 Export configuration	39
1.6.4 User Management	39
1.6.5 Firmware upgrade.....	39
1.6.6 Device Configuration.....	40
1.6.7 Authorization encryption	41
1.6.8 About	41

1.6.9 Scheduled task	42
1.7 IP DECODING CARD CONTROL	42
1.7.1 IP decoding card connection	43
1.7.2 Video control	44
1.7.3 Device management	47
1.7.4 Basic setting management	49
1.7.5 System setting management	53
2. WEB INTERACTIVE INTERFACE CONTROL	55
2.1 LOGIN MODE.....	55
2.2 WEB MAIN INTERFACE INTRODUCTION.....	56
2.3 INTRODUCTION TO THE SETTINGS SCREEN	57
2.3.1 Device setting interface.....	58
2.3.2 Upgrade management interface	59
2.3.3 Account setting interface.....	61
2.3.4 Custom resolution interface	61
2.3.5 Splicing setting interface	61
3. NETWORK PORT OUTPUT SETTINGS	63
3.1.1 Software Installation.....	63
3.1.2 Device search	63
3.1.3 Hardware Parameters	63
3.2 SINGLE-CARD QUAD SIGNAL OUTPUT BOARD PARAMETERS	70
3.2.1 DVI Signal Output Board	70
3.2.2 Audio output Board	71
3.2.3 Multi-function output card parameters	71
4. RS232 CONTROL	72
4.1 SERIAL PORT CONTROL SOFTWARE SETTINGS	72
4.2 RS232 INSTRUCTION	73
4.2.1 Equipment query and operation instructions	73
4.2.2 Audio instructions.....	76

1.Introduction to Client Software Control

1.1 Log in

The default software initial account is: "admin", and the default password is "admin". For the first login, select the default user name to log in, as shown in the figure below. If you need to modify the user name and password, please refer to 1.6.4System Management—User Management.

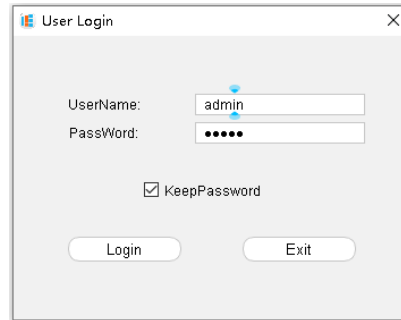


Figure1-1 Login Interface

1.2 Input signal setting

Input list area: When there is a signal input, the device icon will light up, otherwise it will be gray. When the mouse selects the input signal source and right-clicks, it can support OSD settings, EDID settings, cropping, renaming and properties.

1.3 Software main interface introduction

After the software is logged in and connected, it will enter the main interface, as shown below:



Figure 1-2 Control Software Interface

- 1)Menu bar: mainly includes 14 sub menus of the "Basic Operation" module and 8 sub menus of the "System Management" module;
- 2)Device/information list area: device connection list and input board signal list, support signal source search and real-time detection;
- 3)Screen splicing operation area: display a virtual large-screen splicing image, which can open windows, move, splicing and other operations;
➤Rename: Right-click on the physical screen to support custom output port names, see the lower left corner of the physical screen.
- 4) Window operation area: display the operation function of the window
 - A.Clear window: Refers to one key to clear all open windows on the screen;
 - B.Full screen mode: Refers to drag the source to the video wall to open a full screen window;
 - C.Single screen mode: Refers to drag the source to the video wall to open a single screen window;
 - D.Quad split screen mode: Refers to drag the source to the video wall single screen to open 1/4 window;
 - E.Lock mode: refers to the lock screen, in addition to clearing the window, can not do any operation on the video wall。
- 5)Scene management area: Display currently saved scenes and preview images. Support scene polling, save, recall, delete and clear scene operations;
- 6)Status bar: can display operation prompts, physical parameters and other information;
- 7)Video preview: can display input source preview screen。

1.3.1 OSD Setting

Click the "**OSD Settings**" button to enter the following interface:

- Set the subtitle content, font, display status, subtitle text and background color, background color transparency, position (with the actual input resolution as the extreme value) in the "Subtitle Settings" interface as needed;
- Subtitle text and background color can choose system color, custom color or choose any color on the screen;
- Optionally set the display state of subtitles,  Blue background is display status,  The transparent base is NOT displayed;



Figure 1-3 OSD Setting

1.3.2 EDID Setting

The input board supports the embedded EDID management technology, and supports to modify the EDID data in the input board through the client software. Click the "EDID Setting" button to enter the following interface:

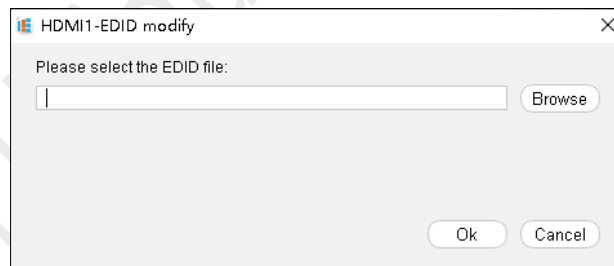


Figure1-4 EDID Management

1.3.3 Crop

When the output display is not suitable, the signal source can be cropped to make the screen display suitable for different scenarios. A single input signal source can save 4 cropping schemes at the same time, click the "crop" button to enter the following interface:

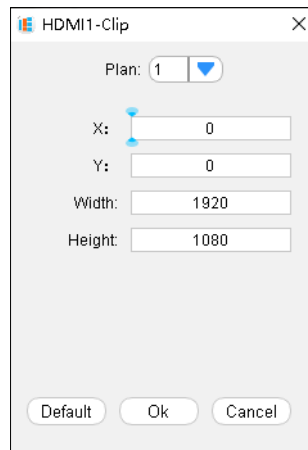


Figure 1-5 Input Signal Crop

Enter the description of the cropping method: "X, Y" is the starting point of the cropping coordinates, and the width and height are the size of the cropped window. For example, from the X coordinate 120 and the Y coordinate 100 as the starting point, crop a signal window with a size of 1280*720.

1.3.4 Rename

Rename refers to custom input channel name.

1.3.5 Properties

Input board property query, support query input board name, type, signal source resolution properties.

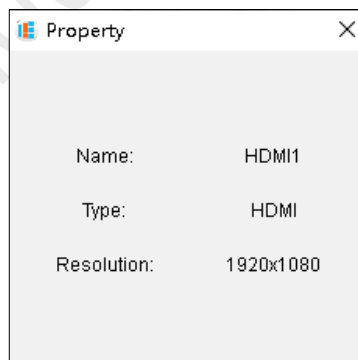


Figure 1-6 Input Signal Properties

1.4 Scene Management

1.4.1 Start/stop Polling

Start/Stop Polling is a one-key start or stop of a saved scene in the "Polling Settings" interface. For details of the polling scene data saving operation, see [1.5.6 polling settings](#)

1.4.2 Scene save

Scene save is the data storage of all the input signal window position, size, stacking order, signal source and other parameters on the current screen splicing setting window. It is represented by scene name and scene number. The scene name is automatically named or customized from scene 1. Naming, the scene number starts from 1 and the number is automatically or manually selected, and up to 128 groups of scenes can be saved.

Click "Scene Save" in the scene management column to enter the following interface. You can enter a custom name in the blank space or select the scene number according to your needs, and finally click "OK" to complete the scene saving. When saving, if the scene number selected is the same as the previously saved scene, the previous scene will be automatically replaced.



Figure 1-7 Scene Save

Explanation :

- Scene saving is to store relevant data in the device.
- After the scene is saved, a preview image will be generated in the scene list bar on the right. After selecting the scene, click "Scene Calling" to call the scene.

1.4.3 Scene Calling

Scene calling is to call the selected scene with one key, which is convenient for on-site application operation.

1.4.4 Scene deletion

Scene deletion is to delete the selected scene

1.4.5 Clear Scene

Clear Scene is a one-key deletion of all saved scenes。

1.5 Basic operations

1.5.1 Device Management

After logging in to the software, you need to set the connection parameters in order to realize the connection between the splicing processor and the client software.

In the basic operation module, select and click "Device Management" to enter the following interface to add devices. Devices can be added through two modes: LAN port or RS232 serial port。

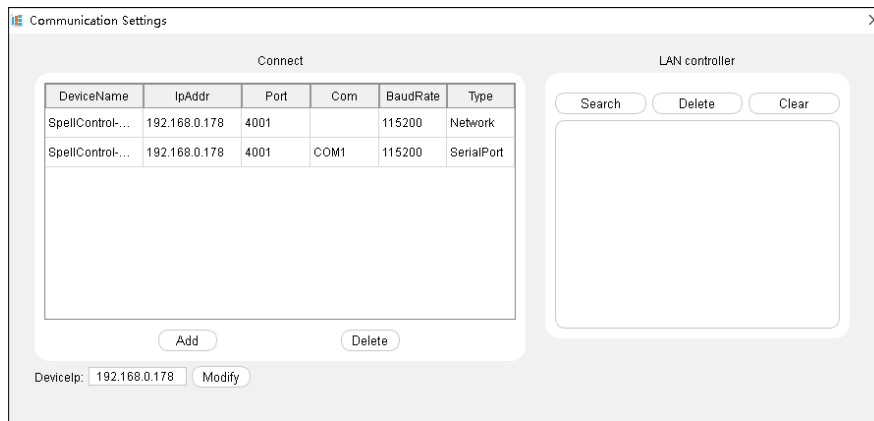


Figure 1-8 Communication Settings

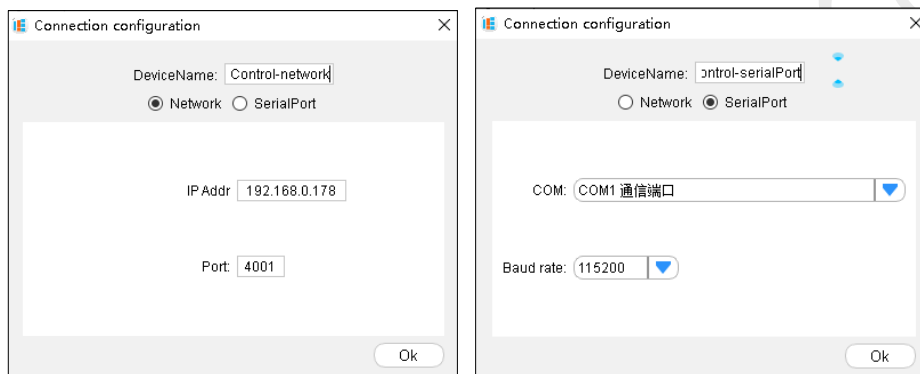


Figure 1-9 Serial Port/Network Parameter Setting

1) RS232 Serial port control

Connect the control computer and the "RS232 IN" port of the splicing processor through the serial line to realize the serial connection communication. The client software serial port adds the device connection method, as shown in the figure below, the operation steps are as follows:

- ① Select and double-click the device in the connection area "Splicing Control-Serial Port" to enter the serial port connection setting interface, see Figure 1-8 Communication setting interface above;
- ② Select the serial port number and baud rate of the splicing processor in the pop-up box, and click the "OK" button to save the parameters. See Figure 6-9 Serial port/network port parameter setting interface above.;
- ③ Return to the main interface, click "Device List", select "Splicing Control-Serial Port" and double-click to connect the device;

2) Network port control

Connect the network port of the splicing processor to the control computer through twisted pairs to realize the network port connection and communication. The steps are as follows:

- ① Set the control computer to the same network segment.
- ② When the IP address of the device is unknown, select and click the "Search" button of the controller in the LAN to search for the device IP, double-click the searched device IP address to enter the network port

connection setting interface, and click "OK" in the network connection bar to save in the pop-up box. Revise;

③When the IP address of the device is known, select and double-click the connection area "Splicing Control-Network" to enter the network port connection setting interface, select the connection type "Network" in the pop-up box, enter the device IP, and click the "OK" button to save the parameters, see Figure 6-9 Serial port/network port parameter setting interface;

④Return to the main interface, click "Device List", select "Splicing Control-Network" and double-click to connect the device;

Explanation:

●When the LAN port is connected, it supports cross network segment search for devices, but does not support cross network segment connection, that is, it is not the same network segment as the control device and cannot be connected.

3) Modify IP

After connecting the device through the network port/serial port, you can modify the IP address of the device. The operation steps are as follows:

- ①Connect the device through the network port/serial port;
- ②Fill in the modified IP address in the "Device management" box->"Search" box;
- ③Fill in the modified IP address in the "Device management" box->"Advanced" box;
- ④Click the "Modify" button to modify successfully.

1.5.2 Splicing settings

In the basic operation module, select and click "splicing settings" to enter the splicing setting interface, and you can choose to set screen grouping, large screen type, physical screen arrangement, edge width, output resolution, output resolution customization, and mapping relationship settings. Also supports authorization settings for software functions.

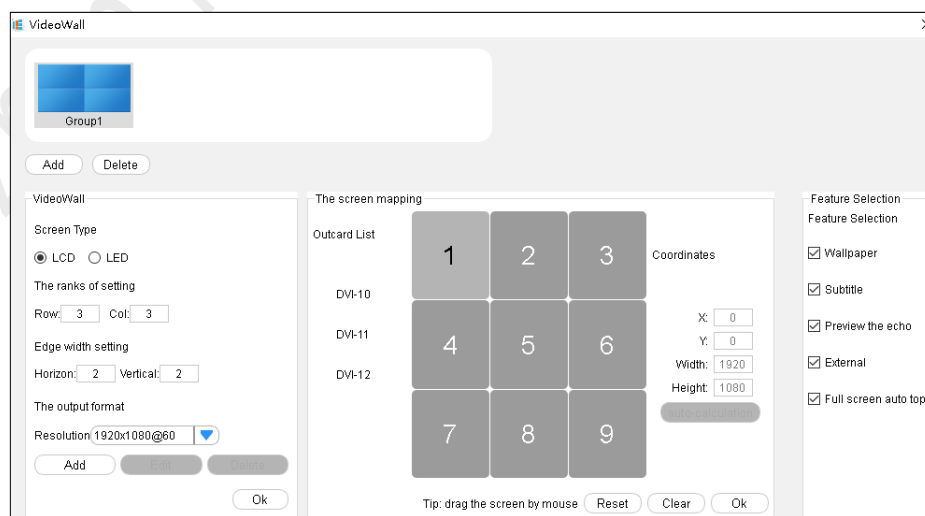


Figure 1-10 Splicing Settings

- 1)"Screen grouping": supports 4 groups of screen groups, you can customize the parameters and naming of each group, double-click to modify the group name;
- 2)"Large screen type": Support LCD and LED settings, LED type supports custom pixel points;
- 3)"Row and column setting": the actual combination format of the large-screen display, this software can support 72 x 72 combination format splicing at most. Combined with the output channel and application needs of the application device, the splicing combination format can be customized;
- 4)"Edge width setting": the value is 0-99, when the display device is an LCD screen, the black border between the screens will make the image have a split vision, and the display effect is poor, so the border compensation function is required. The software's "edge width setting" can achieve this function;
- 5)"Output format resolution": the system comes with a conventional output resolution, you can also click the "Add" button to create a new resolution for the screen, and the new resolution will be automatically added to the "Resolution" list;
- 6)"Screen mapping": Set the output display so that the physical screen corresponds to the actual output display, For details, see [1.5.3 Screen Mapping](#);
- 7)"Function selection": the software function authorization, including the functions of "**Basemap setting**", "**Subtitle settings**", "**Peripheral control**", "**Peripheral control**", and "**full-screen auto top**":

A.Basemap settings: After enabling this function, a sub menu of "**Basemap Settings**" will be added to the basic operation module, select the corresponding group to enter this function, and upload basemaps for different groups.

B.Subtitle settings: After this function is enabled, the "subtitle setting" sub menu will be added to the basic operation module. Through this interface to upload subtitles, set font size, color, display position, subtitle static, scrolling, subtitle switch, etc.

C.Preview echo: After enabling this function, at the bottom of the main interface, the video preview bar is displayed, and the 8-channel preview echo screen is displayed.;

D.Peripheral Control: After enabling this function, the "peripheral control" sub menu will be added to the basic operation module, and through this interface, commands can be sent to third-party devices through the "RS232 OUT" port;

E.Auto set front: After enabling this function, when the window is set to full screen, it will be automatically displayed on top to ensure that the full screen window screen is displayed first.。

[illegible]

Figure1-11 Screen Arrangement (3 x 3)

📖 Explanation:

●The output resolution parameters of this software system cannot be modified or deleted, and the custom output resolution can be modified or deleted as needed. The custom resolution setting interface is as follows, you can set parameters according to your needs:

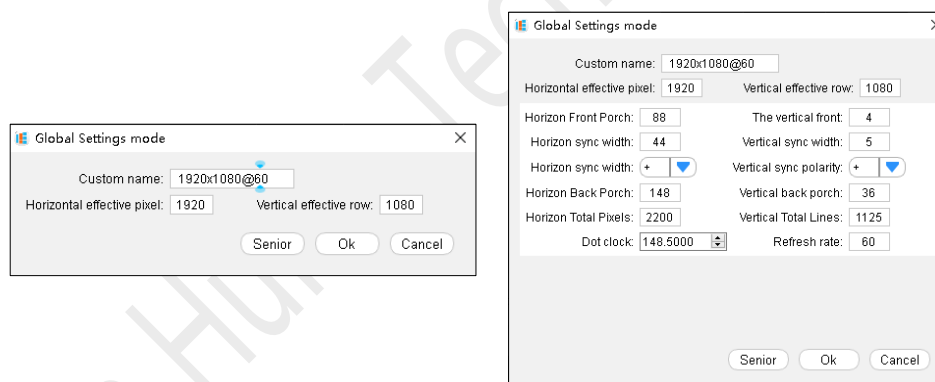


Figure 1-12 Resolution Setting Interface

1.5.3 Screen Mapping

In the splicing setting submenu interface, the output display screen can be set so that the physical screen corresponds to the actual output display screen.

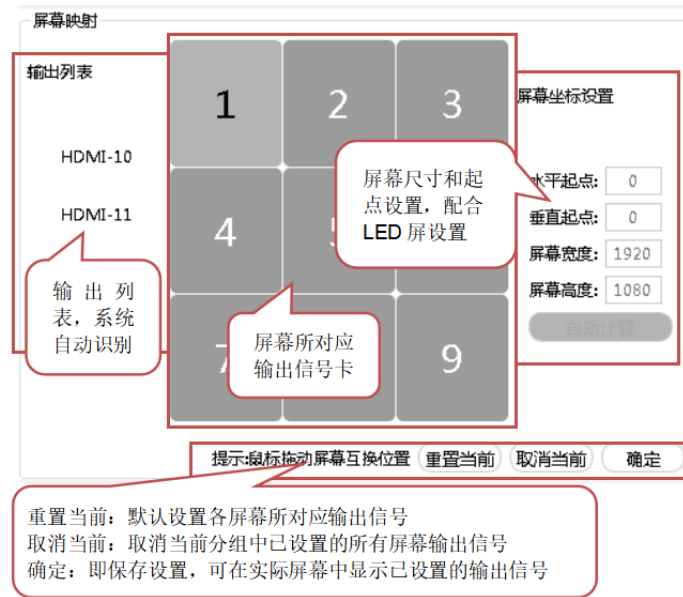


Figure 1-13 Screen Order

Explanation:

After the “Reset” or “Cancel” settings are completed, need to click the “Confirm” button to save the settings and take effect.;

When some screen positions do not correspond to the output card port, select the corresponding screen in the interface shown in Figure 7-14 below. At this time, click the output card, and the corresponding display will light up. Drag the output card to the lighted window with the mouse to adjust the display screen to achieve correct display, as shown in Figure 1-15 below.

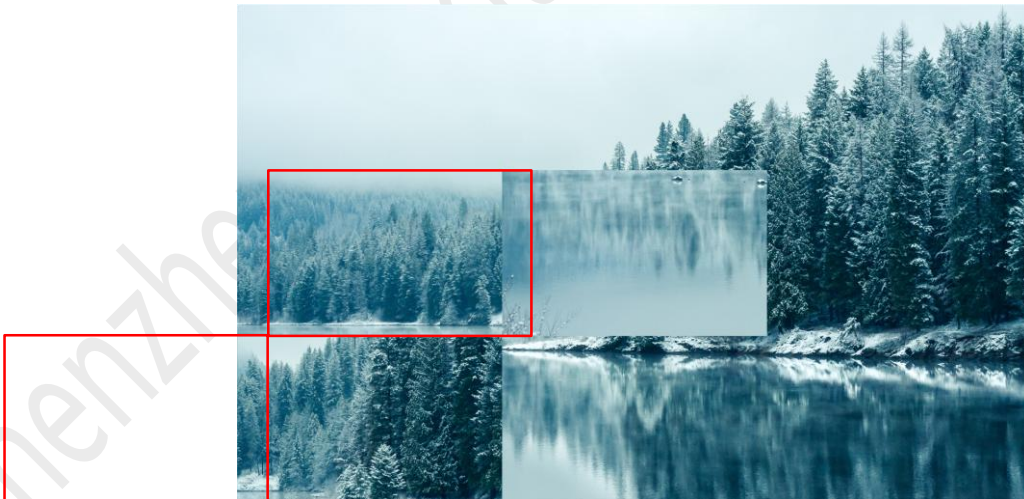


Figure 1-14



Figure 1-15

When the output board list is more than the number of windows displayed on the screen, click the output board in the "**Output card list**" on the left and put it into the output window on the right, and try in turn until the screen is displayed on the actual output display.;

1.5.4 Splicing window description

In the picture splicing setting area, you can set windows of any size and any position, and the windows opened in the picture splicing setting window will be displayed one by one on the actual output display screen. This software can open a new window in the following two ways:

- 1)Click in the left input card list to select the input signal to be displayed, then press and hold the left mouse button at any position in the screen splicing setting window, drag to the right and lower, release the mouse when it reaches the appropriate position, and then a new window can be opened with the current input source as the content at the corresponding position of the large screen;
- 2)Drag the signal source from the input card list on the left directly to the screen splicing setting window. When release the mouse, a new corresponding window will be opened on the physical screen where the mouse is located.

Drag the window directly to adjust the screen output size. The window introduction and drawing effect are as follows:

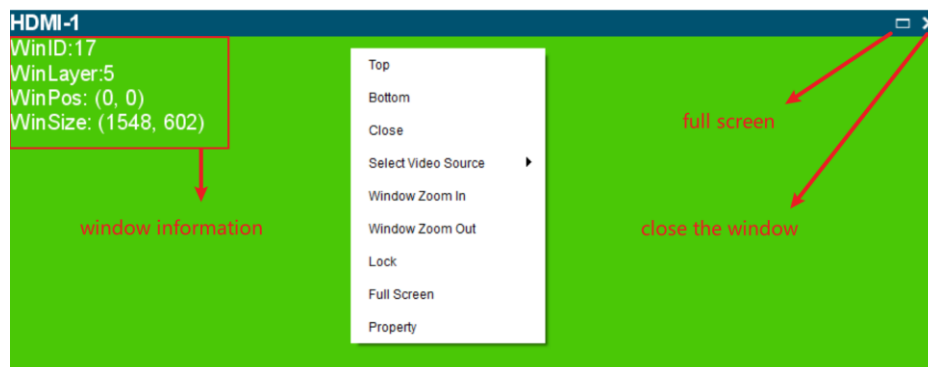


Figure1-16 Window Introduction

Right-click on the window and a dialog box will pop up. This window can be adjusted in the dialog box, including: top, bottom, move up, move down, close, select video source, zoom in, zoom out, lock, full screen and properties:

- a)Set at the front:** Move the current layer to the top display;
- b)Set at the back:** Move the current layer to the bottom display;
- c)Close:** Close the window, equivalent to the second button in the upper right corner of the window;
- d)Select video source:** Signal source selection is equivalent to dragging the signal source from the input card list on the left directly to the corresponding window;
- e)Zoom in:** Zoom in to the full screen of the occupied logical sub-screen;
- f)Zoom out:** The enlarged window returns to its original size;
- g)Lock:** Lock window size, position and priority display of locked window screen;
- h)Full-screen:** Enlarge the window to full screen display. Equivalent to the first button in the upper right corner of the window, or double-click the blue title area;
- i)Properties:** Set window title display status, window title content, window position, window size information。

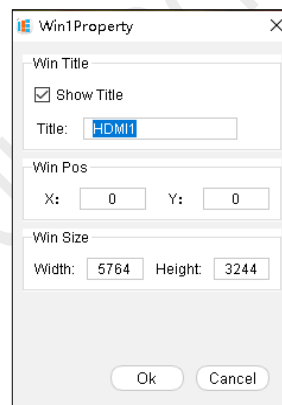


Figure1-17 Window Properties

Explanation:

- Double-click the blue title area to display full screen or restore the window size;
- Double-click the window text area to zoom in or zoom out the window, the function is the same as window **zoom in** and window **zoom out**;
- In the **screen splicing setting**, the gray state of the window is not displayed。

1.5.5 Splicing operation

This device supports picture-in-picture display, image overlay display, multi-screen display 1 picture, single-screen

multi-screen display splicing pictures。

1)Multiple screens can be spliced to display 1 picture, for example: 9 screens display 1 picture



Figure 1-18 Multi-screen 1 Picture Setting

2)Different screens can display different pictures separately, for example: 3 screens display 3 pictures

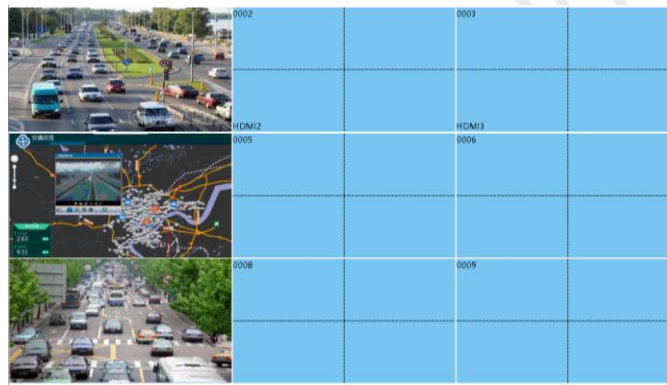


Figure 1-19 3 Screens 3 Pictures Setting

3)A single screen can display up to 4 pictures, for example: 1 screen and 2 pictures

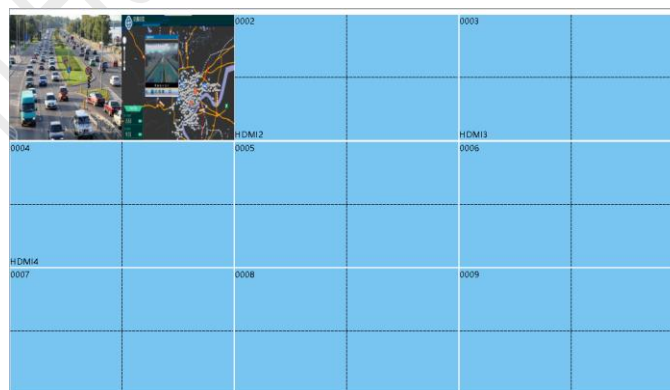


Figure 1-20 1 Screen 2 Pictures Setting

4)PIP: The same screen can display multiple pictures at the same time, as shown below:

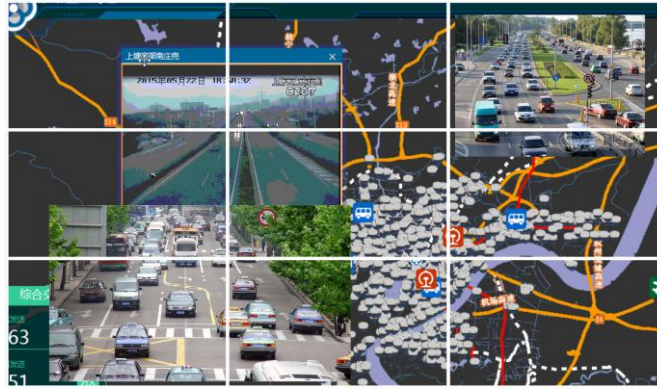


Figure 1-21 Picture-in-picture Settings

1.5.6 Polling settings

"Polling settings" means that the saved scene will be specified and automatically recalled in a loop. When in use, add the scenes in the scene list on the left to the polling list on the right, set the polling time interval, and click Start. Select and click "**Polling Settings**" in the basic operation module to enter the polling setting interface, as follows:

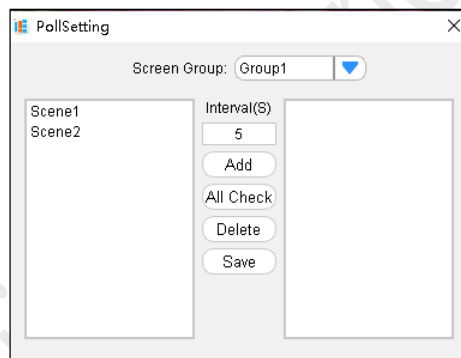


Figure 1-22 Polling Settings

- 1)Time interval: that is, the scene calling time interval, default time is 60 seconds;
- 2)Add: Add a scene from the scene list to the polling list;
- 3)Select all: add all scenarios from the scenario list to the polling list;
- 4)Delete: delete the scene from the polling list;
- 5)Save: save polling parameters, including time interval, polling list;

Explanation:

- Delete is only to return the scene from the polling list to the scene list, not delete the scene.
- When polling, any operation related to the window is prohibited in the polled group, but it does not affect other groups;
- Start or stop the polling scene, operate in the scene list on the main interface.

1.5.7 Preset windows and applications

"Preset windowing" refers to simulating a window operation interface on the client side, on which the window layout can be opened. When you want to display on the large screen, click **"Apply"** to perform one-key application operation; if you want to cancel, click **"Cancel"** to exit the preset window.

1.5.8 Pre-layout and application

"Pre-layout" means to preset a window opening mode in the video wall. When using, switch the "pre-layout mode" in the window operation area, drag the signal source to the preset window, that is, automatically fill the preset window, the operation method as follows:

- 1)Click Pre-layout, open windows freely in the video wall, and then click **"Apply"** to save this windowing mode。
- 2)Switch the **"Pre-layout mode"** in the window operation area, and drag the signal source to the preset window。

Explanation :

The pre-layout mode cannot be selected in the window mode when the operation is set to pre-layout.

1.5.9 Input grouping

"Input grouping" refers to adding free groups to input sources and classifying input sources. The operation method is as follows:

- 1)Click "Add" to create a new group, the group name can be customized.
- 2)Select a group, drag the source from the source list to the right grouped source list, click OK to save the operation of the source grouping.
- 3)In the signal source list in the main interface to view the added groups。

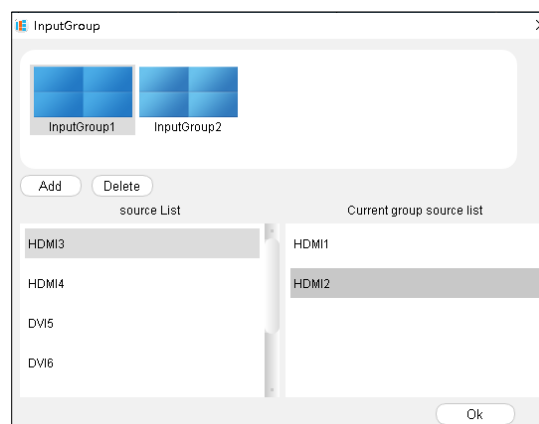


Figure 1-23 Input Grouping

1.5.10 One-key windowing

Click one key to open the window, it can realize the single screen 4 windows opened by one key in the current grouped splicing wall.

1.5.11 Terminal output

“**Terminal output**” is to give all the current input ports to the corresponding output ports one by one, and the windowing order is given from left to right and top to bottom.

1.5.12 Peripheral Control

“**Peripheral Control**” mainly controls third-party devices, this interface can be made according to customer needs.

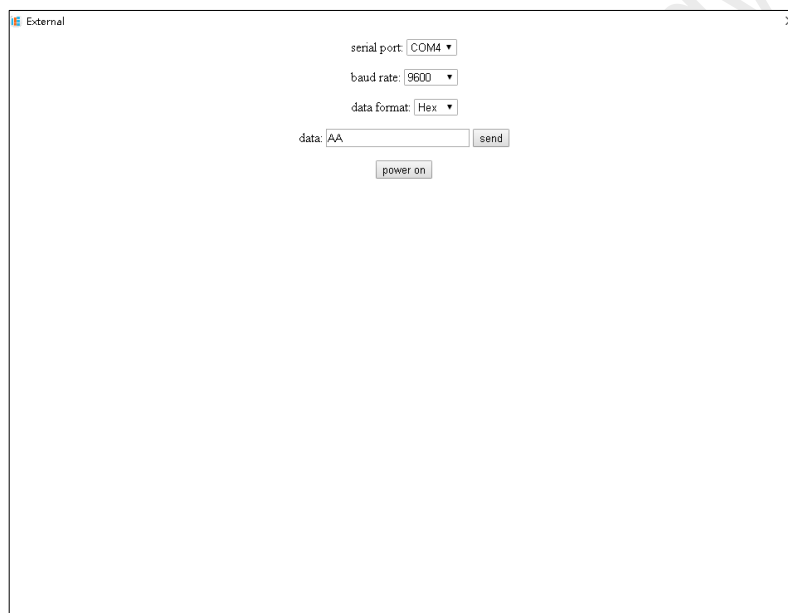


Figure 1-24 Peripheral Control

1.5.13 Preview echo

The preview echo function can preview the connected source and echo the large screen image.

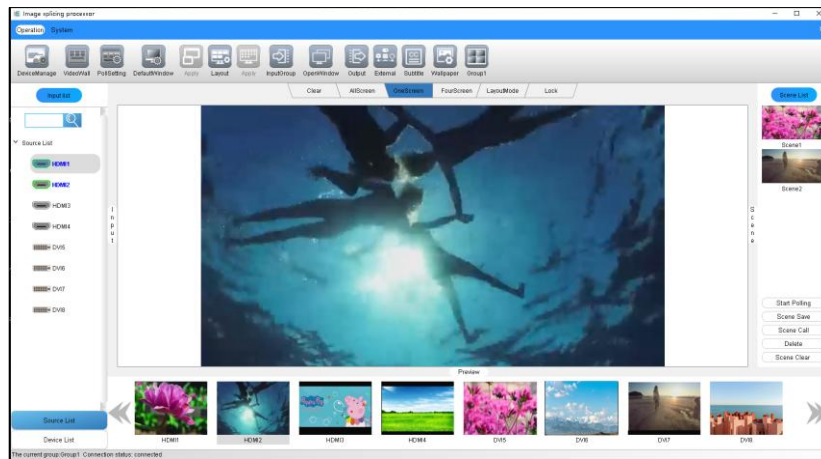


Figure 1-25 Video Preview Echo

1. When the preview echo function is enabled, the preview echo interface is as shown above.
2. Supports previewing and echoing 8-channel images at the same time. When the preview and echo function is enabled for the first time, the device needs to be reconnected to preview the echoed images..

Explanation :

- The preview echo screen can only be enabled in the network connection state.

1.5.14 Subtitle Settings

"Subtitle setting" refers to displaying subtitle content in the video wall, and supports setting font size, color, display position, subtitle scrolling speed, subtitle switch and other functions.



Figure 1-26 Subtitle Settings

When the subtitle function is enabled, the subtitle setting interface is as above:

1. **Subtitle input area:** Enter character content, subtitles support a display width of up to 1792x16 and a display height of up to 1080.
 - 1) When setting the LED mode, the display height of the subtitle cannot exceed the actual pixel height of the current LED screen.
2. **Font settings:** Set the font, style, size, effect and writing system language of the subtitle content. The maximum font size can be set to 512; Note: If the font size exceeds 255, it needs to be entered manually.
3. **Preview:** After the subtitle content setting is complete, click Preview to view the subtitle display effect in the main interface.
4. **Upload subtitles:** Upload subtitle content and set parameters, and after setting, click "Upload Subtitles" to display;
5. **Text and background color:** Contains subtitle content and background color settings, you can choose system color, custom color, or pick a color anywhere on the screen;
6. **Display position/display size:** Set the display position of the subtitle starting point/set the size of the subtitle display area. Note: The maximum width and height of the display position and display size are limited to not exceed the width and height of the subtitle content itself;
7. **Scroll mode:** Set the subtitle scrolling mode, currently supports 3 scrolling modes, static, left scroll, right

scroll;

8.Scroll speed: Set the subtitle moving speed, the leftmost is the minimum scrolling speed, and the rightmost is the system default maximum scrolling speed;

9.Subtitle switch: Set subtitle display status,  turn on,  turn off;

10.Confirm/Cancel: save the settings/exit the setting interface

Explanation:

- After modifying the subtitle color, position or size, need to click "Confirm" to display the modified effect on the corresponding display screen.
- Subtitles support setting in the first group; only support setting in any position in the first line of splicing.

1.5.15 Basemap Settings

"The "basemap setting" function can display high-definition basemap images in the video wall, support uploading multiple basemaps to quickly switch, and support multiple groups to display basemap images simultaneously.

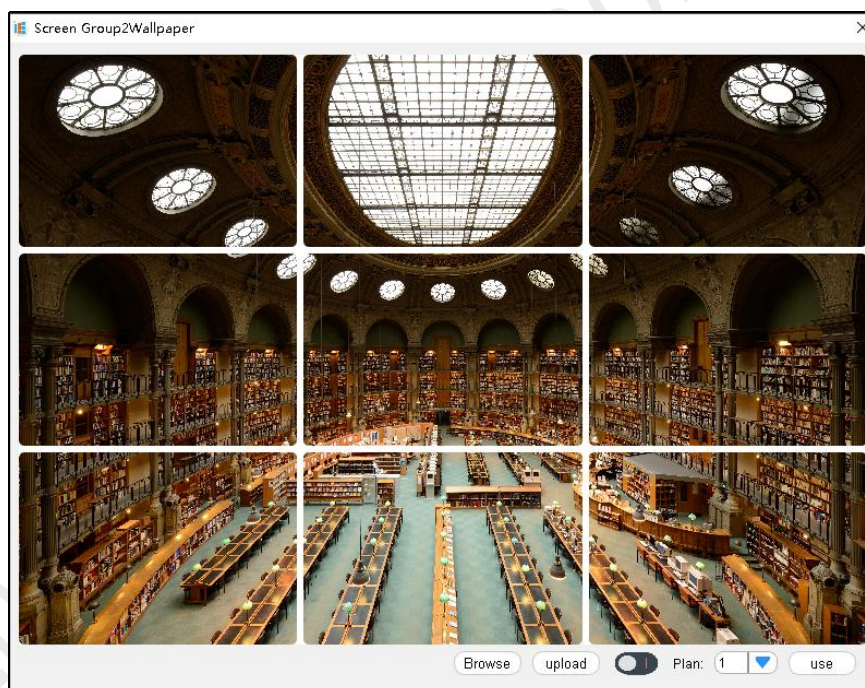


Figure 1-27 Base map Settings

When the basemap function is enabled, the basemap setting interface is as above:

- 1.Browse:** Select to preview the pictures in a folder, and preview them in the setting interface.
- 2.Upload:** Upload the selected preview image and display it as a full-screen base image.
- 3.Basemap switch:** Set the basemap display state,  Turn On,  Turn Off.
- 4.

1.5.16 Audio setting

Click the "Audio Settings" icon to open the entrance to the multi -function card setting window, click "Audio Settings", and the pop -up setting interface is as follows:

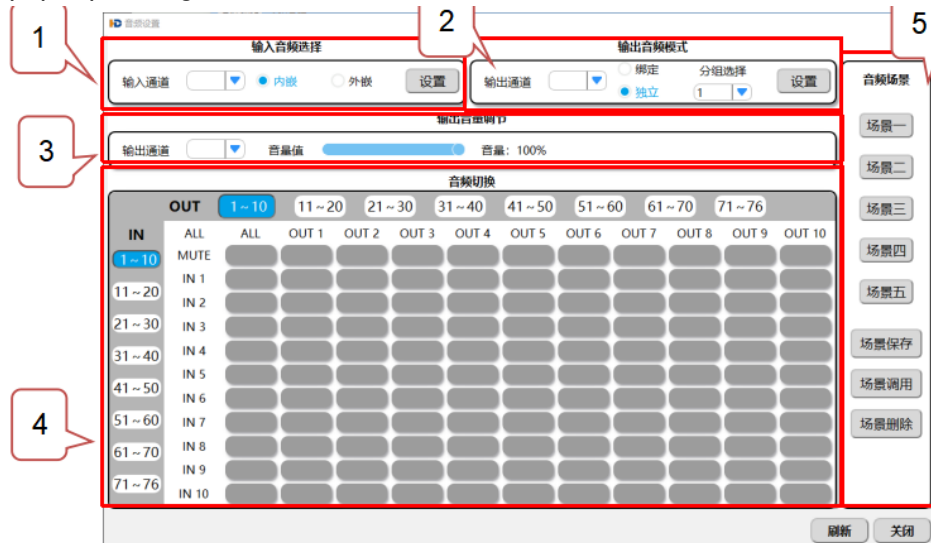


Figure 1-28 Audio Settings

- 1) Input audio selection: Select the input channel as embedded audio mode or external audio mode, click Set to confirm the operation, the default is embedded audio mode.
- 2) Output audio mode: Select the audio output channel as bonded mode or independent mode, and the bound group, click Set to confirm the operation.
 - a) Binding mode: One or more output audio channels can be selected to be bound under a video mosaic wall group. When the video mosaic wall is opened, the bound output audio under a group;
 - b) Independent mode: the input audio channel switches the output audio channel independently, and operates on the audio matrix switching page.
- 3) Output channel-volume adjustment: adjust the volume of the audio output channel, the default volume is the maximum.
- 4) Audio matrix - switch page
 - a) The vertical IN on the left indicates the input channel, 10 channels are displayed on one page, and other channels can be switched by turning the page;
 - b) OUT on the top layer on the right indicates the output channel, 1 page displays 10 channels, and the other channels can be switched by turning the page;
 - c) IN + OUT: xx channel audio input switches to xx channel audio output channel, click again to turn off the audio;
 - d) IN + ALL: xx channel audio input switches to all audio output channels, click again to turn off the audio;
 - e) MUTE + OUT: Mute xx audio output channels;
 - f) MUTE + ALL: Mute all audio output channel audio.

5) Audio scene setting

- a) The audio matrix supports saving 5 audio scene states;
- b) Save scene: After selecting a scene, click Save Scene to save the state of the audio channel in this scene;
- c) Call scene: After selecting a scene, click call scene to call the pre-stored scene;
- d) Delete scene: After selecting a scene, click delete scene to delete the data of this scene, and then use it to save other scenes

1.5.17 Multi-function card

Click the "Multi-function Card" icon to open the entrance of the multi-function card setting window, click "Multi-function Card", the pop-up setting interface is as follows:

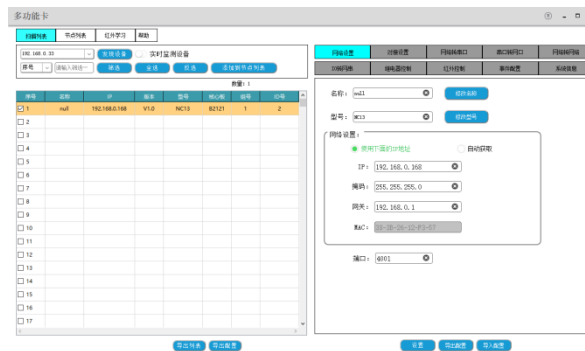


Figure 1-29 Multi-function card interface

1.5.17.1 Scan List

The "**Scan List**" page can scan the devices in the LAN and display them in the list. The devices in the list can be filtered or added to the node list interface.

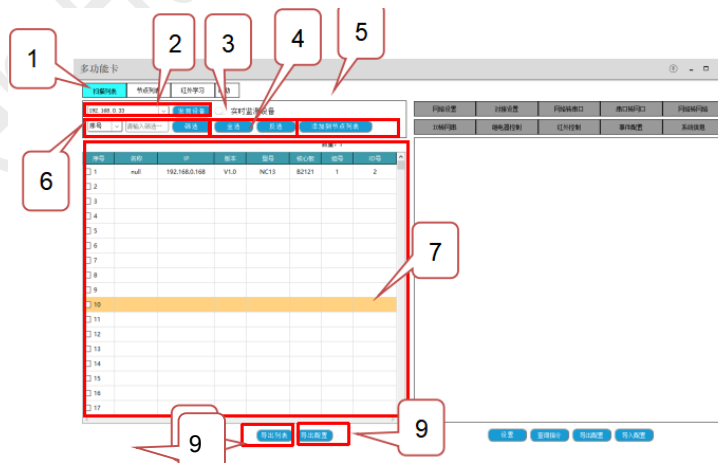


Figure 1-30 Scan List

1. **Scan list:** Enter the scan list interface.
2. **Discover devices:** Select the IP in the same network segment as the local machine and the multi-function

card in the drop-down button, click "Discover devices", and the multi-function cards connected in the LAN will be displayed in the list.

3. Real-time monitoring device: Turn on the real-time monitoring device, you can monitor the multi-function card devices in the LAN in real time, and add or delete devices in the device list in real time.

4. Select all and deselect: You can select all and deselect the devices in the device list.

5. Add to the node list: select any multi-function card in the list, and then click "Add to node list", the node list interface will synchronously add the device to the list.

6. Filter: Different filter conditions can be set to filter out the qualified devices in the list.

7. List: Display the device.

8. Export list: The device list can be exported.

9. Export configuration: the configuration of the device can be exported.

1.5.17.2 Node List

The "node list" interface can set the selected devices in the list, the devices in the list can be filtered, the settings can be exported to backup configuration files, and the saved configuration files can also be imported to the selected devices.

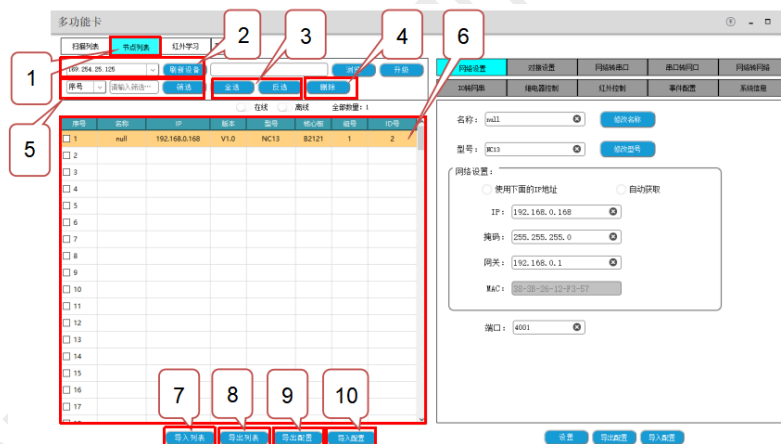


Figure 1-31 Node List

- 1. Node list:** Enter the node list interface.
- 2. Refresh device:** Select the same IP as the network segment of the local machine and the multi-function card in the drop-down button, click "Refresh device", and the status refresh of the multi-function card connected in the LAN that has been added to the node list will be displayed in the list.
- 3. Select all and deselect:** You can select all and deselect the devices in the device list.
- 4. Refresh:** Refresh the device status in the node list.
- 5. Filter:** Different filter conditions can be set to filter out the qualified devices in the list.
- 6. List:** Displays the devices.

7. **Import list:** Import the saved device list file.
8. **Export list:** The device list can be exported.
9. **Export configuration:** the configuration of the device can be exported.
10. **Import configuration:** import the configuration file saved by the instrument.

1.5.17.3 Infrared Learning

Click on the right side of "**Infrared Learning**" to pop up the infrared learning setting interface. Infrared learning settings can be performed on the devices selected in the list.

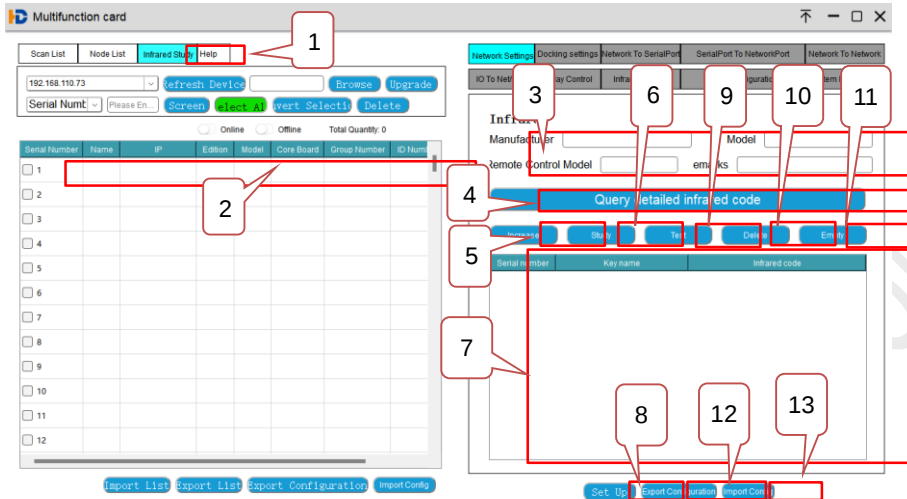


Figure 1-32 Infrared Learning

1. **Infrared learning:** Enter the infrared learning setting interface.
2. **Device selection:** Click the device with the mouse to select the device for setting.
3. **Infrared information setting:** Write the content in the input box to set the infrared manufacturer, model, remote control model, remarks and other information.
4. **Query detailed infrared code:** Click "Query detailed infrared code" to query the infrared code saved by the device.
5. **Add:** Click "Add" to pop up to enter the button name. After entering the name, a line of content will be added in the infrared code list below, including the serial number, button name and infrared code.
6. **Learning:** Select a row in the infrared list, click "Learning", and operate the infrared remote control to remotely control the infrared receiver of the multi-function card. At this time, the infrared code column will be filled with the learned infrared code content, and a reminder of successful learning will be given.
7. **Infrared code list:** Display the added infrared code list and the learned infrared code value.
8. **Setting:** After clicking setting, the infrared code will be set to the selected device and take effect.
9. **Test:** Select any infrared code in the infrared code list with the mouse, click test, and the IR OUT

interface of the multi-function card will send the changed infrared code.

10.**Delete:** Select any infrared code in the infrared code list with the mouse, you can change the infrared code to delete

11.**Clear:** Click "Clear" to clear all the infrared codes in the infrared code list.

12.**Export Configuration:** Export the configuration file of the current page.

13.**Import configuration:** Import the configuration file into the current page.

1.5.17.4 Help

Click "**Help**" to pop up options such as operating instructions, about us, export logs, self-starting options, and languages.

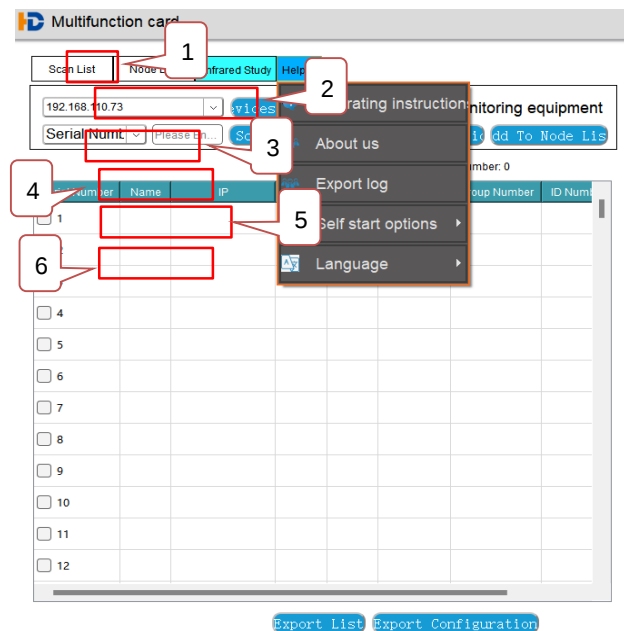


Figure 1-33 Help

1.**Help:** Click "Help" to pop up menus such as operating instructions, about us, export logs, auto-start options, and languages.

2.**Operating Instructions:** Click "Operating Instructions" to pop up an introduction to the operating instructions of the device.

3.**About Us:** Click "About Us", and the version and copyright information will pop up.

4.**Export log:** Click "Export log" to export, save and open the log.

5.**Auto-start option:** Click "Auto-start option", you can choose to start automatically or not to start automatically.

6.**Language:** Click "Language" to choose the display language as Chinese or English.

1.5.17.5 Network Setting

The "**Network Settings**" interface can set the network settings for the devices selected in the list, export and backup configuration files for the settings, and also import saved configuration files for the selected devices.

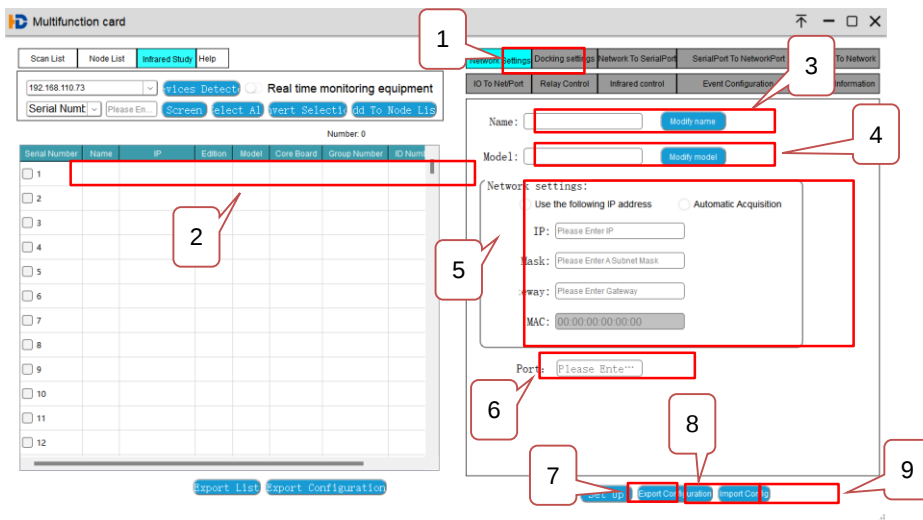


Figure 1-34 Network setting

1. **Network setting:** Enter the device setting interface.
2. **Device selection:** Click the device with the mouse to select the device for setting.
3. **Modify the name:** Enter the name content, click to modify the device name.
4. **Modify model:** enter the model content, click modify model.
5. **Network settings:** You can set the network acquisition mode to fixed IP or automatically obtain IP, and input IP, mask, gateway and other content when fixed IP.
6. **Port:** Enter the port number.
7. **Settings:** Click Settings, and the page settings will take effect.
8. **Export Configuration:** Export the configuration file of the current page.
9. **Import configuration:** Import the configuration file into the current page.

1.5.17.6 Docking Settings"

The "Docking Settings" interface can perform docking settings for the selected devices in the list, including device group numbers, IDs, network protocols, and serial port attribute configurations and queries. You can export and backup configuration files for the settings, and you can also import and save the selected devices. configuration file.

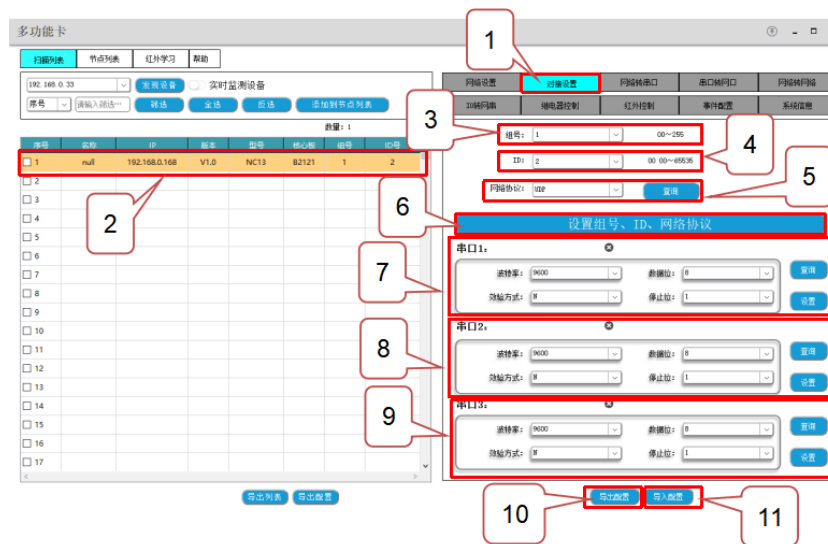


Figure1-35 Docking Settings"

1. **Docking settings:** Enter the docking settings interface.
2. **Device selection:** Click the device with the mouse to select the device for setting.
3. **Field number:** Enter the field number in the input box, 0~255.
4. **ID:** Enter the ID number in the input box, 0000~65535.
5. **Network protocol:** Click "Query" to query the network protocol of the currently selected device, or select the network protocol that needs to be set in the drop-down button of the input box.
6. **Set group number, ID, network protocol:** Click "Set group number, ID, network protocol" to set the above field number, ID, network protocol settings to take effect.
7. **Serial port 1 (this serial port is not open yet):** the serial port supports query and setting, click "Query" to query the serial port setting status of the current device, and press the button to select parameters under baud rate, data bit, verification method, and stop bit , and finally click "Settings" to make the settings take effect.
8. **Serial port 2:** The serial port supports query and setting. Click "Query" to query the serial port setting status of the current device. Press the button to select parameters in baud rate, data bit, verification method, and stop bit, and finally click "Setting" to The settings take effect.
9. **Serial port 3:** The serial port supports query and setting, click "Query" to query the serial port setting status of the current device, press the button to select parameters in baud rate, data bit, verification method, and stop bit, and finally click "Setting" to The settings take effect.

1.5.17.7 Network trans Serial port

The "Network to serial port" interface can set the network to serial port for the selected device in the list, export the backup configuration file for the setting content, and import the saved configuration file to the selected device.

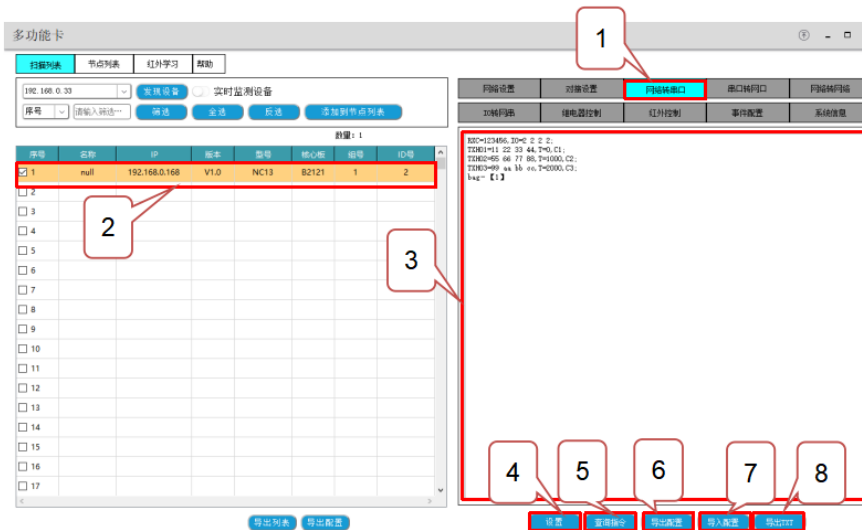


Figure 1-36 Network to serial port

1. **Network to serial port:** Enter the network to serial port setting interface.
2. **Device selection:** select the device with the mouse, and check the device for editing.
3. **Input box:** input the network to serial port protocol content.

Input RXC or RXH=xxxx, IO=a a a a in the first line; (RXC is the command sent by the network port in characters, RXH is to send Hex; xxxx is the command content, the customer can enter the character format or Hex format by himself; a is 4 channels IO port state setting, 1 is high level, 0 is low level, 2 is no judgment).

The second to fifth lines are the content sent by the corresponding serial port number (up to 4 commands can be configured, or less than 4 commands can be configured), input TXH or TXC01~04=xxxx, T=b, Cy; (TXC is the command sent by the serial port is the character, TXH is to send Hex; xxxx is the command content, the customer can enter the character format or Hex format; T=b is the delayed sending time is b seconds, in milliseconds; Cy, y is the specified port number, C0 is the network port, C1 is the serial port 1, C2 is the serial port 2, and C3 is the serial port 3)

The last line ends with bag and sets up to 30 bags.

4. **Setting:** After clicking "Setting", set the content of the input box to the device.
5. **Query command:** Click "Query command", the input box will display the setting status of the checked device storage.
6. **Export configuration:** Export the configuration file of the current page.
7. **Import configuration:** Import the configuration file into the current page.
8. **Export TXT:** Export and save the content of the current input box as a TXT file.

1.5.17.8 Serial port to network port

"Serial port to network port" interface can set the serial port to network port of the device selected in the list, export the backup configuration file for the setting content, and import the saved configuration file to the selected device.

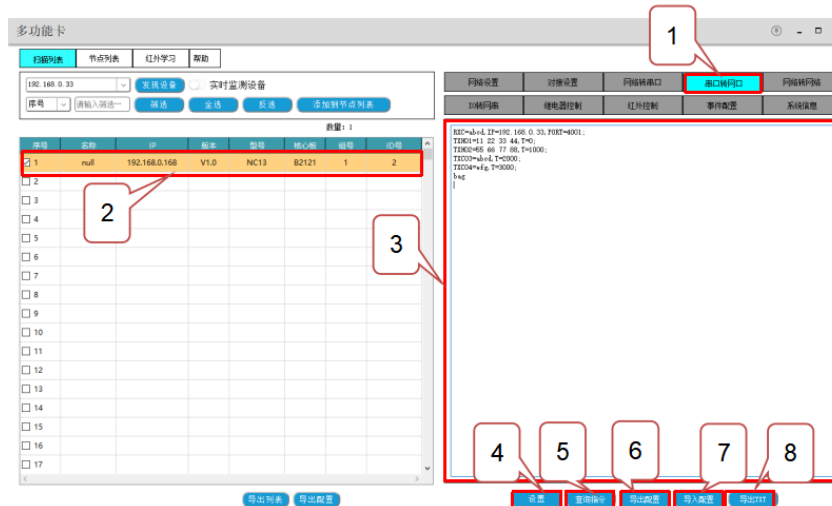


Figure 1-37 Serial port to network port

1. **Serial port to network port:** enter the serial port to network port setting interface.
2. **Device selection:** select the device with the mouse, and check the device for editing.
3. **Input box:** input the serial port to network port protocol content.

Input RXC or RXH=xxxx in the first line, IP=local computer IP, PORT=local computer network port; (RXC is the command sent by the serial port as a character, RXH is to send Hex; xxxx is the content of the command, and the customer can input it by himself Character format or Hex format).

The second to fifth lines are the content sent by the corresponding serial port number (up to 4 commands can be configured, or less than 4 commands can be configured), input TXH or TXC01~04=xxxx, T=b; (TXC is the command sent by the network port is character, TXH is to send Hex; xxxx is the command content, the customer can enter the character format or Hex format; T=b is the delayed sending time is b seconds, in milliseconds)

The last line ends with bag and sets up to 30 bags.

4. **Setting:** After clicking "Setting", set the content of the input box to the device.
5. **Query command:** Click "Query command", the input box will display the setting status of the checked device storage.
6. **Export configuration:** Export the configuration file of the current page.
7. **Import configuration:** Import the configuration file into the current page.
8. **Export TXT:** Export and save the content of the current input box as a TXT file.

1.5.17.9 Network to Network

The "Network to Network" interface can perform network-to-network settings for the selected device in the list, export the backup configuration file for the setting content, and import the saved configuration file for the

selected device.

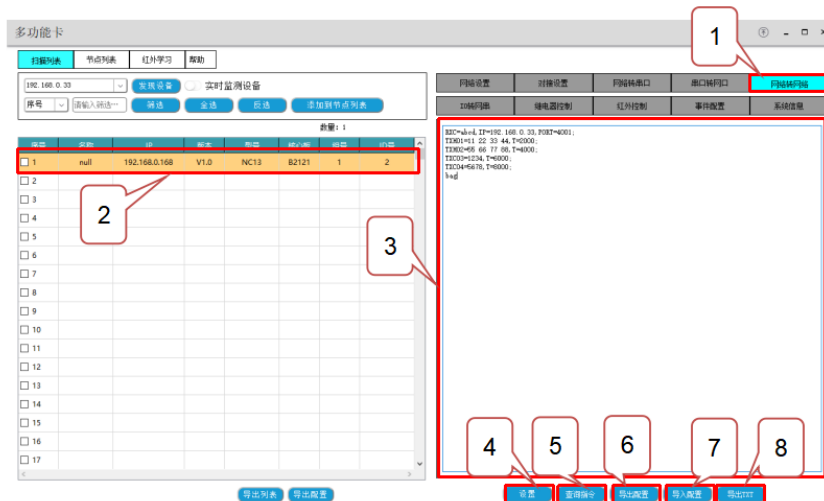


Figure1-38 Network to Network

1. **Network to network:** Enter the network to network setting interface.
2. **Device selection:** select the device with the mouse, and check the device for editing.
3. **Input box:** input network to network protocol content.
Input RXC or RXH=xxxx in the first line, IP=local computer IP, PORT=local computer network port; (RXC is the command sent by the network port as a character, RXH is to send Hex; xxxx is the command content, customers can Enter character format or Hex format).
The second to fifth lines are the content sent by the corresponding serial port number (up to 4 commands can be configured, or less than 4 commands can be configured), input TXH or TXC01~04=xxxx, T=b; (TXC is the command sent by the network port is character, TXH is to send Hex; xxxx is the command content, the customer can enter the character format or Hex format; T=b is the delayed sending time is b seconds, in milliseconds)
The last line ends with bag and sets up to 30 bags.
4. **Setting:** After clicking "Setting", set the content of the input box to the device.
5. **Query command:** Click "Query command", the input box will display the setting status of the checked device storage.
6. **Export configuration:** Export the configuration file of the current page.
7. **Import configuration:** Import the configuration file into the current page.
8. **Export TXT:** Export and save the content of the current input box as a TXT file.

1.5.17.10 IO switch string

The "IO switch string" interface can set the IO switch string for the device selected in the list, export the backup configuration file for the setting content, and import the saved configuration file for the selected device.

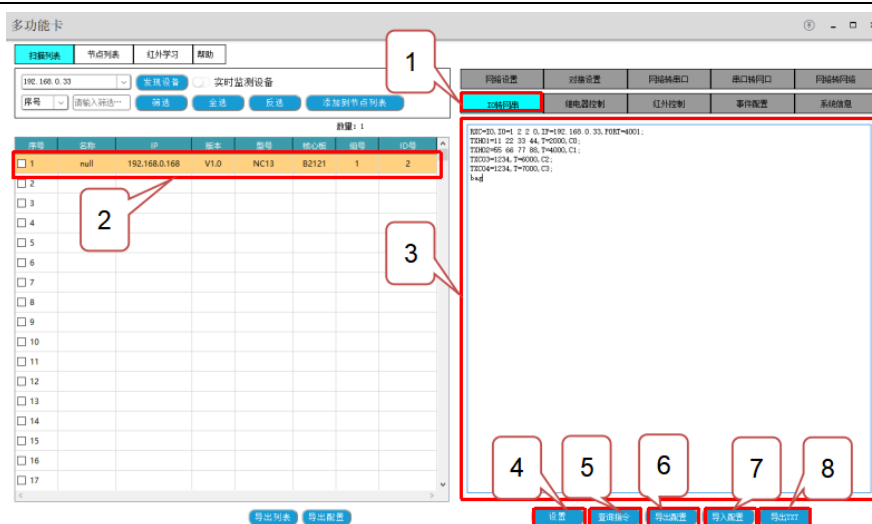


Figure1-39 IO switch string

1. **IO switch string**: Enter the IO switch string setting interface.
2. **Device selection**: select the device with the mouse, and check the device for editing.
3. **Input box**: Enter the content of the IO transfer protocol.

Input RXC =IO in the first line, IO=a a a a, IP=local computer IP, PORT=local computer network port; (a is the state setting of the 4-way IO port, 1 is high level, 0 is low level, 2 is no judgment).

The second to fifth lines are the content sent by the corresponding serial port number (up to 4 instructions can be configured, and less than 4 instructions can be configured), input TXH or TXC01~04=xxxx, T=b; (TXC is the one sent by the serial port or the network port The command is a character, TXH is to send Hex; xxxx is the content of the command, the customer can enter the character format or Hex format; T=b is the delayed sending time of b seconds, in milliseconds; Cy, y is the specified port number, C0 is the network port, C1 is the serial port 1, C2 is the serial port 2, C3 is the serial port 3)

The last line ends with bag and sets up to 30 bags.

4. **Setting**: After clicking "Setting", set the content of the input box to the device.
5. **Query command**: Click "Query command", the input box will display the setting status of the checked device storage.
6. **Export configuration**: Export the configuration file of the current page.
7. **Import configuration**: Import the configuration file into the current page.
8. **Export TXT**: Export and save the content of the current input box as a TXT file.

Explanation:

IO 3 and IO 4 ports are temporarily unavailable.

1.5.17.11 Infrared Control

In the **"Infrared Control"** interface, you can set the infrared control for the device selected in the list, export the backup configuration file for the setting content, and import the saved configuration file for the selected device.

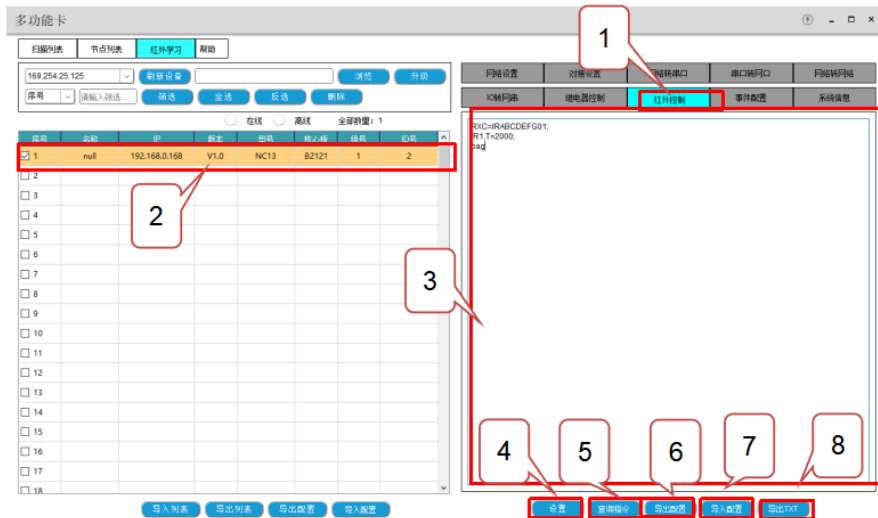


Figure 1-40 Infrared Control

1. **Infrared Control**: Enter the infrared control setting interface.
2. **Device selection**: select the device with the mouse, and check the device for editing.
3. **Input box**: input the content of the relay control protocol.

Input RXC or RXH=xxxx in the first line; (RXC is the command sent by the network port or serial port in characters, RXH is to send Hex, and xxxx is the content of the command, and the customer can enter the character format or Hex format by himself).

The second to fifth lines correspond to the content sent by IR (up to 4 instructions can be configured, or less than 4 instructions can be configured), input IRa, T=b; (IRa, a is the serial number of the infrared learning list; T=b is Delay sending time is b seconds, in milliseconds)

The last line ends with bag and sets up to 30 bags.

4. **Setting**: After clicking "Setting", set the content of the input box to the device.
5. **Query command**: Click "Query command", the input box will display the setting status of the checked device storage.
6. **Export configuration**: Export the configuration file of the current page.
7. **Import configuration**: Import the configuration file into the current page.
8. **Export TXT**: Export and save the content of the current input box as a TXT file.

1.5.17.12 Event configuration

The **"Event configuration"** interface can set the device to restart, restore the default IP, restore the default configuration, query or configure the heartbeat command, display the heartbeat packet data and clear it, and

export the backup configuration file for the setting content, or select the selected The saved configuration file is imported to the device.

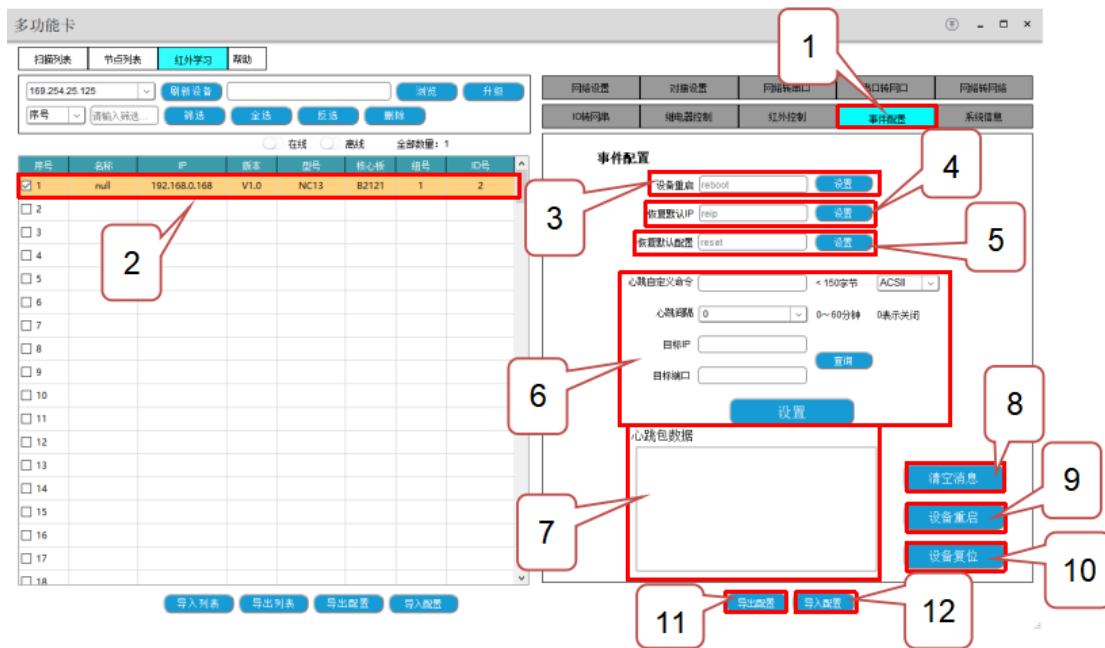


Figure 1-41 Event configuration

1. **Event configuration:** Enter the event configuration interface.
2. **Device selection:** select the device with the mouse, and check the device for editing.
3. **Device restart:** Click Settings to restart the device; or send the reboot command to the device to restart the device.
4. **Restore the default IP:** click on the setting, and the device will restore the default IP; or send the reip command to the device to restore the default IP.
5. **Restore the default configuration:** click the setting, the device will restore the default configuration; or send the reset command to the device to restore the device to the default configuration.
6. **The configuration of the heartbeat is query:** enter the print command of the custom heartbeat, the heartbeat interval, the target IP, and the target port in the input box, and click the setting to take effect. Click Query to query the heartbeat configuration content.
7. **Heartbeat packet data:** display the heartbeat packet print data.
8. **Clear message:** Click "Clear message" to clear the heartbeat packet data.
9. **Device restart:** Click "Device restart" to restart the device.
10. **Device reset:** Click "Device Reset" to reset the device.
11. **Export Configuration:** Export the configuration file of the current page.
12. **Import configuration:** Import the configuration file into the current page.

1.5.17.13 System Information

Enter the system information interface to display the IP, MAC, group number, ID number, status, port number, device ID, and running time of the selected device.

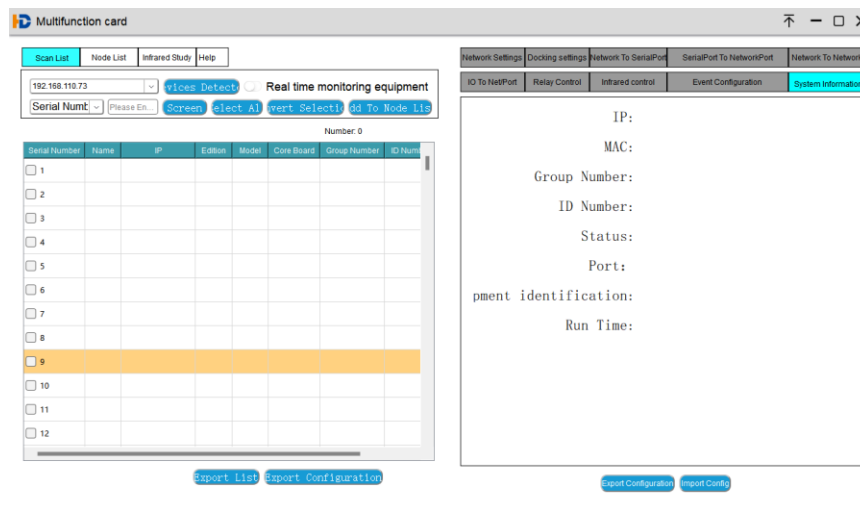


Figure 1-42 System information

1.5.18 Screen Grouping

The device supports up to 4 groups, each group can be controlled independently and can be switched arbitrarily. Add grouping method see [7.5.2 Splicing settings](#)

1.6 System Management

1.6.1 Language Selection

System language setting, supports 2 languages: Simplified Chinese (system default), English. In the system management module, select and click "language selection" to enter the language setting interface, as follows:

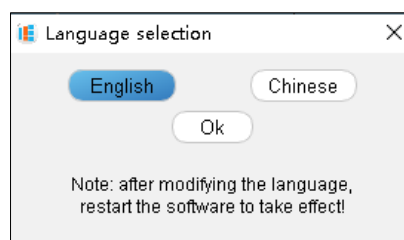


Figure 1-43 Language Selection

Note: System language switching needs to restart the software to take effect.

1.6.2 Import configuration

Importing configuration refers to importing the exported configuration file to the device again. Select and click "Import Configuration" in the system management module, and then select the backup configuration file to

import the parameters saved in the backup file.

1.6.3 Export configuration

Export configuration refers to exporting the currently saved data to generate a backup file. The exported parameters include scene data, mapping data, grouping data, output resolution, and network data. In the system management module, select and click "Export Configuration", and then select the corresponding folder to generate the device configuration file.

1.6.4 User Management

User management is used to add, modify or delete user information. The default user list of this control software is divided into administrators and ordinary users. The default administrator account is "admin" (the initial password is admin). Select and click "User Management" in the system management module, enter the following user management interface, configure users and user permissions.

The screenshot shows a window titled "User" with a close button (X) in the top right corner. The window is divided into several sections:

- UserList:** A table with two columns: "User" and "Permissions". It contains two rows: "admin" with "Admin" permissions and "user" with "User" permissions. The "admin" row is highlighted in blue.
- Screen Group Permissions:** A list of four items: "Screen Group1", "Screen Group2", "Screen Group3", and "Screen Group4", each with a checked checkbox.
- Tool function permission:** A list of two items: "Operation" and "System", each with a right-pointing arrow.
- User Details:** A section with input fields for "UserName:" (containing "admin"), "PassWord:" (containing "*****"), and "Note:". Below these is a dropdown menu currently set to "Admin" with a blue arrow icon.
- Buttons:** Three buttons labeled "Add", "Delete", and "Modify" are located at the bottom left.
- Checkbox:** A checkbox labeled "All" is located at the bottom right.

Figure 1-44 User Management

Explanation:

- Only administrator users can access the user management interface.

1.6.5 Firmware upgrade

Firmware upgrade supports software program updates for device control boards, input cards, and output cards. The upgrade file can be obtained from the company's technical or sales personnel.

Upgrade method: Select and click "Firmware Upgrade" in the system management module, enter the following interface, select the corresponding program mode of the device to be upgraded, then import the corresponding upgrade file, and click "Upgrade".

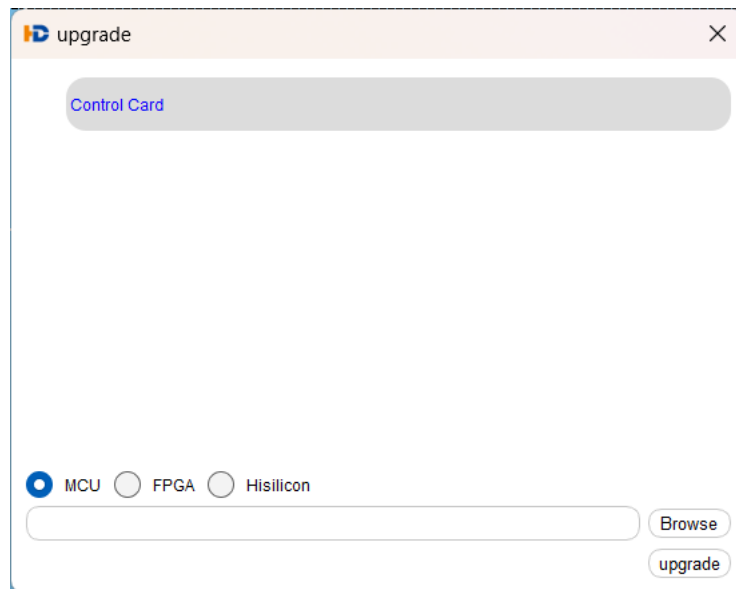


Figure 1-45 System Upgrade

Explanation:

- After the upgrade is complete, you need to restore the factory settings, then power off and restart the host device.

1.6.6 Device Configuration

Device configuration includes factory reset, fan adjustment, and brightness adjustment. Select and click "Device Configuration" in the system management module to enter the following device configuration interface, as follows:

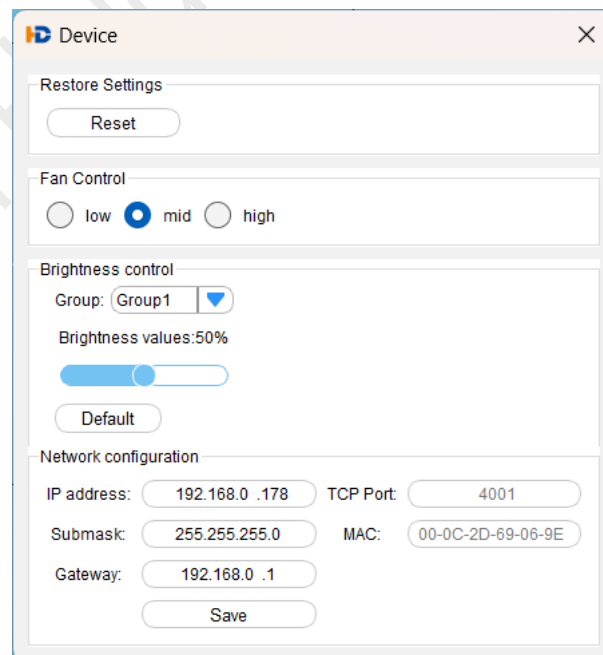


Figure 1-46 Device Configuration

- 1) Factory reset: restore the device to the factory state. After factory reset, all operation data will be cleared and the device IP address will be restored to 192.168.0.178.
- 2) Fan adjustment: When the temperature of the equipment or the operating environment temperature is too high, the rotating speed of the equipment can be adjusted according to the needs: low, medium, high.
- 3) Brightness adjustment: Set the output brightness of each group: 0~100%, the default status is 50%.
- 4) Network configuration: show information of IP

1.6.7 Authorization encryption

Log in to the upper computer to open the authorization function interface, copy the machine code to the technical personnel, click browse, open the authorization file, click import, check whether the authorization time is correct.

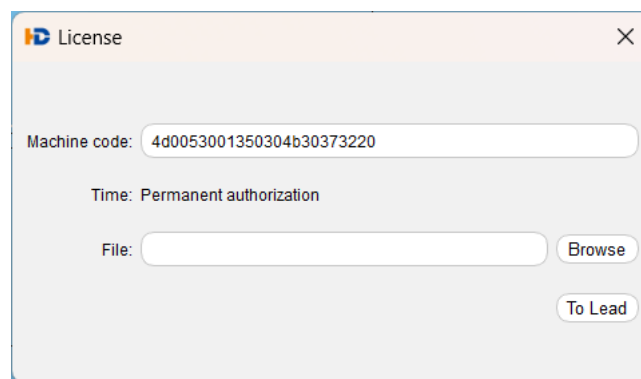


Figure 1-47 Authorization Encryption

1.6.8 About

In the device configuration module, select and click "About" to enter the device information interface, which mainly displays the information of the board and board version.

About				
Name	Type	Hardware version	MCU version	FPGA version
Control card	8*12	/	V2.0.0	V1.0.0
Back Panel	/	/	/	V1.0.1
HDMI	IN 1	V1.0.0	V1.1.1	V1.0.2
DVI	IN 2	V1.0.0	V1.1.1	V1.0.2
HDMI	OUT 1	V1.0.0	V2.1.0	V2.0.6
DVI	OUT 2	V1.0.0	V2.1.0	V2.0.6
DVI	OUT 3	V1.0.0	V2.1.0	V2.0.6
Software Version: V2.0.5.2				

Figure 1-48 Device Version

1.6.9 Scheduled task

In the device configuration module, click “Scheduled Task” to enter the scheduled task setting screen. You can set the scheduled task to send commands to control the third-party device and the scheduled invocation scenario.

定时任务															
Instructions															
NO.	Open	HEX	Once	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Band Rate	Time	Data	Send	Notes
1	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	9600	0:00			
2	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	9600	0:00			
3	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	9600	0:00			
4	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	9600	0:00			
5	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	9600	0:00			

Scene												
NO.	Open	Once	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Time	Scene ID	Notes
1	☐	☐	☐	☐	☐	☐	☐	☐	☐	0:00	Scene1	
2	☐	☐	☐	☐	☐	☐	☐	☐	☐	0:00	Scene1	
3	☐	☐	☐	☐	☐	☐	☐	☐	☐	0:00	Scene1	
4	☐	☐	☐	☐	☐	☐	☐	☐	☐	0:00	Scene1	
5	☐	☐	☐	☐	☐	☐	☐	☐	☐	0:00	Scene1	

OK

Figure 1-49 Scheduled task

1. Timing instruction sending setting area: A total of 5 instructions can be set for timing sending. Click the box with the mouse to check whether to set timing instruction to open, HEX or not, send once or send from Monday to Sunday; Band Rate drop-down triangle button Select the baud rate to be sent. Time Indicates the sending time. Enter the instruction content to be sent in the Data input box; Click Send and send the command; Note You can comment any information in the Notes input box.
2. Timing call scenario setting area: A total of 5 timing call scenarios can be set. Click the box with the mouse to uncheck the set timing send instruction to open, send once or send from Monday to Sunday; Time Sets the sending time Scene ID drop-down triangle button to select the scene to be sent. Note You can comment any information in the Notes input box.
3. OK: Click OK for the above Settings to take effect.

Explanation:

- The scheduled task function can be performed only when the client is properly connected to the device.

1.7 IP Decoding Card Control

IP decoding card supports client software control or browser WEB control. The default IP address of the decoding card is 192.168.0.200, the account is admin, and the password is admin.

IP decoding card, control computer, switch/router, encoder and other devices must be in the same network segment, otherwise they cannot be connected.

1.7.1 IP decoding card connection

1.7.1.1 Client Control Connection

①Select any signal channel of the IP card in the device list, right-click and choose Decoder Card for connection.

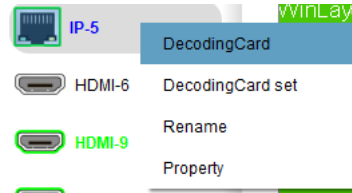


Figure 1-50 client connection

②If the IP address of the IP decoding card is changed, manually change the connection IP address, as shown in the following figure.

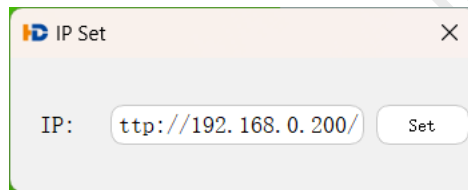


Figure 1-25 IP address modified

1.7.1.2 Brower control connection

When using a browser connection, enter the IP address of the decoder card in the browser IP address input field to connect the device, as shown in the following figure

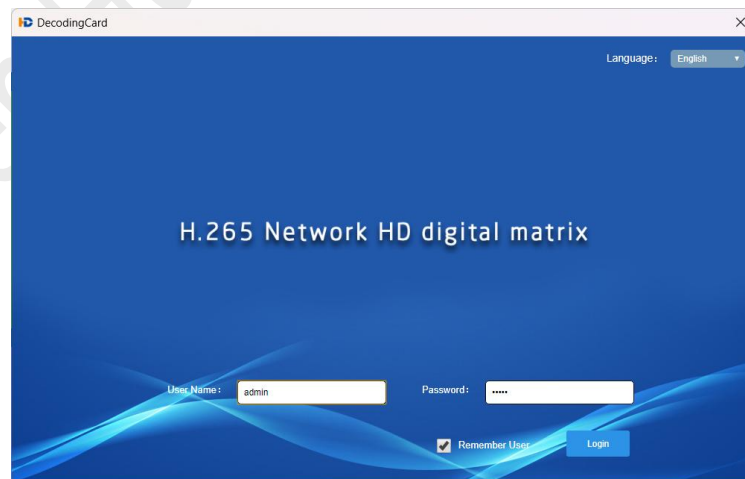


Figure 1-26 browser connection

1.7.2 Video control

The video control interface mainly includes input source list, decoding control area, plan polling management, operation log and so on. The video control interface is shown below:

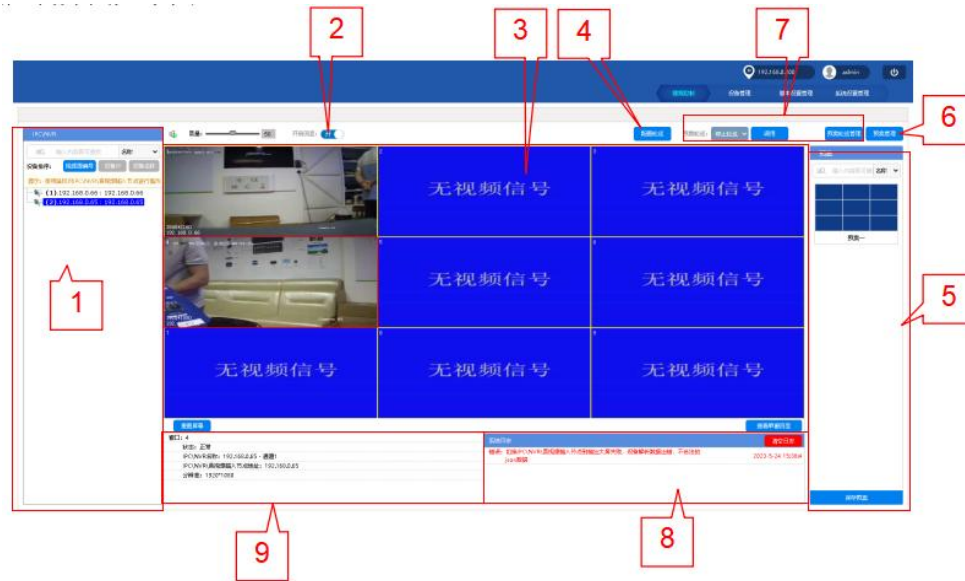


Figure 1-27 Video control page

1.7.2.1 Input node list

A. The added signal node is displayed in the video source list. Select the signal node and drag it to the right screen to set it as the output signal of the IP channel.

B. Sort signal nodes: You can select Video Source Number, Device IP address, and Device Name to sort the input list.

1.7.2.2 Screen Echo Switch

The control screen display function is displayed.

1.7.2.3 Decoding control area

Decode the control area, right-click the screen to operate the window menu function:



Figure 1-28 Decoding control area

- A.Split window: The window selected by the box is split into other split modes;
- B.Merge Windows: Box select multiple Windows to merge into one window;
- C.Wall-to-wall enlarge window: The selected window is enlarged to full screen;
- D.PTZ control: support to control IPC equipment with PTZ function;
- E.Clear the window: Close the currently selected window.
- F.Window rotation management: Set the current window rotation scheme. For details about how to set the window rotation scheme, see 7.7.2.4 Configuring Wheel Rotation (Single Window Rotation).
- G.Window rotation control: Control the current window rotation;
- H.Pre-plan patrol control: control the whole decoding module pre-plan patrol. For the setting method of decoding module patrol scheme, see 7.7.2.7 Pre-plan Patrol Management (all window patrol);
- I.Reset the screen: decode the screen segmentation mode Settings, support custom segmentation, single window screen, multi-window segmentation, etc.

1.7.2.4 Configure Patrol (Single Window Patrol)

Configuration and modification of window patrol program parameters.

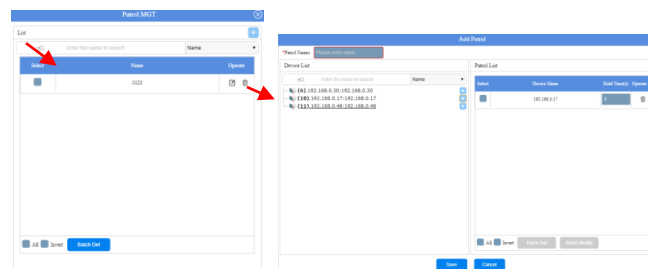


Figure 1-29 Configure Patrol

The configuration is as follows:

- A. Enter the patrol configuration interface;
- B. Click "+" in the "Patrol List" column to add a patrol plan;
- C. Enter the name of the patrol plan;
- D. Add the scene where the program needs to patrol;
- E. Set the polling interval for each scene, the minimum is 10S;
- F. Click "Modify" to save the setting parameters.

1.7.2.5 Plan saving and calling

Save plan: Save data including window data, decode picture segmentation mode.

Invoking a plan: Click a saved plan to invoke it.

1.7.2.6 Pre-plan management

Supports the management of saved plans.



Figure1-30 Pre-plan management

1.7.2.7 Pre-plan patrol management (all window patrol)

Pre-plan patrol management, which supports the setting of pre-plan patrol for the entire decoding card screen.

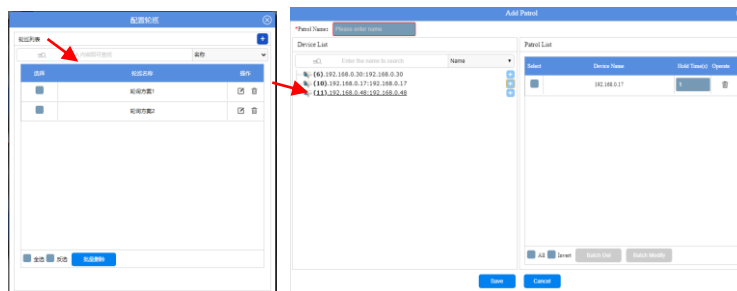


Figure1-31 Pre-plan patrol management

The configuration is as follows:

- A. Enter the plan patrol management interface;
- B. Click "+" in the "Patrol List" column to add a patrol plan;
- C. Enter the name of the patrol plan;
- D. Add the scene where the program needs to patrol;
- E. Set the polling interval for each scene, the minimum is 10S;
- F. Click "Modify" to save the setting parameters.

1.7.2.8 System log

The left side of the bottom bar is the operation prompt, indicating the operation status and result; On the right is a system log prompt, such as a warning when the decoding capability is exceeded.

1.7.2.1 System prompt

Can view window properties, abnormal operation tips.

1.7.3 Device management

Device management mainly includes device node search, add, delete, node group management, node list management, and import and export parameter information operations. Click "Device Management" to enter the following interface:

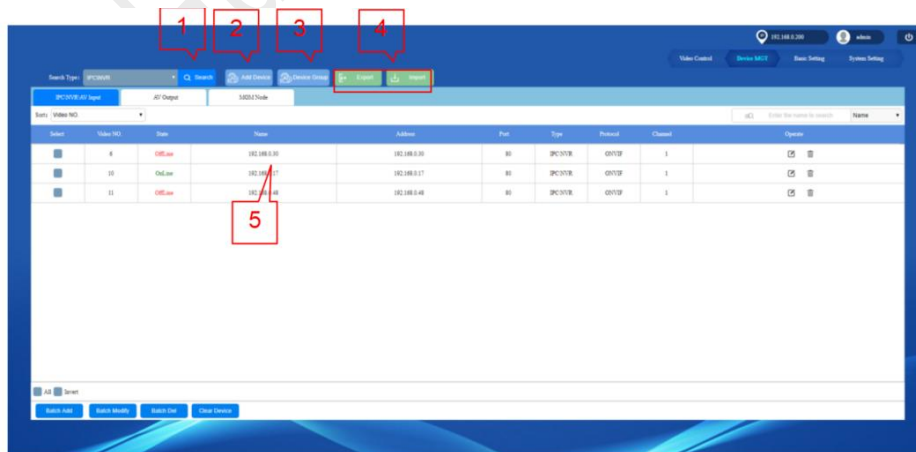


Figure 1-32 Device management

1.7.3.1 Search device

Click Search to enter the "Search Device" page, the system automatically searches for online devices on the same LAN. Enter the account and password of IPC webcam and click Add to add the device to the device list.

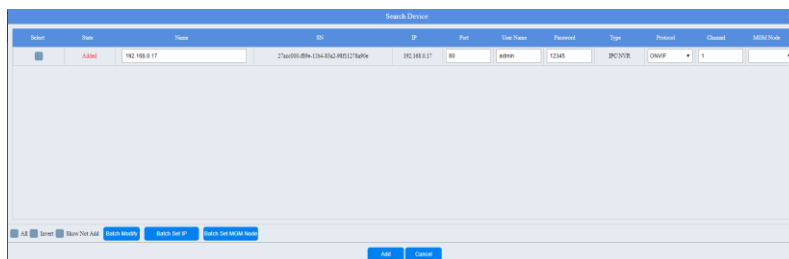


Figure 1-33 Search device

1.7.3.2 Add device

Add devices manually. You need to manually enter the device address, protocol type, account password, and other information. Red stars are mandatory, as shown in the following figure:

Figure1-34 Add device

1.7.3.3 Group management

It is used to manage the group of added device nodes and add the added device nodes to the corresponding group. As shown in the picture below:

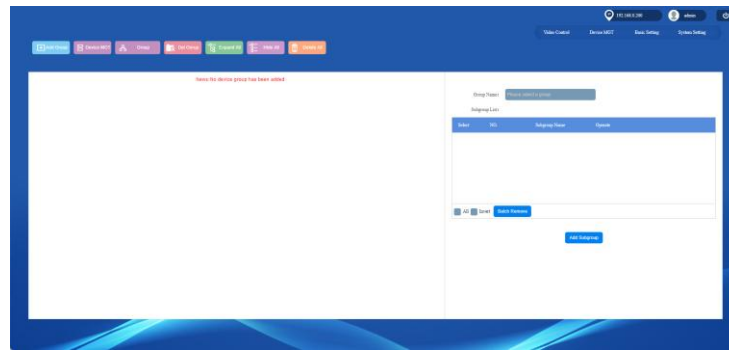


Figure 1-35 Group management

1.7.3.4 Import/export device

Export device: Click Export to back up the added device node information in xlsx format.

Import a device: Click Import to quickly add a device node using the backup file.

1.7.3.5 Device node list

Device node list Display all added device nodes. You can view whether the devices are online, edit node information, delete nodes, and manage device nodes in batches.

1.7.4 Basic setting management

Basic Settings management is to set the relevant contents of the current decoded screen, such as cache frame number, code stream, window display content, etc. As shown below

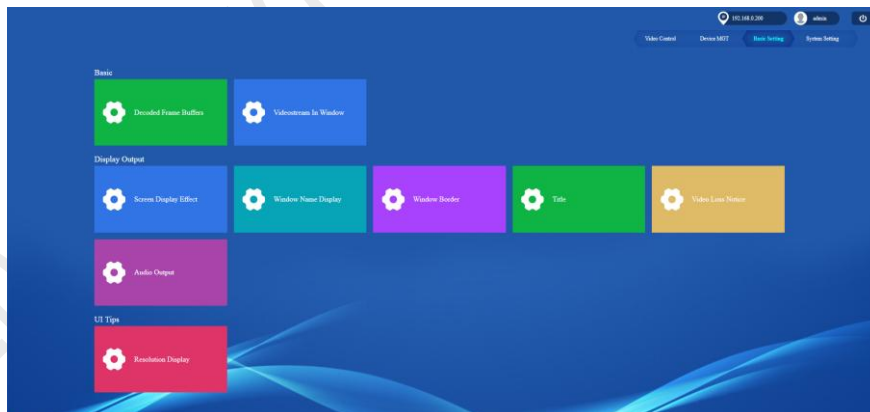


Figure 1-36 Basic setting management

1.7.4.1 Basic setting

1)Decoded frame cache number set

It is used to alleviate abnormal phenomena such as frame loss when the network fluctuates.

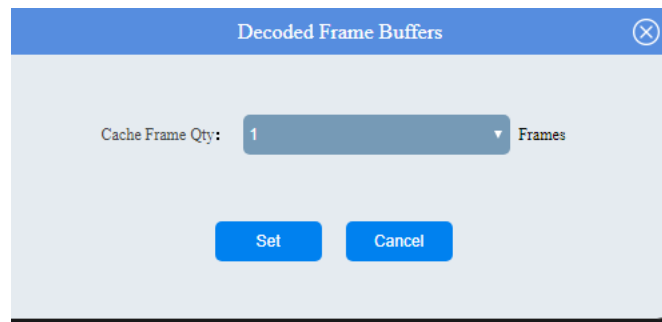


Figure 1-37 Decoding frame buffer number setting

2)Window stream Settings

Used to set the split mode of the current output to select a primary stream or a substream.

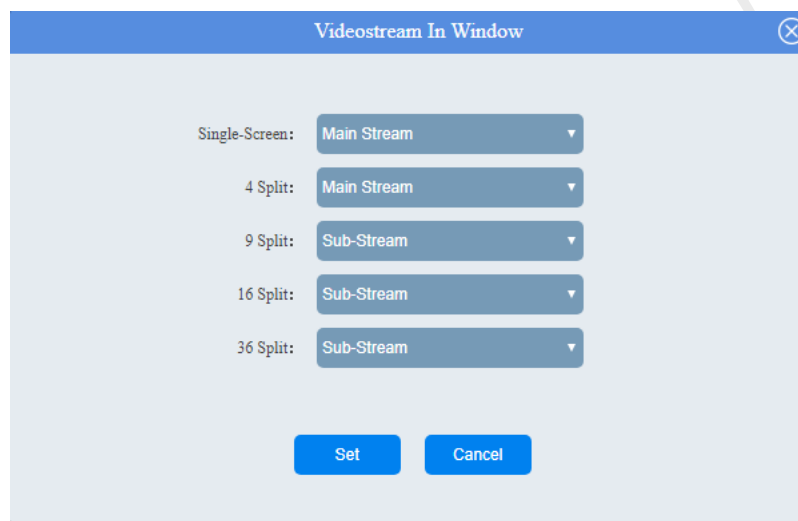


Figure 1-38 Window stream Settings

1.7.4.2 Display output setting

1)Output display setting

It is used to set the brightness value, contrast value, hue value and saturation value of the output screen.

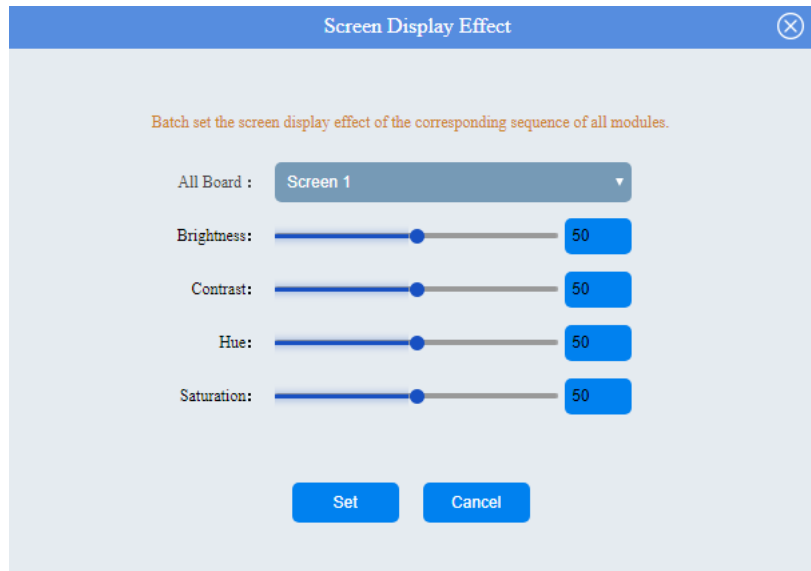


Figure 1-39 Output display settings

2)Window Name Display Settings

It is used to set the serial number, color, position, transparency, and switch of the large-screen display window.

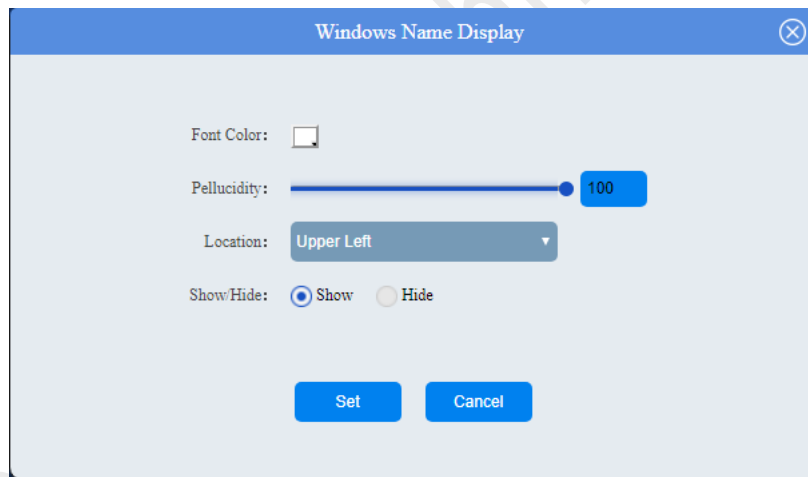


Figure 1-40 Window Name Display Settings

3)Windows border setting

Used to set the display screen, the line border between Windows and Windows, support color, transparency, line width Settings.

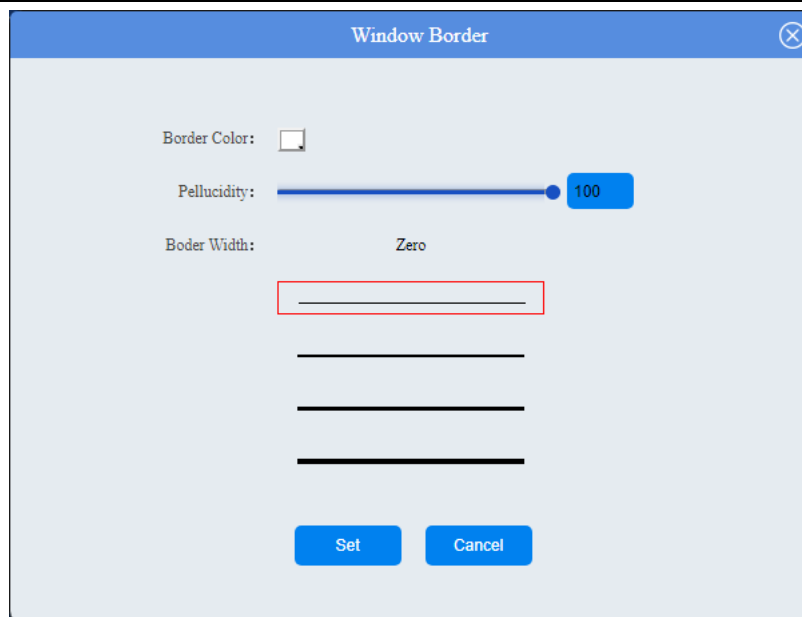


Figure 1-41 Windows border setting

4)TV wall head-up setting

Used to set the display screen subtitles, support subtitles content, font size, transparency, position, scrolling effect, status adjustment.



Figure 1-42 TV wall head up setting

5)Video Loss Notification Settings

Can be set display effect after lost decoding signal.

On: After the coding signal is lost, the large screen displays "No video signal".

Off: After the coded signal is lost, the last frame is displayed on the large screen.

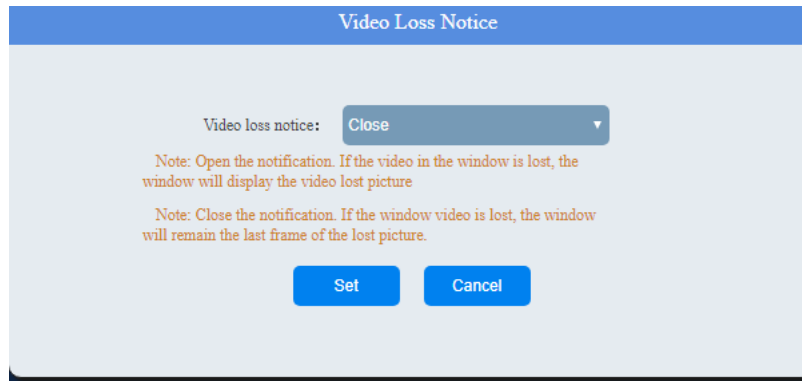


Figure 1-43 Video Loss Notification Settings

6)Audio output settings

The reservation function is not enabled.

1.7.4.3 Web display Settings

Resolution display setting: Used to display the current channel decoding resolution in the echo screen.



Figure 1-70 Resolution

1.7.5 System setting management

System Settings management is used to decoding card network settings, restart and reset, and export/import configuration data.

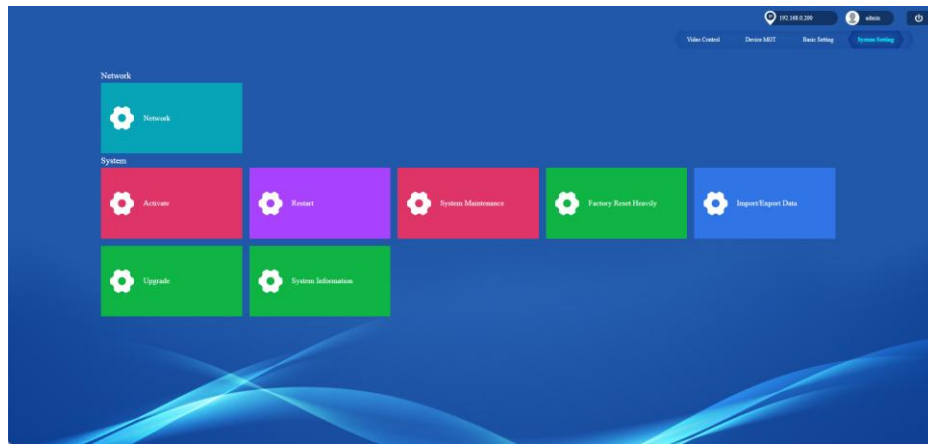


Figure1-71 System setting management

1.7.5.1 Network setting

Network setting: Can set decoder card IP address, subnet mask, gateway and other information; The default IP address of the decoder card is 192.168.0.200. If the decoder card is used in other network segments, you need to modify the network address of the decoder card on this page.

The device supports a maximum of 10 network segments.

Figure1-44 Network settings

1.7.5.2 System setting management

1)Activate the device

This function is not enabled.

2)Restart the device

Restart the decoding card system service.

3)System maintenance Settings

The decoding module can be restarted periodically.

4)Heavy reset to factory value

Forcibly clear the Settings of the decoder card, and restore the IP address and gateway to the default values.

5)Export/import configuration data

Export related data of decoder card; Or import the saved data to a new decoder card.

6)Equipment upgrade

Decoding card software program update. Upgrade documents can be obtained from our technical or sales personnel.

7)Version information

Displays the version number of the current version of the identified board and the latest software update time.

2.WEB Interactive interface control

Through the computer/tablet to open a browser to login to the web, you can realize the control operation of the product, such as opening Windows, saving scenes, upgrading, configuration, user Settings, mapping Settings, etc. Supports Web access from Windows, IOS, and Android systems.

Explanation:

- To support WEB access operation, contact technical personnel for version confirmation.

2.1 Login mode

Enter IP address :192.168.0.178 on the browser (Internet Explorer is not supported) to go to the splicing processor login page. The initial account is admin and the default password is admin. Select the default user name for the first login, as shown in the following figure:

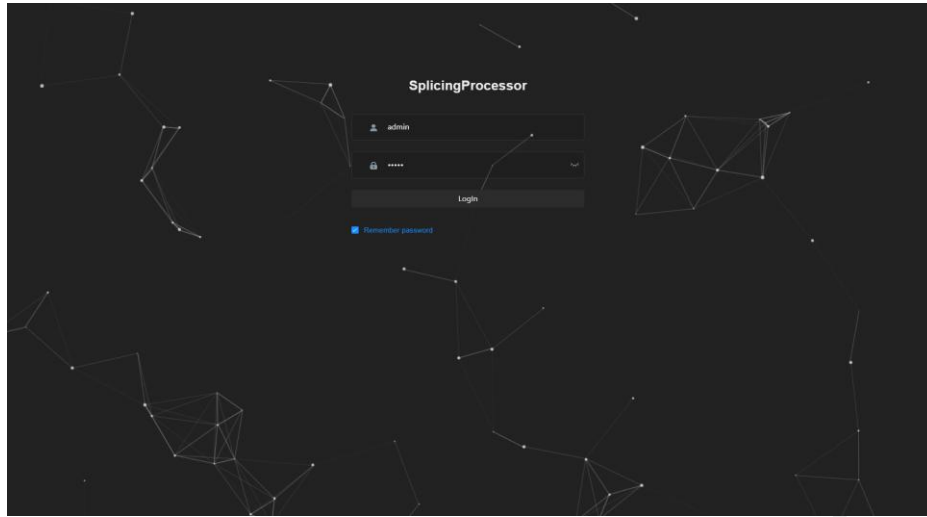


Figure 2-1 Login

2.2 WEB main interface introduction

Enter to the WEB side main interface of splicing processor, after logged in to the connection of the browser, The WEB window is supported, as shown in the following figure:

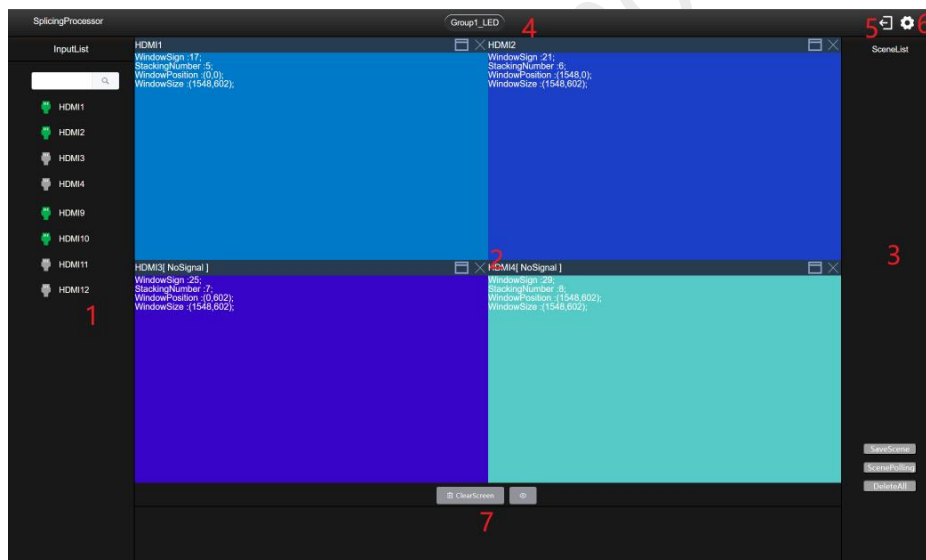


Figure 2-2 WEB main interface

①	The list of input, display all input channels
②	Window display area, set window opening and display window opening state, edit window
③	Scene list display area, save the scene, scene polling, delete all, etc
④	Grouping area
⑤	Quit the web login
⑥	Enter setting interface
⑦	Clear screen window

2.3 Introduction to the Settings Screen

Click the setting icon of the main interface to enter the setting interface, as shown below:



Figure 2-3 Setting interface

①	Close the left sidebar
②	Change the display language to Chinese/English
③	Back to the web main interface
④	Enter the device setting interface, see 8.3.1 for details
⑤	Enter upgrade management interface, see 8.3.2 for details
⑥	Enter account setting interface, see 8.3.3 for details
⑦	Enter the interface of custom resolution setting, see 8.3.4 for details,
⑧	Enter the splicing setting interface, see 8.3.5 for details

2.3.1 Device setting interface

Set the device input and output card configuration, as shown below:

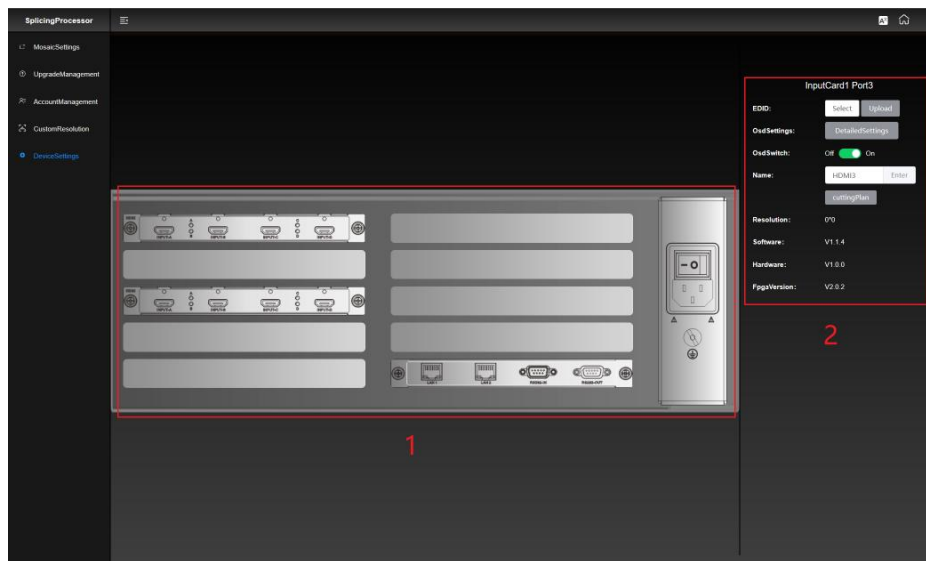


Figure2-4 Device setting interface

①	In the device display area, click the corresponding board or channel, and the configuration interface is displayed in the right bar
②	On the right side of the column setting and read parameters

2.3.1.1 Device input port configuration

Device input port configuration: Click any channel of the input board, and the input channel setting interface pops up in the right bar. You can set the input channel EDID, OSD setting, OSD switch setting, input channel name editing, display board input resolution, display software and hardware version.



Figure 2-5 Device input port configuration

2.3.1.2 Device output channel configuration

Device output configuration: Set the output channel name and display the hardware and software versions of the output channel.



Figure 2-6 Device output channel configuration

2.3.1.3 Control Card Configuration

Device control card configuration: set control card IP, reset operation, fan gear setting, brightness setting, display control card software version.



Figure 2-7 Device control card configuration

2.3.2 Upgrade management interface

The input/output board and control board can be upgraded online.

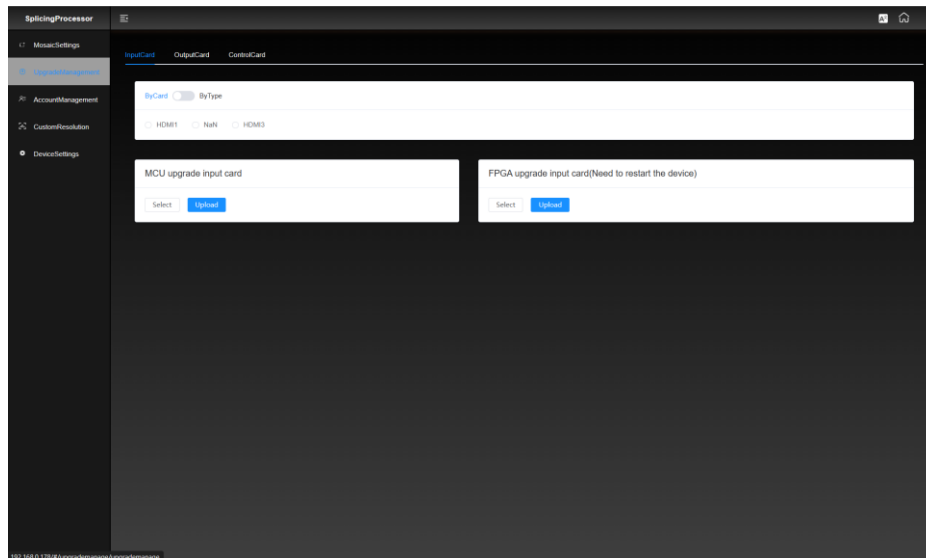


Figure 2-8 Input card upgrade management interface

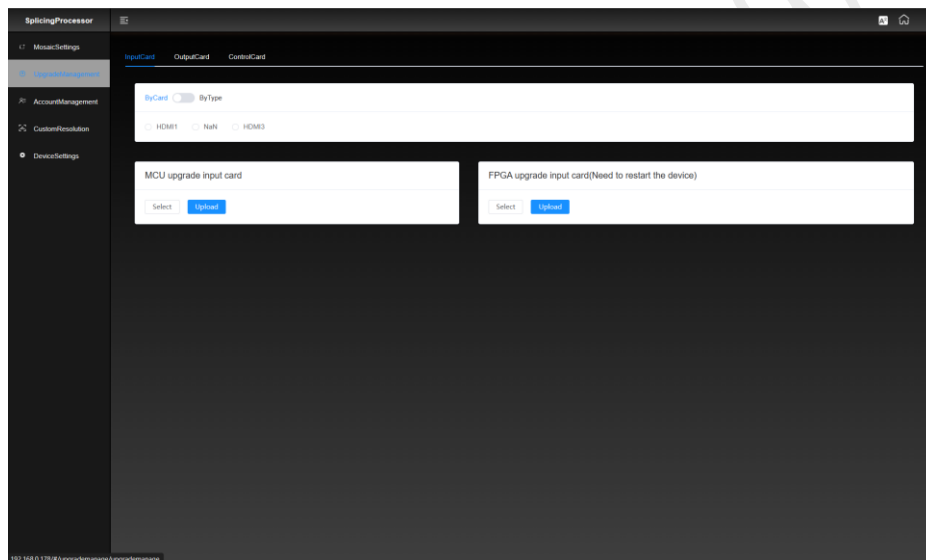


Figure 2-9 output card upgrade management interface

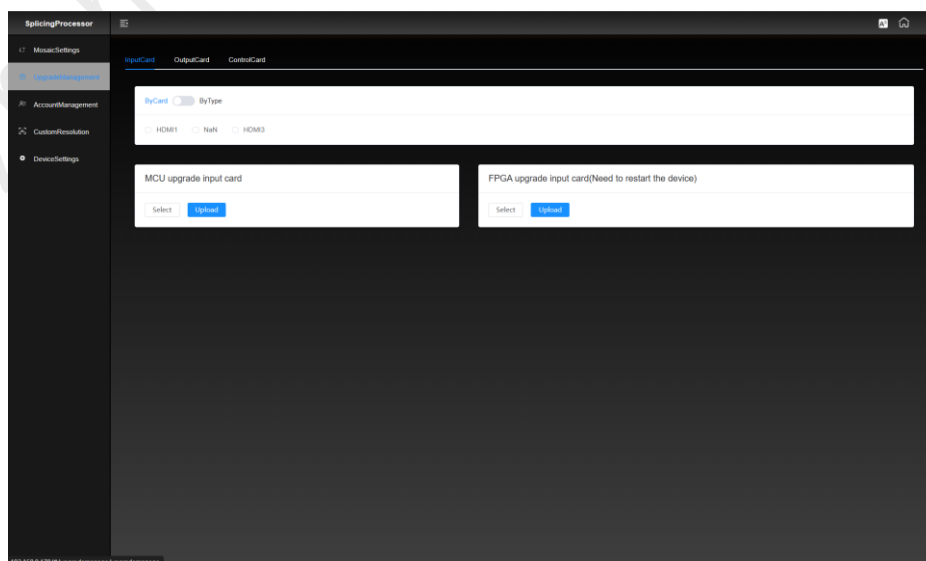


Figure 2-10 Control card upgrade management interface

2.3.3 Account setting interface

Account setting interface, can be used to edit users and add users.

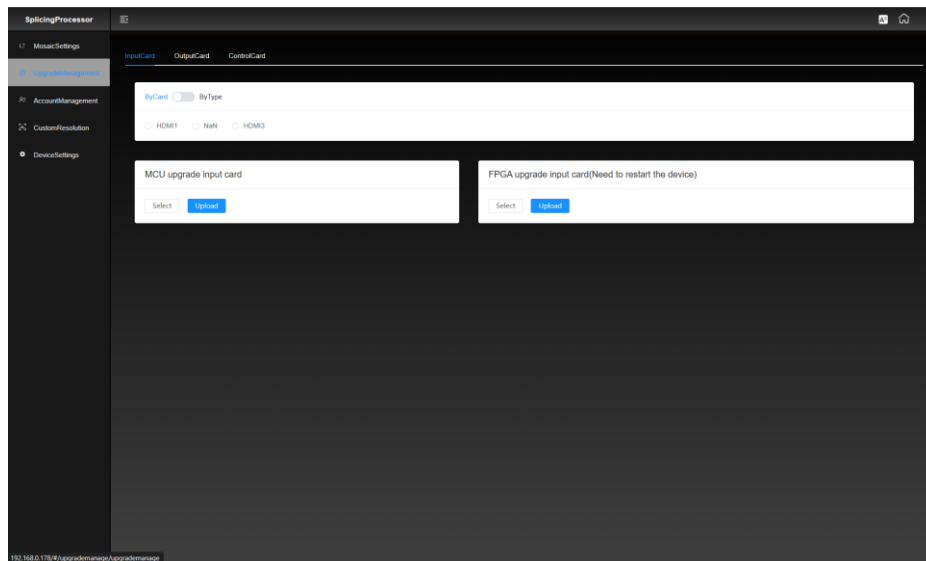


Figure 2-11 Account setting interface

2.3.4 Custom resolution interface

Custom resolution interface, can add, edit, and delete custom output resolution.

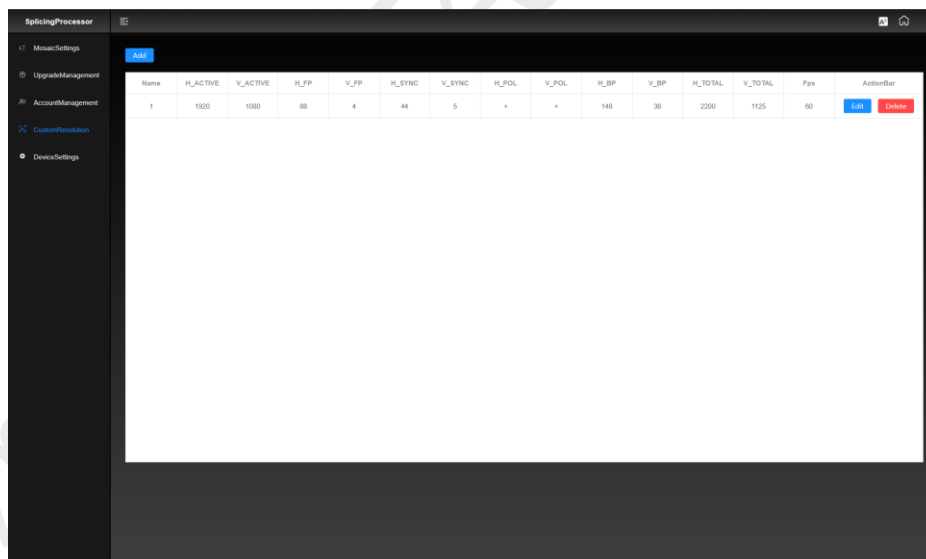


Figure 2-12 Custom resolution interface

2.3.5 Splicing setting interface

The splicing setting interface can set the group, group type, video wall row, output resolution, screen settings, and read the output list.

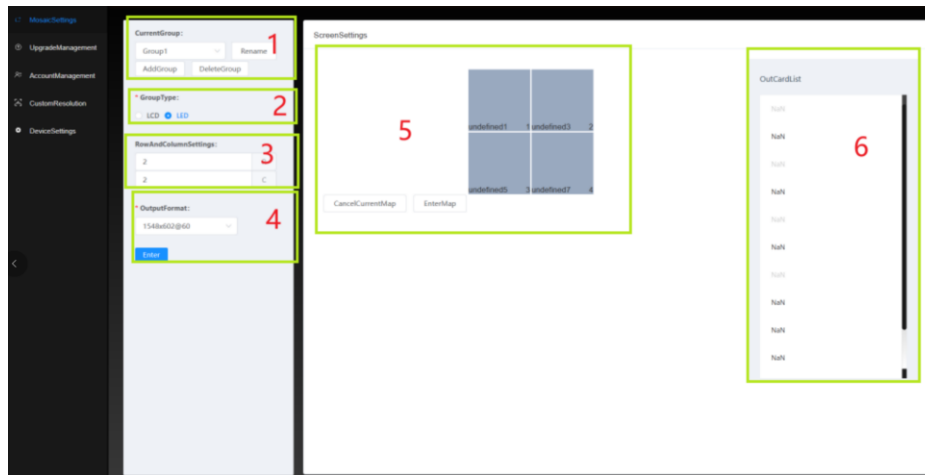


Figure 2-13 Splicing setting interface

①	Current group: Select current group, group edit rename, add group, delete group, and other Settings
②	LED/LCD Group Type: Set the group type to LED/LCD
③	Rows and columns: Set the number of Windows, rows and columns
④	Output format: Set the output resolution and press enter to confirm the setting
⑤	Screen Settings: Set the window position and output port mapping
⑥	Output card port list: Display all output ports of the machine, select any output port, use the mouse to drag to the window position set on the screen, set the mapping

3. Network Port output settings

3.1.1 Software Installation

Connect the network cable to the LAN port of the computer, as shown in the following figure.

3.1.2 Device search

Use a network cable to connect to the LAN port of the computer, as follows



Figure 3-1

Set the computer network segment to the same network segment as the control card (default is 0 network segment) Open the software will automatically search for the device;

When the device is searched, the device will be displayed on the right side, showing the relevant information of the device. The following figure

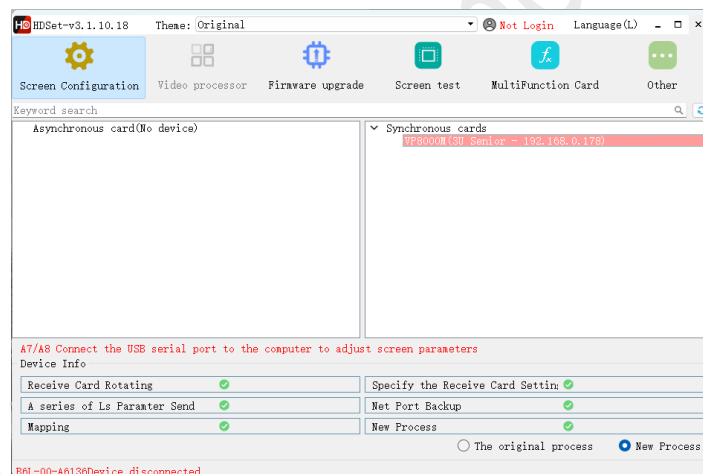


Figure 3-2

3.1.3 Hardware Parameters

Select the device and click the Display Configuration button to enter the parameter setting interface. The Display Configuration window is divided into Transmitter Card Parameter Setting, Receiver Card Parameter Setting, and Connection Setting Parameter Setting.

All the parameter adjustments of the sending cards can be carried out by switching the serial number of the current sending card, as shown in the following figure.

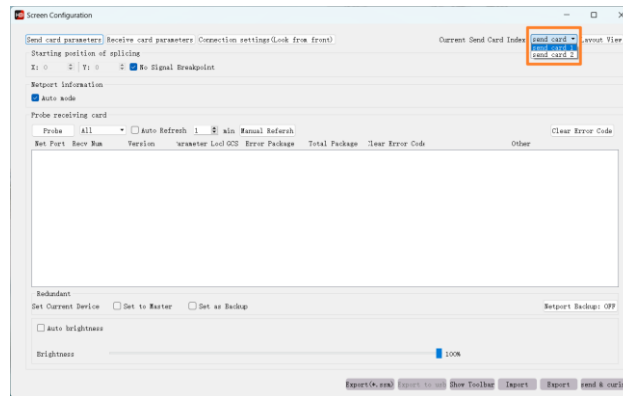


Figure 3-3

Among them, sending card parameters can be set for resolution setting, frame capture mode (60Hz/30Hz) selection, audio transmission, automatic brightness, brightness linkage, detection of receiving card and other functions. As shown below

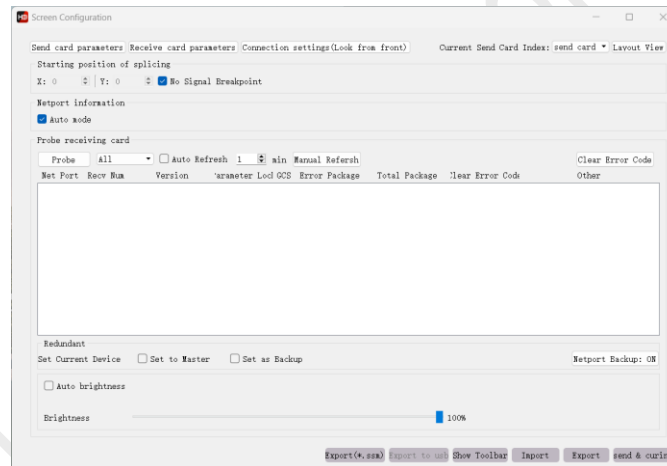


Figure 3-4

Note: Power off due to no signal and automatic brightness adjustment need to be used with multi-function card Y1.

3.1.3.1 Receiving Card Parameter Settings

Click the receiving card parameter to enter the receiving card parameter setting page. On this page, you can set the receiving card refresh rate, refresh rate acceleration, gray level, brightness level, DCLK frequency, priority mode, phase, line blanking, line feed time and other parameters. The setting of this interface directly affects the display effect of the display screen and the HUB setting.

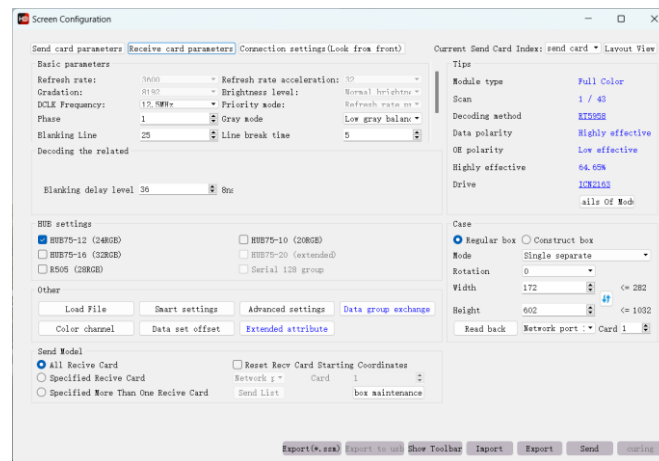


Figure 3-5

Click the load file to select the corresponding module manufacturer and module parameter configuration file.

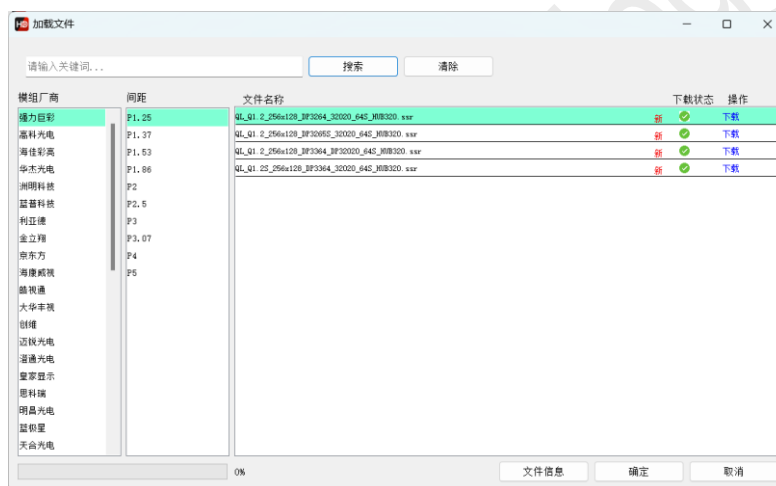


Figure 3-6

Smart setting function: For configuration file options that do not have a corresponding module in the loaded file, you can complete the module parameter setting through smart setting.

Advanced setting function: In this interface, you can adjust the gamma value, duty cycle, output mode, rotation, no signal display settings and other functions to further adjust the screen display effect.

"DCLK duty cycle": refers to the duty cycle of the shift clock, generally set to 50%.

"GCLK Duty Cycle": the duty cycle of the grayscale clock.

"Output Mode": When the display screen is wide, if the receiving card cannot carry the full width, you can set 2-channel output, 3-channel output, 4-channel output, up to 8-channel output.

"No signal display": When the receiving card cannot receive a signal, you can set a black screen or the last frame.

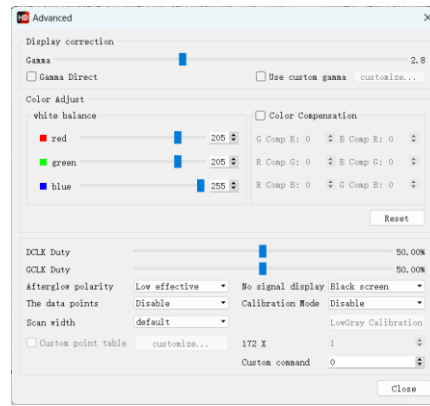


Figure 3-7

Color channel: You can change the red, green and blue colors of the display through debugging.

Data group exchange: This function can exchange the data of the output port of the receiving card, and exchange the output of the receiving card data to other output ports.

Extended attributes: For some special ICs, such as high-brush ICs, current gain adjustment and register configuration are required, which can be set using this function.

Data group offset: mainly used for special-shaped screens or cross-shaped screens, with asymmetrical multi-opening for data group offset.

Smart settings

The picture below shows the first step of intelligent setting. In this interface, you need to set the screen color type, single module width, module chip model, and decoding method (decoding options include: 138 decoding, no decoding, 595 decoding, RT5958, SM5266, SM5366, SM5368, DP32019, DP32020, ICN2012, ICN2013, ICN2018, TC7258, TC7558, TC7559B and other decoding).

More than 16 scans, greater than 32 scans, and greater than 64 scans, if the current module is between 17-32 scans, please check the greater than 16 scans, if the current module is between 33-64 scans, please check More than 32 scans, if the current module is more than 65 scans, please check greater than 64 scans.

Skip the step of data polarity and OE polarity, that is, the judgment of data polarity and OE polarity. It is checked by default. If the module to be debugged is single and double color, do not check this step.

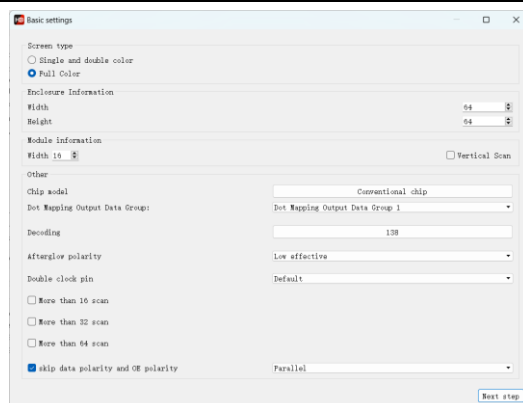


Figure 3-8

The figure below shows the second step of smart setting. In this step, please try to click the state A B C D to observe the color display of the module. According to the performance of the module, select the corresponding option in the display state. This step is to determine the color channel of the module.

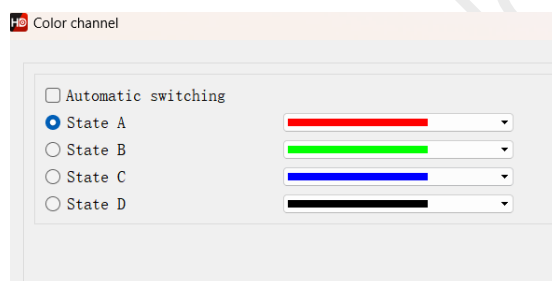


Figure 3-9

The figure below shows the third step of smart setting. Please observe the performance of the module and fill in the corresponding values. This step is to determine the row height controlled by a set of RGB data.

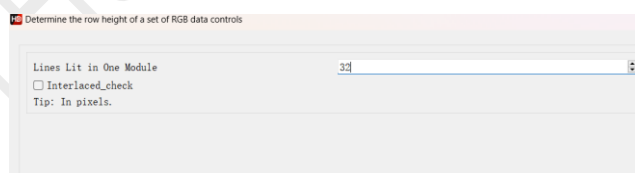


Figure 3-10

The figure below shows the fourth step of smart setting. Please observe the performance of the module and fill in the corresponding value. This step is to determine the scan type.

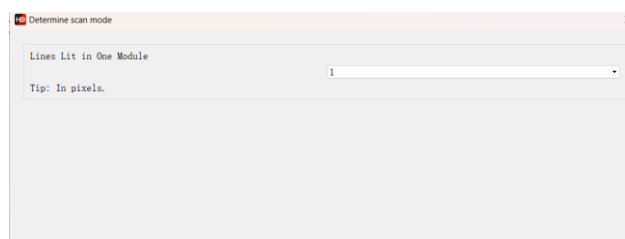


Figure 3-11

The figure below shows the fifth step of smart setting. Please observe the performance of the module, click the corresponding cell according to the position of the bright spot, until all the bright spots on the screen are clicked once, and then "scan settings" can be completed.

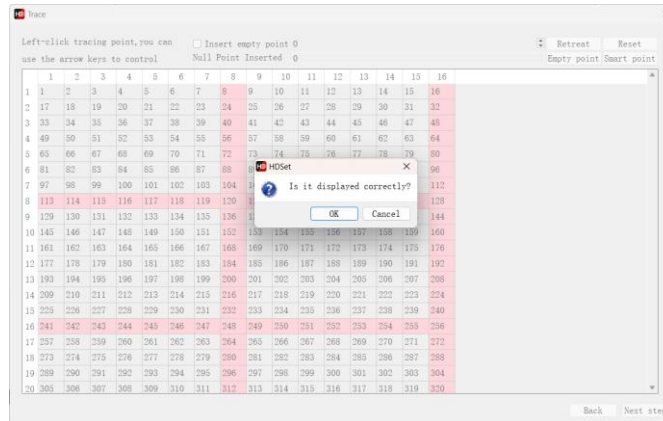


Figure 3-12

After finishing, click reset connection to complete the smart setting.

3.1.3.2 Receiving Card Parameter Description

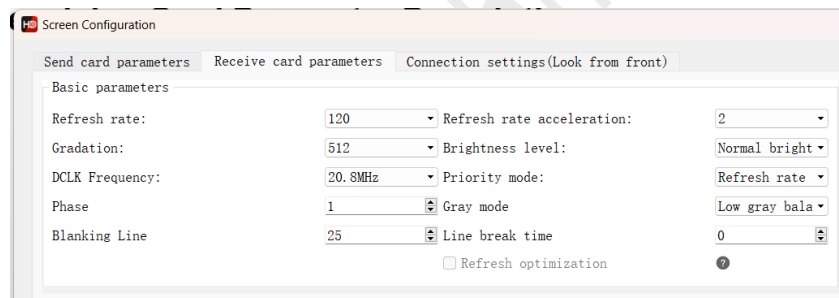


Figure 3-13

For different chips, the performance parameters of the receiving card parameter interface are different, mainly including the following:

"Refresh rate": The higher the theoretical refresh rate, the more stable the displayed picture, but the higher the refresh rate, the lower the brightness efficiency will be.

"Refresh rate acceleration": The higher the refresh rate, the higher the refresh rate will be.

"Gradation": The parameters of the screen display brightness and darkness. There are 9 gray levels available on the software, divided into 256, 512, 1024, 2048, 4096, 8192, 16384, 32768, 65536, the selected gray level The higher the level, the more delicate the screen display will be.

"Brightness level: divided into low brightness, normal brightness, and high brightness. The brightness level generally chooses normal brightness.

"DCLK frequency": The frequency of the shift clock, the larger this parameter is, the larger the width that can be loaded theoretically. If it is a PWM chip, it generally defaults to 12.5MHz or adjusts the DCLK frequency to make

the load points slightly larger than the actual cabinet points. If it is a general-purpose chip or a dual-latch chip, it is generally set to 17.86/15.625MHz. If there is a flash point, you need to lower the DCLK by one level.

"Priority mode": The default is refresh rate priority, which can achieve a higher refresh rate. Selecting brightness priority can achieve higher brightness, but will reduce the refresh rate.

"Phase": shift the phase of the clock, if there is misalignment or flash point in the picture, adjust this parameter to eliminate it.

"Grayscale Mode": This is mainly the gama effect, low gray balance: first-level graying;

Video Noise Reduction: Non-first-level graying, which can eliminate some small dark spots during video playback.

"Blanking Line ": used to adjust the afterglow of the scanning screen, if the afterglow is severe, this value can be increased.

"Line break time": adjust the afterglow of the scanning screen according to the line blanking time.

"GCLK frequency": the frequency of the gray scale clock.

3.1.3.3 HUB Setting Instructions

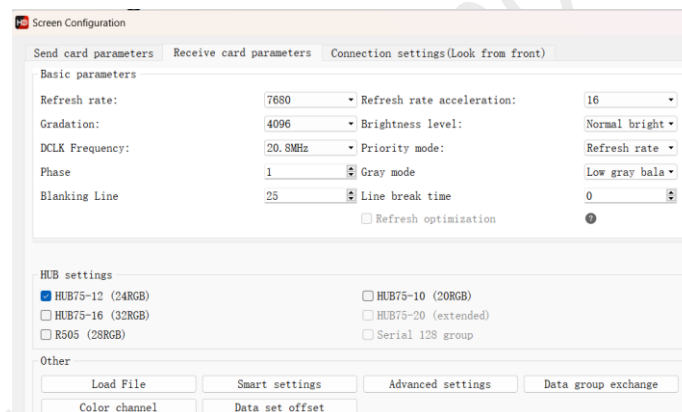


Figure 3-14

Check the HUB settings:

R501/R501S/R512/R512S/R512T/R612 Receiving card Select HUB75-12

R516/R516T/R320/R320T Receiving card Select HUB75-16

3.1.3.4 Connection Setting

To logically connect the receiving card, generally a box is carried by a receiving card, so it is also called a connecting box.

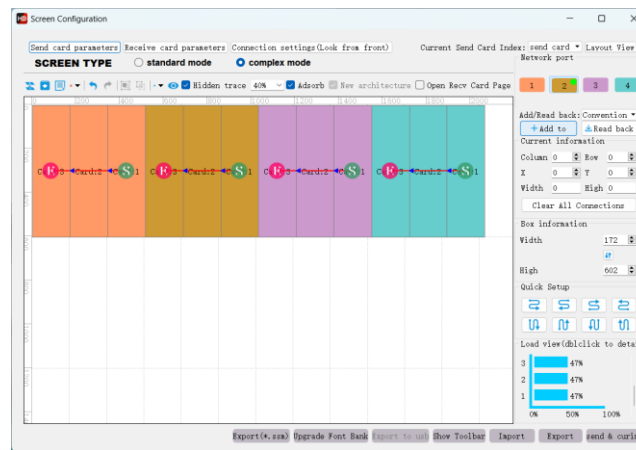


Figure 3-15

Click Connection Settings to enter the connection settings page.

This page can conveniently and quickly set the connection relationship of receiving cards, and the number of receiving cards in the horizontal and vertical directions can be set according to the actual situation, as shown in the figure below.

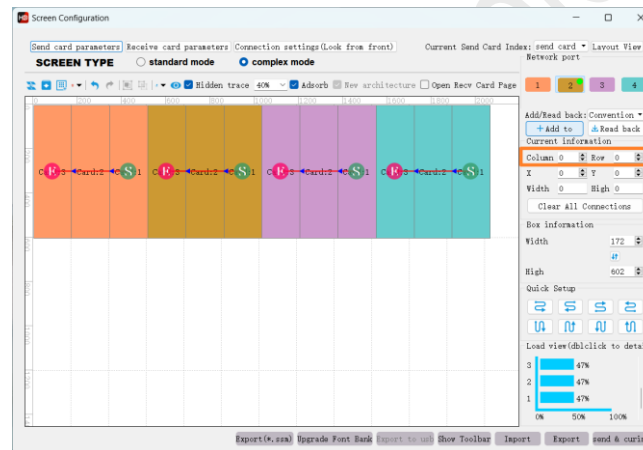


Figure 3-16

Set the width and height of the receiving card according to the actual width and height of the receiving card connected to the LED screen, and set the connection method of the receiving card. First select a network port, and then select a connection method of the receiving card. Drag the mouse directly to the left to select, and then follow the same operation steps to complete the connection settings of other network ports, and then click send to complete the configuration of the large screen.

3.2 Single-card Quad Signal Output Board parameters

3.2.1 DVI Signal Output Board

RJ45 Output Board	
Signal	8 RJ45 output signals
Connector	RJ45
Normal Power consumption	10.2W

Weight (g)	370g
Output resolution	Maximum support 1920x1200@60Hz
Operating temperature	0℃~+45℃
Relative humidity	10%~90%
Power Supply	Powered by the host

3.2.2 Audio output Board

Audio output Board	
Signal	4 independent audio output ports
Connector	3PIN Phoenix seat
Normal Power consumption	5.3W
Weight (g)	240g
General	
Signal format	PCM Format
Standard	Output 48KHz
Noise floor	- 88 dBu
SNR	- 86 dBr
Distortion	≤0.01% @1KHz, +4dBu
Frequency response	200Hz~20KHz(± 1dB)
Operating temperature	0℃~+45℃
Relative humidity	10%~90%
Power Supply	Powered by the host

3.2.3 Multi-function output card parameters

Port	1-channel 3pin Phoenix seat RS485 interface, 1-channel RS232 male socket, 1-channel IR IN receiving head, 1-channel IR OUT 3.5mm interface, 2-channel IO 3pin Phoenix seat interface, 1-channel RJ45 interface
Button	One Reset Button
Indicator	One power indicator light, green
Normal Power consumption	0.96W
Weight(g)	260g
Operating temperature	0℃~+45℃
Relative humidity	10%~90%

4.RS232 Control

4.1 Serial port control software settings

This machine supports serial port control. Use the RS232 cable to connect the serial communication port of the computer with the RS232 communication port of the machine. After opening the serial port software, the serial port control of the machine can be realized. This serial port control software takes SSCOM32 as an example to illustrate.

Double-click the software running icon (as shown below) to open the RS232 software.



Figure 6-1 running icon

Enter the main interface of the software, as shown in the following figure:

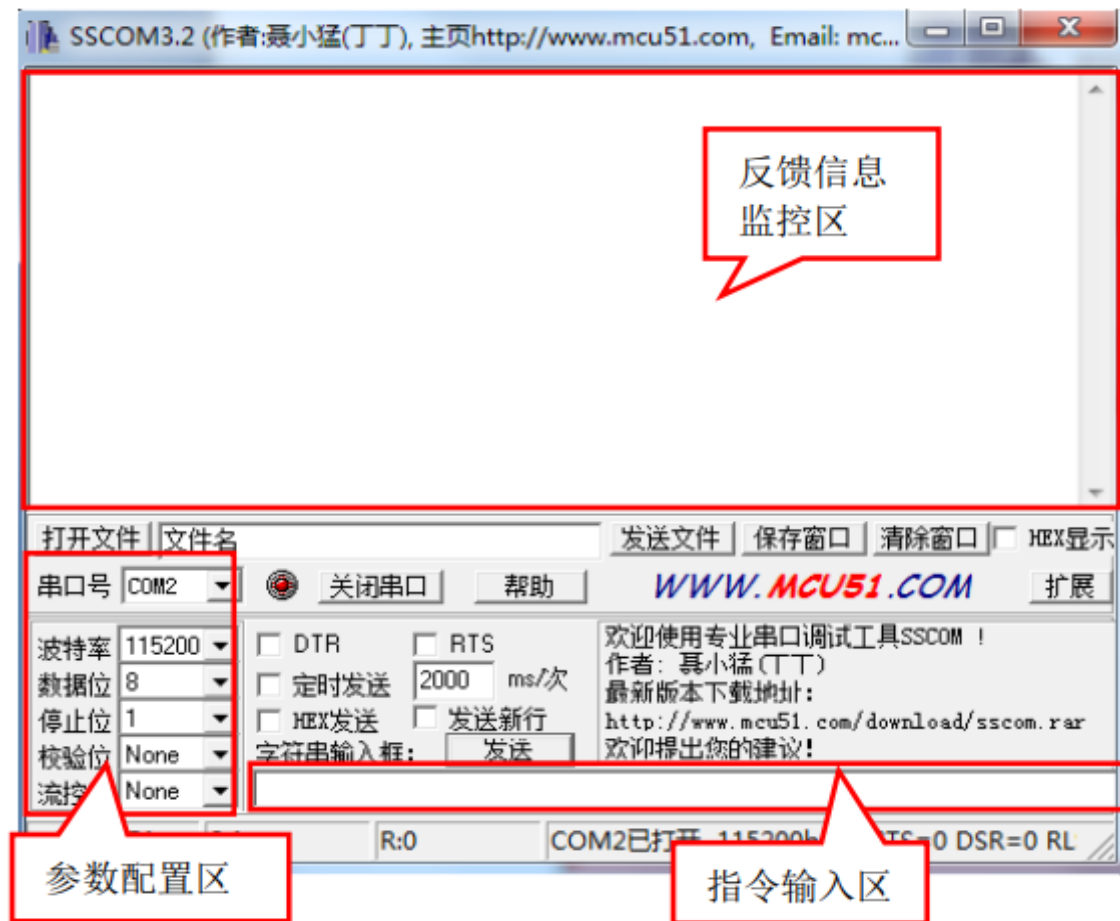


Figure 4-2 PC Serial Control Interface

In the parameter configuration area, correctly fill in the serial port number connected to the PC, the baud rate, data bit, stop bit, and check bit of the communication protocol, then you can enter commands in the command input area to control the splicing processor.

4.2 RS232 INSTRUCTION

4.2.1 Equipment query and operation instructions

Protocol: Baud Rate: 115200 Data bit: 8 Stop bits: 1 Check Bit: none

RS232 instruction	Function description	Instruction demo:
		Return Code:
(info,dev)\r\n	Query device information	(info,dev)\r\n

RS232 instruction	Function description	Instruction demo:
		Return Code:
		"type": "LCD-36*36", (Model) "icard num": 2, (Input card quantity) "iport num": 4, (Number of ports per board) "ocard num": 3, (Output card quantity) "oport num": 4, (Number of ports on each board) "layer num": 2, (number of layers) "fan speed": 1 (Fan speed)
(ip)\r\n	Query device IP	(ip)\r\n "ip": "192.168.0.174", "mac": "00-00-00-00-01-03", "mask": "255.255.255.0", "gate": "192.168.0.1", "port": 4001
(mip,ip,)\r\n	Modify the network connection IP address ip: IP address	(mip,192.168.0.173)\r\n "msg": "ok", "data": "(mip,192.168.0.173)\r\n"
(scene , save ,group,ld,scene_name)\r\n	save scene group: The sequence number of the group to save(1~4) ld: scene number(1~128) scene_name: Scene name, up to 20 characters	(scene,save,1,8,Scene88)\r\n "msg": "ok", "data": "(scene,save,1,8,Scene88)\r\n"
(scene , call ,ld)\r\n		(scene,call,1)\r\n

RS232 instruction	Function description	Instruction demo:
		Return Code:
		"msg": "ok", "data": "(scene,call,1)\r\n"
(args , rotate,group,period,s1,...sn)\r\n	Set the scene polling interval group: The group sequence number of the scene to be polled(1~4) period: Polling time (5 ~ 120 seconds) s1,...sn: Scene number (multiple such as: 1, 3, 4, etc.)	(args,rotate,1,7,9,10)\r\n
		"msg": "ok", "data": "(args,rotate,1,7,9,10)\r\n"
(scene , rotate,group, en)\r\n	Switch scene polling group: The grouping sequence number of the scene to poll (1~4) en: Switch (1 is on, 0 is off)	(scene,rotate,1,1)\r\n
		"msg": "ok", "data": "(scene,rotate,1,1)\r\n "
(wnd , ichg,a,b,c)\r\n	Switch the input signal source of the specified window a to input b a: Window ID b: Input channel c: Window cropping scheme, the data saved by the host computer settings 0: No crop window 1: Cropping Scheme One Windows 2: Cropping Scheme Dual Windows 3: Cropping Scheme Triple Windows 4: Cropping Scheme Quad Windows	(wnd,ichg,3,1,0)\r\n
		"msg": "ok", "data": "(wnd,ichg,3,1,0)\r\n"

RS232 instruction	Function description	Instruction demo:
		Return Code:
(out,capdisp,group,sta)\r\n	Subtitles used to switch different groups out, capdisp: subtitles group: group number sta: 0 off 1 on	"msg":"ok", "data":"(out,capdisp,1,1)\r\n"
(CLEAR)\r\n	Restore Factory	"msg":"ok", "data":"(CLEAR)\r\n"

4.2.2 Audio instructions

RS232 instruction	Function Description	Instruction example:
		Return code:
(in,audio,choose,ch,value)\r\n	Input audio embedded, external embedded mode selection in,audio,choose: input audio mode setting ch: input channel value: 1 means embedded, 0 means embedded	(in,audio,choose,1,0)\r\n
(out,audio,mode,value)\r\n	Output audio splicing mode, independent mode selection out, audio, mode: output mode setting value: 1 means stitching mode, 0 means independent mode	(out,audio,mode,1)\r\n
(out,audio,analog,ch,value)\r\n	Single output channel audio switch selection out, audio, analog: output channel switch ch: output channel value: 0 means on, 1 means off	(out,audio,analog,1,1)\r\n
(out,audio,volume,ch,value)\r\n	Output channel volume adjustment out, audio, volume: output volume selection ch: output channel value: volume value, $0 < \text{value} < 60$	(out,audio,volume,1,50) \r\n
(out,audio,grpbing,ch,group)\r\n	Select splicing group for audio output channel in splicing mode out,audio,grpbing: Select the output channel group ch: output channel group:Splice grouping, $1 \leq \text{group} \leq 4$	(out,audio,grpbing,1,2)\r\n

(audio,in,out)\r\n	Single input audio Switches single output audio audio: Audio switching in: incoming channel out: output channel	(audio,1,2) \r\n
(audio,in,a)\r\n	Single input switchable to all channel outputs audio: audio switching in: input channel a: all output channels	(audio,1,a)

(out,audio,mute,1)\r\n	Turn off all output sound	(out,audio,mute,1)
(out,audio,mute,0)\r\n	Turn on all output sounds	(out,audio,mute,0)
(audsce,save,num)\r\n	Audio scene save Num: scene number 1~5	
(audsce,call,num)	Audio Scene Call Num: scene number 1~5	
(audsce,del,num)	Scene deletion Num: scene number 1~5	